

Capresso #560.04

Capresso Infinity Conical Burr Coffee Grinder User Manual

Model: #560.04

INTRODUCTION

This manual provides instructions for the safe and efficient operation, maintenance, and troubleshooting of your Capresso Infinity Conical Burr Coffee Grinder, Model #560.04. This grinder is designed to deliver a precise and consistent grind for various brewing methods, enhancing the flavor and aroma of your coffee.



Image: The Capresso Infinity Conical Burr Coffee Grinder shown alongside a box of biodegradable coffee grinder cleaning tablets. The grinder is silver-colored with a clear bean hopper filled with coffee beans and a clear ground coffee container below, showing ground coffee.

IMPORTANT SAFETY PRECAUTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the grinder.
- Do not touch hot surfaces.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been

damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PARTS OVERVIEW

Familiarize yourself with the components of your Capresso Infinity Conical Burr Grinder.

1. Bean Hopper Lid
2. Bean Hopper (holds up to 8.8 oz / 250g of beans)
3. Upper Conical Burr (removable for cleaning)
4. Grind Selector Dial (16 settings)
5. Grinder Housing
6. Timer Dial (for grind duration)
7. Ground Coffee Container (holds up to 4 oz / 120g of ground coffee)
8. Cleaning Brush



Image: A close-up view of the Capresso Infinity Conical Burr Coffee Grinder. The image highlights the bean hopper, grind selector dial, and the ground coffee container.

SETUP AND FIRST USE

- Unpacking:** Carefully remove all packaging materials. Ensure all parts listed in the "Parts Overview" section are present.
- Cleaning:** Before first use, clean the bean hopper, bean hopper lid, ground coffee container, and the upper conical burr with warm water and a mild detergent. Rinse thoroughly and dry completely. Do not immerse the main grinder

housing in water.

3. Assembly:

- Place the ground coffee container into its designated slot in the grinder housing.
- Ensure the upper conical burr is properly seated and locked into place.
- Place the bean hopper onto the grinder housing, aligning the arrows on the hopper with the desired grind setting on the housing. Turn the hopper clockwise until it locks into position.
- Place the bean hopper lid on top of the bean hopper.

4. **Placement:** Place the grinder on a stable, flat, and dry surface. Ensure the power cord is not dangling or in contact with hot surfaces.

5. **Power Connection:** Plug the grinder into a standard 120V AC electrical outlet.

OPERATING INSTRUCTIONS

1. Selecting the Grind Setting

The Capresso Infinity offers 16 grind settings, ranging from extra fine to coarse. To select a grind setting, rotate the bean hopper. The arrow on the bean hopper should align with the desired setting on the grinder housing.

- **Extra Fine (1-4):** Ideal for Turkish coffee and espresso.
- **Fine (5-8):** Suitable for espresso machines and Moka pots.
- **Medium (9-12):** Recommended for drip coffee makers and pour-over.
- **Coarse (13-16):** Best for French press and percolators.

Note: Adjusting the grind setting while the grinder is running or empty is recommended to prevent burr damage.

2. Adding Coffee Beans

Open the bean hopper lid and pour whole roasted coffee beans into the hopper. Do not overfill; the hopper has a maximum capacity of 8.8 ounces (250g). Ensure the lid is securely replaced before operating.

3. Setting the Grinding Time

The grinder features a timer dial to control the grinding duration. Rotate the timer dial to select the desired grinding time, typically from 5 to 60 seconds. The grinder will automatically stop once the set time has elapsed. For continuous grinding, turn the dial past the "60" mark to the "ON" position, and turn it back to "OFF" manually when done.

- Start with shorter times and adjust as needed to achieve the desired amount of ground coffee.
- The ground coffee container holds up to 4 ounces (120g) of ground coffee.

4. Starting and Stopping the Grinder

Once the grind setting and timer are set, the grinder will start automatically. To stop the grinder before the timer runs out, turn the timer dial to the "OFF" position.

5. Removing Ground Coffee

After grinding, carefully remove the ground coffee container from the grinder housing. Due to static electricity, some fine coffee particles may cling to the container. Gently tap the container to dislodge them before pouring.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grinder.

Daily Cleaning

1. **Unplug:** Always unplug the grinder from the power outlet before cleaning.
2. **Empty:** Remove the bean hopper and ground coffee container. Empty any remaining beans or ground coffee.
3. **Brush:** Use the provided cleaning brush to brush off any loose coffee grounds from the upper and lower burrs, and inside the grinding chamber.
4. **Wash:** Wash the bean hopper, bean hopper lid, and ground coffee container with warm, soapy water. Rinse thoroughly and dry completely. These parts are not dishwasher safe.
5. **Wipe:** Wipe the exterior of the grinder housing with a damp cloth. Do not use abrasive cleaners or immerse the housing in water.

Deep Cleaning (Monthly or as needed)

For a more thorough cleaning, especially if you notice a decrease in grinding performance or a change in coffee flavor:

1. **Remove Upper Burr:** With the grinder unplugged, remove the bean hopper. Then, grasp the upper conical burr and twist it counter-clockwise to unlock and lift it out.
2. **Clean Burrs:** Use the cleaning brush to thoroughly clean both the upper and lower burrs. Ensure no coffee oils or particles remain. You can also use a vacuum cleaner with a narrow attachment to remove stubborn grounds from the grinding chamber.
3. **Cleaning Tablets:** For an even deeper clean, especially for removing coffee oils, use biodegradable coffee grinder cleaning tablets (included in the bundle).
 - Ensure the grinder is empty of coffee beans.
 - Place one tablet into the empty bean hopper.
 - Set the grinder to a medium grind setting.
 - Run the grinder until the tablet is fully ground.
 - Discard the ground tablet residue.
 - Run a small amount of coffee beans through the grinder and discard them to remove any remaining tablet residue.



Image: A box of biodegradable coffee grinder cleaning tablets. These tablets are designed to clean coffee oils and residue from grinders.

4. **Reassemble:** Reinsert the upper conical burr, twisting clockwise to lock it into place. Reattach the bean hopper and lid.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start.	Not plugged in. Bean hopper not correctly locked. Timer not set.	Ensure the power cord is securely plugged into a working outlet. Rotate the bean hopper clockwise until it clicks into place. Set the timer dial to a desired grinding duration.
Grinder stops unexpectedly.	Overheating. Motor overload.	Unplug the grinder and allow it to cool down for at least 30 minutes. Ensure you are not grinding for excessively long periods without a break.
Inconsistent grind or no grinding.	Burrs are clogged with coffee oils/grounds. Upper burr not properly seated. Foreign object in burrs.	Perform a deep cleaning as described in the Maintenance section. Remove and re-seat the upper conical burr, ensuring it locks into place. Unplug and carefully inspect the burrs for any obstructions.
Excessive static cling in ground coffee container.	Common issue with dry coffee grounds.	Gently tap the container before opening to dislodge grounds. Wipe the inside of the container with a slightly damp cloth (ensure it's dry before grinding).

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	#560.04
Power	100 Watts
Voltage	120 Volts
Grind Settings	16 (from ultrafine Turkish to coarse)
Burr Type	Commercial-grade Conical Burrs
Bean Hopper Capacity	8.8 ounces (250g)
Ground Coffee Container Capacity	4 ounces (120g)
Material	ABS Plastic, Stainless Finish
Dimensions	18.1 x 14.1 x 10.6 inches
Item Weight	3 pounds

WARRANTY AND CUSTOMER SUPPORT

For specific warranty information regarding your Capresso Infinity Conical Burr Coffee Grinder, please refer to the warranty card included with your product or visit the official Capresso website.

Should you require assistance, have questions about operation, maintenance, or need to report a problem, please contact Capresso Customer Support.

- **Manufacturer:** Capresso
- **Website:** www.capresso.com (This is a placeholder link, as no specific support link was provided in the input. Users should refer to the official product documentation.)
- **Contact Information:** Please refer to the product packaging or the official Capresso website for the most current customer service contact details.

© 2023 Capresso. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents

 <p>Capresso Grind Select Coffee Burr Grinder Model 597.04 110V / 120V - / 60Hz • Operating Instructions • Warranty Read all instructions before operating the appliance</p>	<p>Capresso Grind Select Coffee Burr Grinder - Model 597.04 - Operating Instructions & Warranty Comprehensive guide to the Capresso Grind Select Coffee Burr Grinder (Model 597.04), covering important safeguards, operating instructions, cleaning, troubleshooting, and warranty information.</p>
	<p>Capresso Infinity Burr Grinder Parts and Accessories Order Form Order form for replacement parts and Capresso 'Grand Aroma' whole bean coffee for the Capresso Infinity Burr Grinder (Models #565 and #560). Includes pricing, shipping information, and payment details.</p>
 <p>Capresso Stainless Steel Burr Grinder Models #580 Models #585 • Instructions • Warranty</p>	<p>Capresso Stainless Steel Burr Grinder (Models 580 & 585) - User Manual & Warranty User manual and warranty information for Capresso 580 and 585 Stainless Steel Burr Grinders, covering setup, operation, cleaning, and safety guidelines.</p>



[Capresso Infinity Burr Grinder Limited Warranty](#)

Details the one-year limited warranty for the Capresso Infinity Burr Grinder (Models #560 and #565) in the United States, covering defects in materials and workmanship, and outlining exclusions and limitations.