

[Manuals.plus](#) /

› [Kikkerland](#) /

› Kikkerland UL03-A Universal Travel Adapter Instruction Manual

Kikkerland UL03-A

Kikkerland UL03-A Universal Travel Adapter Instruction Manual

Model: UL03-A | Brand: Kikkerland

1. INTRODUCTION AND OVERVIEW

The Kikkerland UL03-A Universal Travel Adapter is designed to provide worldwide compatibility for your electronic devices across more than 150 countries. Its ultra-compact design allows it to fold flatter than many other adapters, making it ideal for travel. This adapter facilitates the connection of your devices to various international power outlets but **does not convert voltage**. Always ensure your device is compatible with the local voltage.

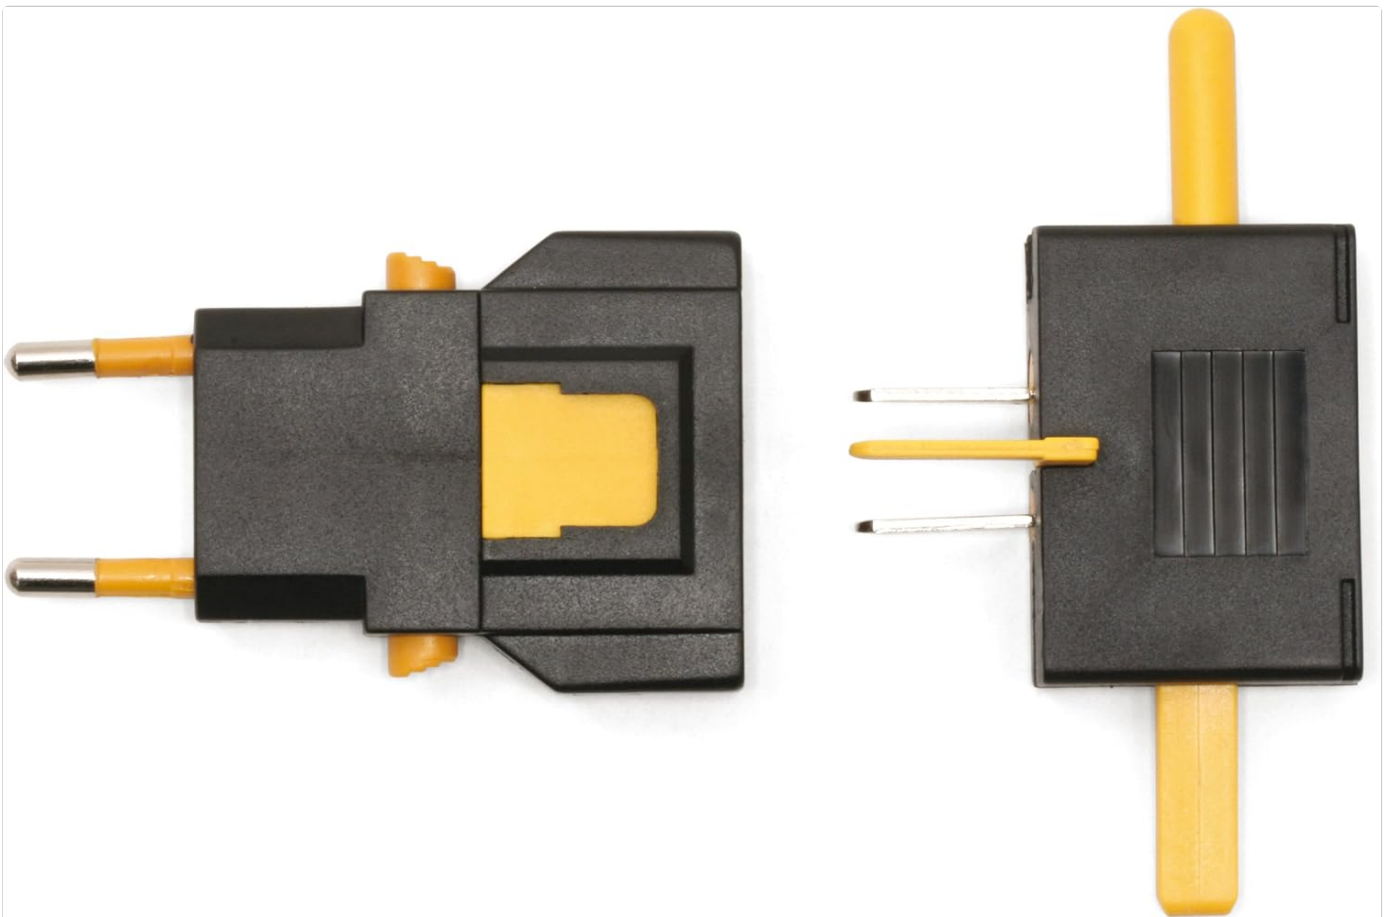


Figure 1: Kikkerland UL03-A Universal Travel Adapter in its retail packaging.

2. PRODUCT FEATURES

- **Worldwide Compatibility:** Adapts to outlets in over 150 countries.
- **Ultra Compact Design:** Folds flat for easy packing and portability.
- **Durable Construction:** Made from ABS plastic for longevity.
- **Modular Design:** Consists of two main components that can be combined or used separately to form different plug types.

3. SETUP AND ASSEMBLY

The Kikkerland UL03-A adapter is designed for intuitive assembly. It consists of two main blocks that can be configured to match various international plug types. The yellow sliders and buttons facilitate the extension and retraction of the pins.



Figure 2: The two main components of the Kikkerland UL03-A Universal Travel Adapter.

To assemble or reconfigure the adapter:

1. Identify the required plug type for your destination.
2. Separate the two adapter blocks if they are connected.
3. Slide the yellow buttons or levers on each block to extend the appropriate pins for the desired region (e.g., North America, Europe, UK, Australia).
4. For certain configurations, connect the two blocks together by aligning the pins and slots, ensuring a secure fit.

Your browser does not support the video tag.

Video 1: Demonstration of assembling and configuring the Kikkerland UL03-A Universal Travel Adapter for various plug types.

4. OPERATING INSTRUCTIONS

Once the adapter is configured for the correct region, plug your device's power cord into the adapter, and then plug the adapter into the wall outlet. Ensure all connections are firm.

- **Voltage Compatibility:** This adapter **does not convert voltage**. Before use, verify that your electronic device is dual voltage compatible (e.g., 100-240V) or that the local voltage matches your device's requirements. Using a device not compatible with the local voltage can cause damage to the device or the adapter.
- **Plug Orientation:** Some outlets may be designed such that the adapter, when plugged in, might partially obstruct an adjacent outlet. Plan your usage accordingly.

Your browser does not support the video tag.

Video 2: Overview of the Kikkerland Universal Travel Adapter's features and its application in various countries.

Your browser does not support the video tag.

Video 3: A detailed review demonstrating the functionality and compact nature of the Kikkerland Universal Travel Adapter.

5. IMPORTANT SAFETY INFORMATION

- This product is an adapter only; it does not convert electrical voltage.
- Do not use with appliances requiring voltage conversion.
- Ensure your device's voltage requirements match the local power supply.
- Do not overload the adapter. Check the maximum current rating of the adapter and your device.
- Keep out of reach of children.
- Do not expose to moisture or extreme temperatures.
- If the adapter appears damaged, discontinue use immediately.

6. MAINTENANCE AND CARE

- Clean the adapter with a dry, soft cloth. Do not use liquid cleaners.
- Store the adapter in a cool, dry place when not in use.
- Avoid dropping or subjecting the adapter to strong impacts.
- Ensure pins are fully retracted when storing to prevent damage.

7. TROUBLESHOOTING

- **Device not charging:**
 - Check if the adapter is correctly configured for the local outlet type.
 - Verify that your device is compatible with the local voltage.
 - Ensure the wall outlet is functional.
 - Check for any loose connections between the device, adapter, and wall outlet.
- **Adapter feels loose in the outlet:**
 - Some older or worn outlets may not provide a tight fit. Exercise caution to prevent accidental disconnection.
 - Avoid hanging heavy power bricks directly from the adapter, as this can exacerbate looseness.

8. SPECIFICATIONS

Brand	Kikkerland
Model Number	UL03-A

Color	Black
Item Weight	1.6 ounces
Material	ABS plastic
Unit Count	1.0 Count
Portable	Yes
UPC	612615040243

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Kikkerland website or contact their customer service directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question