

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VIZIO](#) /

› [VIZIO VSB210WS Universal HD Sound Bar with Wireless Subwoofer Instruction Manual](#)

VIZIO VSB210WS

VIZIO VSB210WS Universal HD Sound Bar with Wireless Subwoofer Instruction Manual

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your VIZIO VSB210WS Universal HD Sound Bar with Wireless Subwoofer. Designed to enhance your home theater experience, this system delivers immersive audio with its compact sound bar and wireless subwoofer. Please read these instructions carefully before using your device.

WHAT'S IN THE BOX

Verify that all components are present before proceeding with setup:

- VIZIO VSB210WS Sound Bar
- Wireless Subwoofer
- Power Cables (for Sound Bar and Subwoofer)
- Remote Control
- Audio Cables (e.g., RCA, Optical)

SETUP

1. Placement

- **Sound Bar:** Place the sound bar centrally below your television. Ensure it is on a stable, flat surface or securely mounted to a wall.
- **Wireless Subwoofer:** The subwoofer can be placed anywhere in your room within 60 feet of the sound bar, provided there is a clear line of sight. This wireless capability allows for flexible placement to optimize bass response.

2. Connections

Connect the sound bar to your audio source (e.g., TV, DVD player) using one of the available input options.

- Power:** Connect the power cable to the 24V DC input on the sound bar and to an AC outlet. Connect the subwoofer's power cable to an AC outlet.
- Digital Optical (S/PDIF):** For the best audio quality, connect an optical cable from your TV's optical audio output to the S/PDIF input on the sound bar.
- Analog (RCA):** Connect RCA audio cables from your TV's audio output (red and white ports) to the INPUT 1 or INPUT 2 ports on the sound bar.



Image: Rear panel of the VSB210WS Sound Bar, displaying the 24V DC power input, S/PDIF optical input, and two sets of RCA analog inputs (INPUT 1 and INPUT 2).



Image: Full rear view of the VSB210WS Sound Bar, showing the central input panel and the integrated wall mounting brackets on both ends.

3. Subwoofer Pairing

The wireless subwoofer should automatically pair with the sound bar upon powering on both units. If the subwoofer does not produce sound, ensure both units are powered on and within range. Refer to the troubleshooting section if pairing issues persist.

OPERATING INSTRUCTIONS

1. Power On/Off

- Press the **Power** button on the sound bar or remote control to turn the unit on or off.

2. Input Selection

- Press the **Input** button on the sound bar or remote control to cycle through available audio inputs (S/PDIF, INPUT 1, INPUT 2).

3. Volume Control

- Use the **Vol +** and **Vol -** buttons on the sound bar or remote control to adjust the master volume.
- Press the **Mute** button to temporarily silence the audio. Press again to unmute.

4. Sound Modes

- SRS TruSurround HD:** Activates virtual surround sound for an immersive audio experience. Press

the **TSHD** button on the sound bar or remote.

- **SRS TruVolume:** Helps maintain consistent volume levels, preventing sudden changes during commercials. Press the **TVOL** button on the sound bar or remote.



Image: Close-up of the top control panel of the VSB210WS Sound Bar, showing buttons for Power, Input, Volume Up/Down, Mute, SRS TruVolume (TVOL), and SRS TruSurround HD (TSHD).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the sound bar and subwoofer. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Ensure that the sound bar and subwoofer have adequate ventilation. Do not block any ventilation openings.
- **Storage:** If storing the unit for an extended period, disconnect it from power and store it in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
No power	Ensure power cables are securely connected to both the sound bar/subwoofer and a working AC outlet.
No sound	<ul style="list-style-type: none"> Check that the correct input source is selected on the sound bar. Increase the volume on both the sound bar and your audio source (TV, DVD player). Ensure audio cables are securely connected. Verify that the sound bar is not muted.
Subwoofer not pairing / No bass	<ul style="list-style-type: none"> Ensure the subwoofer is powered on. Verify the subwoofer is within 60 feet of the sound bar and has a clear line of sight. Power cycle both the sound bar and subwoofer (turn off, unplug, wait 30 seconds, plug back in, turn on).
Remote control not working	<ul style="list-style-type: none"> Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the sound bar's sensor. Point the remote directly at the sound bar.

SPECIFICATIONS

Feature	Detail
Model Name	VSB210WS
Speaker Type	Sound Bar, Wireless Subwoofer
Surround Sound Channel Configuration	2.1
Sound Bar Drivers	Four 3" mid/bass transducers, Two 3/4" aluminum dome neodymium tweeters
Subwoofer Driver	6.5" long-throw (high excursion) driver
Subwoofer Frequency Response	35Hz - 80Hz
Wireless Subwoofer Range	Up to 60 ft (clear line of sight)
Audio Technologies	SRS TruSurround HD, SRS TruVolume, Dolby Digital, DTS
Connectivity	Digital Optical (S/PDIF), Analog RCA (2 inputs)

Feature	Detail
Power Source	AC
Speaker Maximum Output Power	400 Watts
Item Weight	38.2 pounds (total package)
Package Dimensions	43 x 20.5 x 14.9 inches

WARRANTY AND SUPPORT

Warranty information for the VIZIO VSB210WS is typically included with the product at the time of purchase. Please refer to the documentation provided in your product packaging for specific warranty terms and conditions.

For technical support, product registration, or to access additional resources, please visit the official VIZIO support website or contact their customer service department. Contact details can usually be found on the VIZIO website or in your product's included documentation.