Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Lenco /
- > Lenco CR-3300 FM Clock Radio User Manual

Lenco CR-3300

Lenco CR-3300 FM Clock Radio User Manual

Model: CR-3300

Brand: Lenco

Introduction

This manual provides detailed instructions for the operation and maintenance of your Lenco CR-3300 FM Clock Radio. Please read this manual thoroughly before using the device to ensure proper function and to maximize your user experience. The CR-3300 features a 24-hour clock, an analogue FM tuner, an LED display, and alarm functions including a buzzer and sleep timer.

Safety Instructions

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure the power cord is not damaged or pinched.
- Do not open the casing. Refer all servicing to qualified personnel.
- Place the unit on a stable, flat surface.
- · Avoid placing the unit near heat sources or in direct sunlight.
- · Use only the specified power adapter.
- Dispose of batteries responsibly.

Package Contents

Please check that all items are present:

- Lenco CR-3300 FM Clock Radio Unit
- AC Power Adapter
- User Manual (this document)

Product Overview



Image: Front and top view of the Lenco CR-3300 FM Clock Radio. The device is black with silver accents on the sides. The front features a prominent red LED display showing the time '20:45' and an 'AL' indicator. To the right of the display is an analog FM frequency scale ranging from 88 to 108 MHz. The top panel includes several control buttons: ALARM, TIME, FAST+, SLOW+, SNOOZE, and SLEEP, along with a speaker grille. A 'Lenco' brand logo is visible below the SNOOZE button.

Front Panel

- LED Display: Shows current time and alarm settings.
- FM Frequency Scale: Indicates the tuned FM radio frequency.
- 'AL' Indicator: Illuminates when the alarm is active.

Top Panel

- ALARM Button: Used to set and activate the alarm.
- TIME Button: Used to set the current time.
- FAST+ Button: Increases time/frequency values quickly.
- SLOW+ Button: Increases time/frequency values slowly.
- SNOOZE Button: Temporarily silences the alarm.
- SLEEP Button: Activates the sleep timer function.

Side Panels (Left/Right)

- Volume Control: Adjusts the audio output level.
- Tuning Control: Adjusts the FM radio frequency.
- Power Switch: Turns the unit on or off.
- Battery Compartment: For 9V battery backup.

Setup

1. Power Connection

- 1. Connect the AC power adapter to the DC input jack on the back of the unit.
- 2. Plug the adapter into a standard wall outlet. The LED display should illuminate.

2. Battery Backup Installation

The unit requires one 9V battery (not included) for time and alarm settings backup during power outages.

- 1. Open the battery compartment cover located on the bottom of the unit.
- 2. Insert one 9V battery, observing the correct polarity (+ and -).
- 3. Close the battery compartment cover securely.

3. Antenna Setup

For optimal FM radio reception, extend the built-in wire antenna fully and position it for the best signal.

Operating Instructions

1. Setting the Current Time

- 1. Press and hold the **TIME** button until the display flashes.
- 2. Use the **FAST+** or **SLOW+** buttons to adjust the hours.
- 3. Press the **TIME** button again to switch to minute adjustment.
- 4. Use the FAST+ or SLOW+ buttons to adjust the minutes.
- 5. Press the **TIME** button once more to confirm and exit time setting mode.

2. FM Radio Operation

- 1. Turn on the unit using the Power Switch.
- 2. Rotate the **Tuning Control** knob (typically on the side) to select your desired FM radio station. The frequency will be indicated on the FM scale.
- 3. Adjust the volume using the Volume Control knob (typically on the side).

3. Setting the Alarm

- 1. Press and hold the **ALARM** button until the alarm time display flashes.
- 2. Use the FAST+ or SLOW+ buttons to adjust the alarm hours.
- 3. Press the **ALARM** button again to switch to alarm minute adjustment.
- 4. Use the FAST+ or SLOW+ buttons to adjust the alarm minutes.
- 5. Press the **ALARM** button once more to confirm the alarm time.
- After setting the time, you may be prompted to select the alarm source (Buzzer or Radio). Use
 FAST+ or SLOW+ to toggle and ALARM to confirm. The 'AL' indicator on the display will light up
 when the alarm is active.

4. Snooze Function

When the alarm sounds, press the **SNOOZE** button. The alarm will temporarily stop and sound again after approximately 9 minutes.

5. Sleep Timer Function

The sleep timer allows the radio to play for a set duration before automatically turning off.

1. While the radio is playing, press the **SLEEP** button repeatedly to cycle through available sleep timer durations (e.g., 90, 60, 30, 15 minutes, OFF).

2. The display will briefly show the selected sleep time. The radio will automatically turn off after the selected duration.

Maintenance

- Cleaning: Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Battery: Replace the 9V backup battery annually or if the unit experiences frequent power outages.
- **Storage:** If storing the unit for an extended period, disconnect it from power and remove the backup battery.

Troubleshooting

Problem	Possible Cause	Solution
No power / Display off	Power adapter not connected; Power outlet faulty; Power switch off.	Ensure adapter is securely plugged in; Try a different outlet; Turn power switch on.
Poor FM reception / Static	Antenna not extended; Weak signal; Interference.	Extend and reposition the wire antenna; Try tuning to a stronger station; Move unit away from other electronic devices.
Alarm does not sound	Alarm not set; Alarm volume too low; 'AL' indicator not lit.	Verify alarm time is set correctly; Increase volume; Ensure 'AL' indicator is illuminated.
Time/Alarm settings lost after power outage	No 9V backup battery; Backup battery drained.	Install a fresh 9V battery in the battery compartment.

Specifications

Feature	Detail
Brand	Lenco
Model	CR-3300
Display Type	LED
Tuner Technology	FM
Power Source	AC Power, 9V Battery Backup
Audio Wattage	2.5 Watts
Product Dimensions (LxWxH)	12 x 17.7 x 5.8 cm
Item Weight	522 g
Special Features	Alarm (Snooze, Sleep, Wake), 24-hour clock, LED display

Warranty and Support

This Lenco CR-3300 FM Clock Radio comes with a 6-month warranty from the date of purchase. Please

retain your proof of purchase for warranty claims.

For technical support or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official Lenco website.

Related Documents - CR-3300

Lenco



Lenco CR-620 DAB+/FM Clock Radio with Color Display User Manual

Comprehensive user manual for the Lenco CR-620 clock radio, detailing setup, operation, features like DAB+/FM radio, alarm, and snooze functions, and important safety precautions.



Lenco CR-18 PLL FM Alarm Clock Radio User Manual

User manual for the Lenco CR-18 PLL FM Alarm Clock Radio. Learn how to set the time, alarms, operate the FM radio, use the sleep timer, and adjust brightness. Features a 1.8-inch LED display and a white finish.



Lenco CR-07 Blue User Manual and Safety Precautions

This document provides essential safety precautions and installation guidelines for the Lenco CR-07 Blue alarm clock radio. It covers important information regarding safe operation, environmental considerations, and proper setup to ensure optimal performance and user safety.



Lenco CR-18 Clock Radio User Manual and Safety Guide

Comprehensive user manual for the Lenco CR-18 clock radio, providing detailed instructions on setup, operation, safety precautions, technical specifications, warranty, and disposal.



Lenco CR-615 DAB+/FM Clock Radio with Time Projection User Manual

Comprehensive user manual for the Lenco CR-615 clock radio, detailing its features, operation, setup, and safety precautions. Includes instructions for DAB/FM radio, alarm settings, and time projection.



Lenco CR-18 Alarm Clock Radio User Manual

Comprehensive guide for the Lenco CR-18 alarm clock radio, detailing features, operation, safety precautions, and specifications. Includes multilingual instructions.