

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Hansgrohe](#) /

› [Hansgrohe Talis 80 Single-Lever Basin Mixer with Pop-Up Waste EcoSmart, Chrome \(Model 32040000\) - Instruction Manual](#)

Hansgrohe 32040000

Hansgrohe Talis 80 Single-Lever Basin Mixer (Model 32040000)

Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe installation, operation, and maintenance of your Hansgrohe Talis 80 single-lever basin mixer with pop-up waste. This product is designed for use in bathrooms and features EcoSmart technology for reduced water consumption.

Please read these instructions carefully before beginning installation or use, and retain them for future reference. Adherence to these instructions is crucial for proper function and to ensure the longevity of the product.



Image: Hansgrohe Talis 80 single-lever basin mixer installed on a white ceramic sink, showcasing its design.

2. SAFETY INFORMATION

- Installation should be performed by a qualified professional to ensure compliance with local plumbing and building codes.
- Ensure the main water supply is turned off before commencing any installation or maintenance work.
- Protect the product from frost. Do not install in areas where temperatures may drop below freezing.
- Use only genuine Hansgrohe spare parts for repairs or replacements.
- Avoid using abrasive cleaners or scouring pads, as these can damage the chrome finish.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1x Hansgrohe Talis 80 Single-Lever Basin Mixer
- Flexible connection hoses
- Pop-up waste set (pull rod drain)
- Mounting hardware
- Installation manual

4. SETUP AND INSTALLATION

Professional installation is recommended for this product. Refer to the provided technical drawing for precise dimensions and connection details.

Installation Steps:

1. **Prepare the Installation Area:** Ensure the mounting surface is clean, flat, and stable. Turn off the main water supply.
2. **Mount the Faucet:** Insert the mixer into the basin hole. Secure it from underneath using the provided mounting hardware. Ensure the mixer is aligned correctly.
3. **Connect Water Hoses:** Connect the flexible hot and cold water supply hoses to the corresponding water lines. Ensure all connections are tight to prevent leaks.
4. **Install Pop-Up Waste:** Assemble and install the pop-up waste mechanism according to its specific instructions, connecting the pull rod to the faucet.
5. **Test for Leaks:** Slowly turn on the main water supply and check all connections for leaks. Operate the faucet to ensure proper water flow and temperature control.

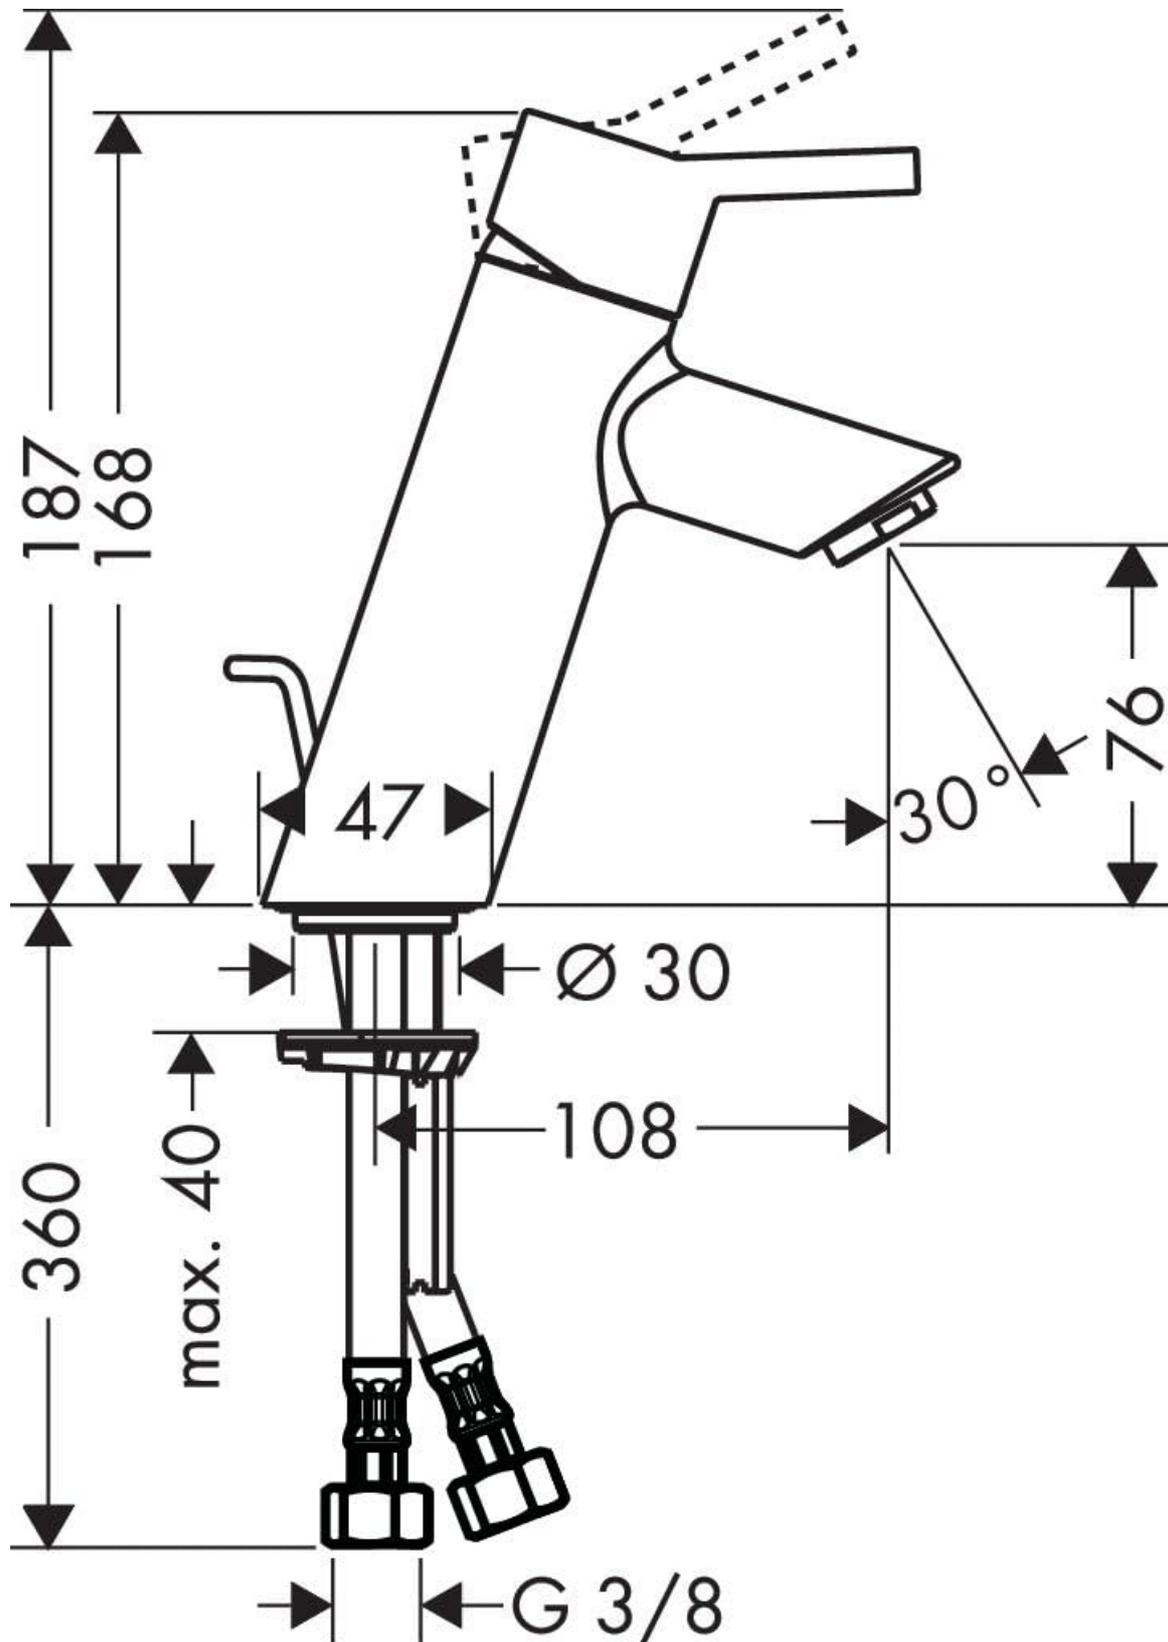


Image: Technical drawing of the Hansgrohe Talis 80 basin mixer with key dimensions (e.g., height 187mm, spout reach 108mm) and connection details (G 3/8 hoses).

5. OPERATING INSTRUCTIONS

The Hansgrohe Talis 80 is a single-lever mixer, allowing for easy control of both water temperature and flow rate.

- **Water Flow Control:** Lift the lever to increase water flow. Push it down to decrease or stop the flow.
- **Temperature Control:** Move the lever to the left for hot water and to the right for cold water. The EcoSmart feature ensures a reduced flow rate of 5 liters per minute, contributing to water and energy

savings.

- **Pop-Up Waste:** Use the pull rod located at the back of the faucet to open and close the basin's drain.



Image: A hand operating the Hansgrohe Talis 80 basin mixer, demonstrating water flow from the spout.

6. MAINTENANCE

Regular cleaning and maintenance will help preserve the appearance and functionality of your Hansgrohe mixer.

Cleaning the Faucet:

- Clean the chrome surfaces with a soft cloth and a mild, non-abrasive cleaning agent.
- Rinse thoroughly with clean water after cleaning to remove any residue.
- Do not use cleaners containing hydrochloric acid, formic acid, chlorine bleach, or acetic acid, as these can cause significant damage.

Descaling the Aerator:

The aerator (spout outlet) can accumulate limescale over time, affecting water flow. The Hansgrohe Talis 80 features an easy-clean aerator.

- Simply rub your finger over the flexible silicone nozzles of the aerator to dislodge limescale deposits.
- For stubborn deposits, unscrew the aerator and soak it in a mild descaling solution (e.g., vinegar and water) before rinsing and reattaching.



Image: A finger cleaning the aerator of the Hansgrohe Talis 80 faucet, demonstrating the simple method for limescale removal.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Low water flow	Clogged aerator; partially closed stopcock; low water pressure.	Clean the aerator (see Maintenance); ensure stopcocks are fully open; check household water pressure.
Water leaks from spout	Damaged cartridge; loose connections.	Contact a qualified plumber for cartridge replacement; check and tighten connections (ensure water supply is off).
Water leaks from base of faucet	Loose mounting nut; worn O-rings.	Tighten mounting nut; contact a qualified plumber for O-ring inspection/replacement.

8. SPECIFICATIONS

- **Brand:** Hansgrohe
- **Model:** Talis 80
- **Product Number:** 32040000

- **Type:** Single-Lever Basin Mixer
- **Finish:** Chrome
- **Material:** Ceramic (cartridge)
- **Mounting Type:** Deck Mounted (1 hole)
- **Number of Handles:** 1
- **Flow Rate:** 5 l/min (EcoSmart)
- **Total Height (with open handle):** 18.7 cm
- **Spout Height:** Approximately 8 cm
- **Weight:** 1.48 Kilograms
- **Included Components:** Mixer, flexible hoses, pop-up waste set
- **Compatibility:** Compatible with all hot water production systems

9. WARRANTY AND SUPPORT

Hansgrohe provides a comprehensive warranty for its products.

Warranty Information:

This Hansgrohe product comes with a **5-year manufacturer's warranty**, covering defects in material and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.



Image: A silver badge displaying '5 YEARS WARRANTY' in multiple languages.

Spare Parts Availability:

Hansgrohe guarantees the availability of spare parts for this product for **15 years** after the product has been discontinued. This ensures long-term usability and maintainability of your mixer.



Image: A silver hexagonal badge displaying '15 YEARS SPARE PARTS AVAILABILITY' in multiple languages.

Customer Support:

For technical assistance, warranty claims, or to order spare parts, please contact Hansgrohe customer service or visit the official Hansgrohe website. Contact details can typically be found on the Hansgrohe brand store page or product packaging.

