

[Manuals.plus](#) /

› [Zassenhaus](#) /

› Zassenhaus Magnetic Retro Kitchen Timer (Model M072327) - Instruction Manual

## Zassenhaus M072327

# Zassenhaus Magnetic Retro Kitchen Timer (Model M072327) - Instruction Manual

## INTRODUCTION

This manual provides comprehensive instructions for the Zassenhaus Magnetic Retro Kitchen Timer, Model M072327. Designed for reliability and ease of use, this mechanical timer is a functional and stylish addition to any kitchen. It features a 55-minute countdown capacity and a magnetic back for convenient placement.

## SETUP

The Zassenhaus Magnetic Retro Kitchen Timer is a mechanical device that does not require batteries. To prepare the timer for use:

1. **Winding the Mechanism:** Turn the dial clockwise all the way to the 55-minute mark. This action winds the internal spring mechanism, which is crucial for the timer to function correctly and for the alarm to sound at its optimal volume.
2. **Setting the Desired Time:** After fully winding, rotate the dial counter-clockwise to your desired time setting (e.g., 10 minutes, 30 minutes). The timer will begin to tick as it counts down.



Image: Front view of the Zassenhaus Magnetic Retro Kitchen Timer, showing the dial and time markings.

## OPERATING INSTRUCTIONS

Once the desired time is set, the timer will begin its countdown. A subtle ticking sound indicates that the mechanism is active. When the set time elapses, an audible alarm will sound.

**Important Note:** For optimal alarm volume and accurate timing, always ensure the timer is fully wound clockwise to the 55-minute mark before setting your desired countdown time. Failing to fully wind the timer may result in a weak or non-sounding alarm.

Your browser does not support the video tag.

Video: Demonstration of how to operate the Zassenhaus Retro Timer, including winding and setting the time.

Your browser does not support the video tag.

Video: Overview of the Zassenhaus Retro Timer, showing its design and basic functionality.

## MAINTENANCE

Proper care will ensure the longevity of your timer.

- **Cleaning:** To clean the timer, wipe it down with a damp cloth. Do not immerse the timer in water or

place it in a dishwasher, as this can damage the mechanical components.

- **Storage:** The timer features a strong magnet on its back, allowing it to be securely attached to most metallic surfaces, such as refrigerators or microwaves, for convenient storage and display.



Image: The Zassenhaus Magnetic Retro Kitchen Timer attached to a metallic refrigerator door, demonstrating its magnetic feature.

## TROUBLESHOOTING

- **Timer Not Ringing or Faint Alarm:** This is typically caused by insufficient winding. Ensure the timer is fully wound clockwise to the 55-minute mark before setting the desired time.
- **Timer Stops Ticking Prematurely:** Similar to alarm issues, this can also be caused by insufficient winding. Always wind the timer fully to 55 minutes before setting your countdown.
- **General Malfunction:** If the timer consistently fails to operate correctly despite proper winding, contact Zassenhaus customer support for assistance.

## SPECIFICATIONS

|                            |                          |
|----------------------------|--------------------------|
| <b>Brand:</b>              | Zassenhaus               |
| <b>Model Number:</b>       | M072327                  |
| <b>Color:</b>              | Red                      |
| <b>Material:</b>           | Steel                    |
| <b>Product Dimensions:</b> | 2.75"D x 2.75"W x 1.25"H |
| <b>Item Weight:</b>        | 5.6 ounces               |
| <b>Number of Settings:</b> | 1 (up to 55 minutes)     |
| <b>UPC:</b>                | 789246995270             |

### WARRANTY AND SUPPORT

For warranty information or product support, please refer to the official Zassenhaus website or contact their customer service department. Keep your purchase receipt for any warranty claims.