

Zassenhaus M072310

Zassenhaus M072310 Magnetic Retro Kitchen Timer Instruction Manual

Model: M072310

INTRODUCTION

This manual provides essential information for the proper use and care of your Zassenhaus M072310 Magnetic Retro Kitchen Timer. Designed for durability and ease of use, this mechanical timer offers a classic approach to time management in your kitchen.

Key features include:

- Classic retro design with an easy-to-read dial face.
- Durable high-quality steel construction.
- Strong magnetic back for convenient attachment to metal surfaces.
- 55-minute mechanical countdown functionality.
- Compact size (2.75" dia. x 1.25" H) for space-saving storage.

SETUP

Your Zassenhaus M072310 timer is ready for use right out of the box. No batteries or complex assembly are required.

Initial Placement

The timer features a strong magnet on its back, allowing it to be securely attached to most household metal surfaces, such as refrigerators or microwave ovens. This ensures it is always within reach and visible.



Figure 1: The Zassenhaus M072310 timer, showcasing its classic design and compact form.

OPERATING INSTRUCTIONS

To ensure the timer functions correctly and the alarm sounds at the end of the countdown, follow these steps precisely:

1. **Wind Fully:** Turn the dial clockwise all the way to the 55-minute mark. This action winds the internal mechanism, ensuring the alarm bell will ring.
2. **Set Desired Time:** After winding to 55 minutes, rotate the dial counter-clockwise to your desired countdown time.
3. **Start Countdown:** The timer will immediately begin counting down with a subtle ticking sound.
4. **Alarm:** Once the set time has elapsed, the timer will emit a clear bell sound. The ticking may continue for a short period after the alarm, which is normal.

Your browser does not support the video tag.

Video 1: Demonstration of setting and operating the Zassenhaus Retro Timer. This video illustrates the winding and setting process, as well as the alarm sound.

MAINTENANCE

Proper maintenance will extend the life of your timer.

- **Cleaning:** Wipe the timer with a damp cloth to clean. Do not use abrasive cleaners.
- **Dishwasher:** This timer is **not suitable for the dishwasher**.
- **Storage:** Store in a dry place. The magnetic back allows for convenient vertical storage on metal surfaces.

TROUBLESHOOTING

Problem	Solution
Timer does not ring or rings softly.	Ensure the timer is fully wound clockwise to the 55-minute mark before setting your desired time. This action charges the spring mechanism for the alarm.
Timer stops before time is up.	This may indicate insufficient winding. Always wind the dial completely to 55 minutes before setting your desired countdown.
Timer is not accurate.	Mechanical timers can have slight variations. For best accuracy, ensure the full winding procedure is followed. If persistent inaccuracy occurs, contact customer support.

SPECIFICATIONS

- **Model Number:** M072310
- **Brand:** Zassenhaus
- **Material:** Steel
- **Color:** Black (as per current product variant)
- **Dimensions:** 2.75"D x 2.75"W x 2.75"H
- **Item Weight:** Approximately 0.35 Pounds (5.6 ounces)
- **Timer Duration:** Up to 55 minutes
- **Mechanism:** Mechanical



Figure 2: The Zassenhaus Retro Kitchen Timer is available in a variety of colors to complement any kitchen decor.

WARRANTY AND SUPPORT

Zassenhaus is known for its commitment to high-quality kitchen tools since 1867. While specific warranty details are not provided in this manual, Zassenhaus products are generally designed for reliable functionality and durability.

For further assistance, product inquiries, or to report any issues, please refer to the official Zassenhaus website or contact their customer service department.

Note: Always follow the operating instructions to ensure optimal performance and longevity of your timer.