

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [KitchenAid](#) /

> [KitchenAid KG25H0XMC Professional HD Series 5 Quart Bowl-Lift Stand Mixer Instruction Manual](#)

## KitchenAid KG25H0XMC

# KitchenAid KG25H0XMC Professional HD Series 5 Quart Bowl-Lift Stand Mixer Instruction Manual

Model: KG25H0XMC | Brand: KitchenAid

## INTRODUCTION

---

Welcome to the world of KitchenAid! Your new KitchenAid Professional HD Series 5 Quart Bowl-Lift Stand Mixer is designed to be the culinary center of your kitchen, offering robust performance for a wide range of tasks. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure you get the most out of your appliance.



Image: KitchenAid KG25H0XMC Professional HD Series 5 Quart Bowl-Lift Stand Mixer in Metallic Chrome, ready for use on a kitchen counter with flour and eggs.

Your browser does not support the video tag.

Video: KitchenAid Stand Mixer Heritage Video. This video provides a historical overview of KitchenAid stand mixers and their enduring legacy in kitchens.

## IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the stand mixer.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to reduce the risk of injury to persons and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped

or damaged in any manner.

- The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
- Do not use the appliance outdoors.
- Do not let cord hang over edge of table or counter.

## WHAT'S IN THE BOX

Your KitchenAid KG25H0XMC Professional HD Series 5 Quart Bowl-Lift Stand Mixer package includes the following components:

- KitchenAid Professional HD Series Stand Mixer Base
- 5 Quart Stainless Steel Mixing Bowl with Handle
- Coated Flat Beater
- Coated PowerKnead Dough Hook
- Stainless Steel Wire Whip



Image: The KitchenAid stand mixer in red, shown with its stainless steel bowl and the three standard attachments: a flat beater, a dough hook, and a wire whip.

## SETUP

---

## Unpacking and Placement

Carefully remove all parts from the packaging. Place the mixer on a dry, flat, and stable surface. Ensure there is enough space around the mixer for operation and ventilation.

## Attaching the Mixing Bowl

1. Ensure the speed control is set to 'OFF' and the mixer is unplugged.
2. Raise the motor head by pushing the bowl-lift lever down.
3. Place the mixing bowl onto the bowl-holding plate, ensuring the pins on the plate fit into the grooves on the bowl.
4. Push the bowl down and twist it clockwise to lock it securely in place.

## Attaching Accessories

1. With the mixer unplugged and the bowl attached, slide the desired accessory (flat beater, dough hook, or wire whip) onto the beater shaft.
2. Rotate the accessory until the pin on the shaft locks into the notch on the accessory.
3. Lower the motor head by pushing the bowl-lift lever up until it locks into position.

Your browser does not support the video tag.

Video: Will a KA-5L BeaterBlade fit my KitchenAid Stand Mixer? This video demonstrates how to properly fit a BeaterBlade attachment into a KitchenAid stand mixer, addressing common fitting issues.

Your browser does not support the video tag.

Video: Product Overview Video. This video provides a general overview of the KitchenAid stand mixer, including its components and basic functionality.

---

## OPERATING INSTRUCTIONS

### Speed Control

Your KitchenAid stand mixer features 10 speeds, allowing precise control for various mixing tasks. Use lower speeds for stirring and kneading heavy doughs, and higher speeds for whipping cream or egg whites.

- **Speed 1-2:** Stirring, slow mixing, mashing, starting all mixing procedures.
- **Speed 3-4:** Beating, combining, creaming.
- **Speed 5-6:** Mixing cakes, batters, and quick breads.
- **Speed 7-8:** Whipping cream, egg whites, and frostings.
- **Speed 9-10:** Fast whipping of small amounts of cream or egg whites.

### Using the Power Hub

The power hub on the front of your mixer allows you to attach various optional accessories, transforming your stand mixer into a versatile culinary tool. Simply remove the hub cover and insert the attachment shaft, securing it with the thumbscrew.



Image: A close-up view of the power hub on the front of a KitchenAid stand mixer, where various attachments can be connected.

## ATTACHMENTS

---

Your KitchenAid stand mixer comes with three essential attachments for common baking and cooking tasks:

- **Coated Flat Beater:** Ideal for normal to heavy mixtures such as cakes, cookies, pastry, and mashed potatoes.
- **Coated PowerKnead Dough Hook:** Used for mixing and kneading yeast doughs such as breads, coffee cakes, and pizza dough.
- **Stainless Steel Wire Whip:** Incorporates air into ingredients for fluffy results, perfect for eggs, egg whites, heavy cream, and some frostings.

Many other optional attachments are available for purchase, expanding the functionality of your mixer for tasks like grinding food, making pasta, and more.

Your browser does not support the video tag.

Video: Wiselet Stainless Steel K5A Whisk for KitchenAid Stand Mixer. This video showcases a stainless steel whisk attachment, highlighting its features and compatibility.

Your browser does not support the video tag.

Video: Truth About Stainless Steel Flat Beater for KitchenAid. This video reviews a stainless steel flat beater attachment, discussing its durability and performance.

Your browser does not support the video tag.

Video: No more stopping to scrape the edge of your bowl! This video demonstrates a flex edge beater attachment, highlighting its ability to scrape the bowl sides during mixing.

## MAINTENANCE AND CLEANING

---

### Cleaning the Mixer Base

Wipe the mixer base with a damp cloth and dry thoroughly. Do not immerse the mixer base in water or other liquids.

### Cleaning the Bowl and Attachments

The stainless steel mixing bowl, coated flat beater, coated PowerKnead dough hook, and stainless steel wire whip are generally dishwasher-safe. Refer to the specific care instructions for each attachment to ensure longevity. Always clean attachments immediately after use to prevent food from drying on them.

Your browser does not support the video tag.

Video: Disappointed in my purchase. This user video demonstrates the process of removing the mixing bowl and attachments from the KitchenAid stand mixer, which is useful for cleaning and maintenance.

## TROUBLESHOOTING

---

If your mixer experiences issues, please refer to the following common troubleshooting tips:

- **Mixer does not start:** Ensure the mixer is properly plugged into a grounded outlet and the speed control is not set to 'OFF'.
- **Attachment hits the bottom of the bowl:** The beater-to-bowl clearance may need adjustment. Refer to the full user manual for detailed instructions on adjusting the beater height.
- **Mixer makes unusual noise:** This can sometimes occur with very heavy loads. If the noise persists or is accompanied by other issues, discontinue use and contact customer support.

For more detailed troubleshooting or issues not listed here, please consult the complete KitchenAid user manual or contact KitchenAid customer support.

## SPECIFICATIONS

<b>Brand</b>	KitchenAid
<b>Model Name</b>	Professional HD Series Stand Mixer
<b>Item Model Number</b>	KG25H0XMC
<b>Color</b>	Metallic Chrome
<b>Capacity</b>	5 Quarts (5 Liters)
<b>Product Dimensions</b>	14.6"D x 11.3"W x 16.5"H
<b>Item Weight</b>	40 Pounds
<b>Material</b>	Aluminum, Stainless Steel, Zinc
<b>Voltage</b>	120 Volts
<b>Wattage</b>	525 Watts
<b>Special Feature</b>	Removable Bowl
<b>Controls Type</b>	Knob
<b>GTIN</b>	050946990941
<b>UPC</b>	050946990941

## WARRANTY AND SUPPORT

---

### Manufacturer's Warranty

Your KitchenAid KG25H0XMC Professional HD Series 5 Quart Bowl-Lift Stand Mixer comes with a 1-Year limited manufacturer's warranty. Please retain your proof of purchase for warranty claims.

### Customer Support

For any questions, assistance, or to register your product, please visit the official KitchenAid website or contact their customer service department. You can find contact information in the full product manual or on the KitchenAid website.

Visit the [KitchenAid Store](#) for more products and information.