

Nyko 86074

Nyko Charge Base S for Xbox 360 Controller Charger

Instruction Manual

1. PRODUCT OVERVIEW

The Nyko Charge Base S is designed to conveniently store and charge two Xbox 360 wireless controllers. It includes two custom NiMH rechargeable batteries, providing an easy drop-in charging solution. The dual-port recharging dock is AC powered, eliminating the need for additional cables to the console. Each rechargeable battery offers up to 20 hours of playtime.



Image: The Nyko Charge Base S, showcasing the charging dock, two Xbox 360 controllers, and two separate rechargeable battery packs.

Key Features:

- Drop-and-charge design for easy recharging without removing batteries.
- Two custom NiMH rechargeable batteries provide up to 20 hours of play time per charge.
- Dual-port recharging dock charges both controllers simultaneously.
- LED lights clearly indicate charging status.
- Plugs into any standard wall outlet for rapid recharging.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Nyko Charge Base S (Dual-port recharging dock)
- 2 x Custom NiMH Rechargeable Batteries
- 1 x AC Power Adapter
- 1 x Instruction Manual





Image: The retail packaging for the Nyko Charge Base S, illustrating the included charger, two Xbox 360 controllers, and two rechargeable battery packs.

3. SETUP

3.1 Installing the Rechargeable Batteries

To prepare your Xbox 360 wireless controllers for charging with the Nyko Charge Base S, you must first install the custom NiMH rechargeable batteries.

1. Open the battery compartment on the back of your Xbox 360 wireless controller.
2. Remove any existing batteries or battery packs.
3. Insert a Nyko custom NiMH rechargeable battery pack into the compartment, ensuring the contacts align correctly.
4. Close the battery compartment cover securely.



Image: An Xbox 360 wireless controller shown with the Nyko rechargeable battery pack correctly installed in its rear compartment.



CHARGE BASE S™

**INCLUDED:
INCLUSES:**

FEATURES:

- Drop-in design allows for easy and rapid recharging of wireless controllers
- 2 custom NiMH rechargeable batteries each supply up to 25 hours of play time
- Rapid recharge base stores two wireless controllers
- Plugs into any wall outlet for a faster charge than USB
- Hidden LED charge indicator lights



**CHARGE BASE
CHARGE BASE**

CARACTÉRISTIQUES:

- Conception de type « drop-in » étudiée pour une charge rapide et facile des manettes sans fil
- 2 piles rechargeables NiMH fournissant une autonomie de jeu de jusqu'à 25 heures
- Base de recharge rapide pour deux manettes sans fil
- S'enfiche dans une prise de courant murale pour une charge plus rapide que par USB
- Témoin de charge à DEL dissimulés



**UNIQUE DROP AND CHARGE DESIGN,
PROVIDES AN EASY AND ORGANIZED METHOD OF CHARGING
AND STORING YOUR XBOX 360® CONTROLLERS.**

**DROP ET UN DESIGN UNIQUES CHARGE,
FOURNIT UNE MÉTHODE SIMPLE ET ORGANISÉE DE CHARGE ET STOCKAGE
VOTRE XBOX 360 CONTROLES**



**2 RECHARGEABLE BATTERIES
2 BATTERY RECHARGEABLES**



REGISTER ONLINE: WWW.NYKO.COM

Bn:

Follow us on twitter@NykoTech



Instructions in English, French, Spanish, German, Dutch, Italian, Portuguese and Japanese included
Manuals en anglais, français, espagnol, italien, hollandais, portugais et japonais incluses



ITEM: 86074-M27
MADE IN CHINA / FABRIQUE EN CHINE

Image: A close-up view of the Nyko custom NiMH rechargeable battery pack, highlighting its contact points and design.

3.2 Connecting the Charge Base S

Connect the Charge Base S to a power source:

1. Plug the AC power adapter into the power input port on the back of the Charge Base S.
2. Plug the other end of the AC power adapter into a standard wall outlet.
3. The Charge Base S is now ready for use.

4. OPERATION

4.1 Charging Controllers

To charge your Xbox 360 wireless controllers:

1. Ensure the custom NiMH rechargeable batteries are installed in your controllers (refer to Section 3.1).
2. Gently place an Xbox 360 wireless controller onto one of the charging docks on the Charge Base S. Ensure the controller's battery contacts align with the charging pins on the base.
3. The LED indicator on the Charge Base S for that dock will illuminate to show the charging status.
4. Repeat for the second controller if desired.



Image: Two Xbox 360 wireless controllers are shown securely docked in the Nyko Charge Base S, indicating they are ready for or currently undergoing charging.

4.2 LED Indicators

The Charge Base S features LED indicators to communicate the charging status of each controller:

Indicator Color	Status
Red	Controller is charging.
Green	Controller is fully charged.
Off	No controller docked or charging cycle complete and controller removed.

A single battery typically charges in approximately 2 hours, while two batteries charging simultaneously will take about 4 hours.

5. MAINTENANCE

- **Cleaning:** Disconnect the Charge Base S from the power outlet before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the Charge Base S and batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid completely draining the batteries before recharging. It is recommended to charge them regularly.

6. TROUBLESHOOTING

If you encounter issues with your Nyko Charge Base S, please refer to the following table:

Problem	Possible Solution
Controller not charging.	Ensure the AC power adapter is securely plugged into both the Charge Base S and a working wall outlet. Verify that the controller is correctly seated on the charging dock and the battery contacts are aligned. Check if the custom NiMH battery pack is properly installed in the controller.
LED indicator not lighting up.	Confirm the Charge Base S is receiving power. Try plugging it into a different outlet. Ensure a controller with a Nyko battery pack is correctly placed on the dock.
Short battery life after charging.	Batteries may have reached the end of their lifespan and require replacement. Ensure controllers are fully charged (green LED) before use.
Controller does not fit on the dock.	Ensure you are using an official Xbox 360 wireless controller with the Nyko custom NiMH battery pack. The Charge Base S is specifically designed for this configuration.

7. SPECIFICATIONS

- **Model Number:** 86074
- **Product Dimensions:** 9.25 x 4.15 x 2.4 inches
- **Item Weight:** 1.1 pounds
- **Battery Type:** Custom NiMH rechargeable battery pack
- **Battery Capacity:** 1200mAh (as per battery label in image)
- **Charging Time:** Approximately 2 hours for one battery, 4 hours for two batteries simultaneously.
- **Play Time:** Up to 20 hours per fully charged battery.
- **Power Source:** AC Wall Outlet

8. WARRANTY AND SUPPORT

For warranty information, technical support, or to register your product, please visit the official Nyko website or contact their customer service. Keep your purchase receipt as proof of purchase.

You can also scan the QR code below for more information:



Scan this QR code for additional product information and support from Nyko Technologies.

© 2023 Nyko. All rights reserved. Xbox 360 is a registered trademark of Microsoft Corporation.