

[manuals.plus](#) /› [VTech](#) /› [VTech Kidizoom Camera \(2010 Version\) User Manual](#)

## VTech 80-106900

# VTech Kidizoom Camera (2010 Version) User Manual

## 1. INTRODUCTION

Welcome to the VTech Kidizoom Camera (2010 Version) user manual. This guide provides essential information for setting up, operating, and maintaining your camera. Please read these instructions carefully to ensure proper use and to maximize your experience with the product.

## 2. PRODUCT OVERVIEW

The VTech Kidizoom Camera is designed for children, offering a fun and durable way to capture photos. It includes built-in photo editing features and games, providing entertainment beyond just photography.

### Key Features:

- Easy-to-grip design for small hands.
- 0.3-megapixel resolution for capturing still images.
- Built-in photo editor with 12 frames, stamps, and 2 kaleidoscope effects.
- Two integrated games for additional entertainment.
- 64MB of internal memory, capable of storing over 400 photos.
- Durable rubberized construction for enhanced resilience.

### What's in the Box:

- VTech Kidizoom Camera (2010 Version)
- USB cable
- 4 AA Alkaline batteries



*Image: Front view of the VTech Kidizoom Camera (2010 Version), showcasing its robust design and user-friendly buttons.*

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment cover on the camera.
2. Use a screwdriver (not included) to loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Insert four (4) new AA Alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
5. Replace the battery compartment cover and tighten the screw securely.

### 3.2 Initial Power On

Press and hold the **Power** button (usually located on the top or side of the camera) for a few seconds until the LCD screen illuminates. The camera is now ready for use.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Taking Photos

1. Turn on the camera.
2. Point the lens towards your subject.
3. Press the large **Shutter** button (often blue or prominent) to capture a photo. A shutter sound will confirm the picture has been taken.

### 4.2 Viewing Photos

Navigate to the **Gallery** or **Playback** mode using the directional buttons and the **OK** button. Use the left and right directional buttons to scroll through your captured images.

### 4.3 Using the Photo Editor

While viewing a photo in playback mode, select the **Edit** option (refer to on-screen icons). You can then choose from various frames, stamps, or kaleidoscope effects to apply to your photo. Save your edited image as a new file.

### 4.4 Playing Games

From the main menu, select the **Games** option. Use the directional buttons to choose between the two built-in

games and press **OK** to start playing.

## 4.5 Connecting to a Computer

1. Ensure the camera is turned on.
2. Connect one end of the included USB cable to the camera's USB port.
3. Connect the other end of the USB cable to an available USB port on your computer.
4. The camera should be recognized as a removable storage device. You can then access the camera's internal memory to transfer photos to your computer. No additional software installation is typically required.

## 5. MAINTENANCE

---

### 5.1 Cleaning

To clean the camera, gently wipe the exterior with a soft, dry cloth. For the LCD screen, use a soft, lint-free cloth specifically designed for electronics. Do not use abrasive cleaners or solvents.

### 5.2 Storage

When not in use for extended periods, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the batteries to prevent leakage and potential damage to the camera.

## 6. TROUBLESHOOTING

---

- **Camera does not turn on:** Check if the batteries are inserted correctly with the right polarity. Replace with fresh AA Alkaline batteries if necessary.
- **Poor image quality:** Ensure adequate lighting when taking photos. The camera has a 0.3 MP sensor, so image quality will be suitable for digital viewing but may not be high resolution for large prints.
- **Memory full:** Transfer photos to a computer and delete them from the camera's internal memory to free up space. The camera has 64MB of memory, storing approximately 400 photos.
- **Battery drains quickly:** Frequent use of the flash or continuous operation of games can consume battery power faster. Use high-quality alkaline batteries.
- **Camera freezes:** Try turning the camera off and then on again. If it remains unresponsive, remove the batteries for a few seconds and then reinsert them.

## 7. SPECIFICATIONS

---

Model Number	80-106900
Brand	VTech
Image Sensor	CMOS
Effective Still Resolution	0.3 MP
Internal Memory	64 MB (stores 400+ photos)
Display Type	LCD, Color Screen
Connectivity	USB 2.0
Power Source	4 x AA Alkaline Batteries (included)

<b>Image Format</b>	JPEG
<b>Exposure Control</b>	Automatic
<b>Flash</b>	Built-In, Automatic Modes
<b>Special Features</b>	Built-in Photo Editor, Games
<b>Material</b>	Plastic
<b>Item Weight</b>	1 Pound

## **8. WARRANTY AND SUPPORT**

---

Based on available information, this product does not come with a manufacturer's warranty. For technical assistance or product inquiries, please refer to the VTech official website or contact their customer support services.