

[Manuals.plus](#) /

› [Seiko](#) /

› Seiko QXH110BLH Light Oak Traditional Schoolhouse Wall Clock User Manual

Seiko QXH110BLH

Seiko QXH110BLH Light Oak Traditional Schoolhouse Wall Clock User Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Seiko Light Oak Traditional Schoolhouse Wall Clock, model QXH110BLH. This timeless oak schoolhouse wall clock features an octagon-shaped face with Roman numerals, curved crystal glass face, etched pendulum glass, and a shiny pendulum. It includes Westminster/Whittington quarter-hour and hourly chime strikes with volume control and a nighttime chime silencer.



Figure 1: Front view of the Seiko Light Oak Traditional Schoolhouse Wall Clock.

FEATURES

- Traditional octagonal cream clock face with Roman numerals.
- Dual chimes: Westminster and Whittington melodies.
- Quarter-hour chime and hourly strikes that follow the hourly chime.
- Automatic chime silencer (operates from 11 PM to 5:45 AM).
- Adjustable chime volume control.
- Decorative metal pendulum.
- Powered by one 'C' battery (included).
- Overall dimensions: 21.25 inches (height) x 12.75 inches (width) x 3.75 inches (depth).

SETUP

1. Unpacking

Carefully remove the clock from its packaging. Inspect for any damage. Keep the packaging for future transport or storage.

2. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one 'C' battery, ensuring correct polarity (+/-). The clock comes with one 'C' battery included.



Figure 2: Back view of the clock, showing the battery compartment and controls.

3. Pendulum Attachment

Gently hook the pendulum onto its designated hanger inside the pendulum viewing area. The pendulum is for aesthetic purposes only and does not affect timekeeping accuracy.

4. Mounting the Clock

The clock features a metal eye loop hanger at the top rear. Ensure the screw or nail used for mounting is long enough to account for the setback of the hanger (approximately one inch from the back of the clock) and securely supports the clock's weight. For best pendulum swing, ensure the clock is hung vertically.



Figure 3: Diagram showing the dimensions of the Seiko Wall Clock.

5. Setting the Time

The time setting dial is located on the back of the clock. Due to its small size, precise setting can be achieved by gently pulling the battery out slightly when the desired hour is reached on another clock, then pushing it back in quickly to synchronize.

OPERATION

Chime Settings

Your clock offers dual chime options (Westminster and Whittington), adjustable volume, and an automatic nighttime silencer. All chime controls are located on the back of the clock.

- **Chime Selection:** Choose between Westminster and Whittington melodies.
- **Volume Control:** Adjust the chime loudness to your preference. A lower volume setting may extend battery life.
- **Nighttime Silencer:** This feature automatically silences the chimes between 11:00 PM and 5:45 AM.
- **Quarter-Hour Chimes:** The clock will chime every 15 minutes. This feature cannot be independently turned off.

MAINTENANCE

Battery Replacement

The included 'C' battery is designed to power the clock for up to one year. Replace the battery annually or when the clock stops keeping accurate time or the chimes become weak or stop functioning.

Cleaning

Wipe the clock's wooden case and glass with a soft, dry cloth. Avoid using abrasive cleaners or solvents that could damage the finish.

TROUBLESHOOTING

- **Clock Not Keeping Time:** Ensure the 'C' battery is correctly installed and has sufficient power. Replace if necessary. Verify the pendulum is swinging freely.
- **Chimes Out of Sync:** If the chimes do not correspond to the time displayed, reset the time by following the

instructions in the "Setting the Time" section.

- **No Chime or Weak Chime:** Check the chime volume control on the back of the clock. Ensure the battery has enough power. Confirm the nighttime silencer is not active if chimes are expected.
- **Mounting Issues:** If the clock does not hang securely, ensure the mounting hardware is appropriate for the clock's weight and the wall material.

SPECIFICATIONS

Feature	Detail
Product Dimensions	21.25 x 3.75 x 12.75 inches
Item Weight	5.51 pounds
Item Model Number	QXH110BLH
Batteries Required	1 C battery (included)
Material	Oak Wood
Display Type	Analog
Additional Features	Hourly Chime, Quarter-hour Chime, Nighttime Silencer
Power Source	Battery Powered
Mounting Type	Wall Mount
Watch Movement	Quartz
Shape	Octagonal
Dial Color	White
Clock Form	Pendulum

WARRANTY & SUPPORT

Seiko guarantees this product's workmanship and material quality for one year from the date of purchase, assuming normal use. For questions regarding product guarantee or support, please contact Seiko customer care.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0027FGBHC>

More documents and user manuals: <https://manuals.plus/>