



Manuals.plus /

- › Casio /
- › Casio Baby-G BG169R-4 Digital Sport Watch User Manual

## Casio BG169R-4

# Casio Baby-G BG169R-4 Digital Sport Watch User Manual

Model: BG169R-4

## INTRODUCTION

---

This manual provides detailed instructions for the operation and maintenance of your Casio Baby-G BG169R-4 Digital Sport Watch. Designed for durability and functionality, this watch features shock resistance, 200-meter water resistance, and a variety of digital functions including a databank, world time, stopwatch, and alarms. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

## PRODUCT OVERVIEW

---



Baby-G

TUE

'20-3-3

P 8:32:29

ADJUST/SET

MODE / SELECT

ALM MUTE SIG DAYS DST

ALMON/REV

24HR/FWD

G

Front view of the Casio Baby-G BG169R-4 watch, highlighting its digital display and translucent pink resin design.



Rear view of the watch, displaying the stainless steel case back and model engravings.



Side profile of the watch, illustrating its robust case design and button placement.



The watch as worn on a wrist, providing a perspective on its size and appearance when in use.



The watch's hexagonal tin packaging, featuring the Baby-G logo.

## INITIAL SETUP

---

Upon first use or after a battery change, you may need to set the current time and date. The watch features a Full Auto Calendar pre-programmed until 2099, so manual date adjustments are rarely needed once the initial setup is complete.

### Setting the Time and Date

1. In Timekeeping Mode, press and hold the **ADJUST/SET** button until the seconds begin to flash, indicating the setting mode.
2. Press the **MODE/SELECT** button to cycle through the settings: Seconds → DST (Daylight Saving Time) → Hour → Minute → Year → Month → Day → 12/24 Hour Format.
3. Use the **24HR/FWD** button to increase the flashing value or the **ALMON/REV** button to decrease it.
4. Once all settings are correct, press the **ADJUST/SET** button to exit the setting mode.

### Selecting 12/24 Hour Format

While in the time setting mode (as described above), navigate to the 12/24 Hour Format setting. Press the **24HR/FWD** or **ALMON/REV** button to toggle between 12-hour (with P for PM) and 24-hour formats.

## OPERATING INSTRUCTIONS

---

### Mode Navigation

Press the **MODE/SELECT** button to cycle through the watch's different modes:

- Timekeeping Mode
- Databank Mode
- World Time Mode
- Day Counter Mode
- Alarm Mode
- Stopwatch Mode
- Countdown Timer Mode

### EL Backlight

To illuminate the display, press the **LIGHT** button (usually located on the upper right or lower right side). The backlight will stay on for a few seconds. The watch features an Afterglow function, meaning the light remains on for a short period after the button is released.

### Databank (Memory Capacity: Up to 25 sets)

The databank allows you to store names (up to 8 characters) and telephone numbers (up to 12 digits).

1. Enter Databank Mode by pressing the **MODE/SELECT** button.
2. To add a new entry, press and hold **ADJUST/SET** until the cursor flashes.
3. Use **24HR/FWD** and **ALMON/REV** to select characters. Press **MODE/SELECT** to move to the next character or field (name/number).
4. Press **ADJUST/SET** to save the entry.
5. To view entries, use **24HR/FWD** and **ALMON/REV** to scroll.

### World Time (29 Time Zones, 30 Cities)

View the current time in various cities around the world.

1. Enter World Time Mode.
2. Use **24HR/FWD** and **ALMON/REV** to scroll through city codes.
3. To toggle Daylight Saving Time (DST) on/off for the displayed city, press the **ADJUST/SET** button.

### Day Counter (Memory Capacity: 5 records)

Automatically counts down the days from the current date to a target date (e.g., birthday, anniversary).

1. Enter Day Counter Mode.
2. To set a new target date, press and hold **ADJUST/SET**.
3. Set the target month, day, and a short message (up to 8 characters) using the **24HR/FWD** and **ALMON/REV** buttons, and **MODE/SELECT** to move between fields.
4. Press **ADJUST/SET** to save.

### Daily Alarms (5 Alarms) & Hourly Time Signal

Set up to five independent daily alarms and activate/deactivate the hourly time signal.

1. Enter Alarm Mode.

2. Use **24HR/FWD** to cycle through AL1, AL2, AL3, AL4, AL5, and SIG (Hourly Time Signal).
3. To set an alarm, select the desired alarm (e.g., AL1) and press and hold **ADJUST/SET**.
4. Set the alarm hour and minute using **24HR/FWD** and **ALMON/REV**. Press **MODE/SELECT** to switch between hour and minute.
5. Press **ADJUST/SET** to save.
6. To turn an alarm or the Hourly Time Signal ON/OFF, select it and press **24HR/FWD**.

### Stopwatch (Measuring Capacity: 23:59'59.99")

Measure elapsed time, split times, and 1st-2nd place times.

1. Enter Stopwatch Mode.
2. Press **24HR/FWD** to start/stop the stopwatch.
3. While the stopwatch is running, press **ALMON/REV** to record a split time. Press **24HR/FWD** to stop, then **ALMON/REV** to reset to zero.

### Countdown Timer (Input Range: 1 minute to 24 hours)

Set a timer to count down from a specified time.

1. Enter Countdown Timer Mode.
2. Press and hold **ADJUST/SET** to enter setting mode.
3. Set the desired countdown time (hours, minutes) using **24HR/FWD** and **ALMON/REV**. Press **MODE/SELECT** to move between hours and minutes.
4. Press **ADJUST/SET** to save.
5. Press **24HR/FWD** to start/stop the countdown. When the countdown reaches zero, an alarm will sound.

### Button Operation Tone On/Off

You can enable or disable the button operation tone.

- In Timekeeping Mode, press the **ALMON/REV** button to toggle the button operation tone on or off. A mute indicator will appear on the display when the tone is off.

## MAINTENANCE

---

- **Cleaning:** Wipe the watch with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent. Never use volatile agents like thinner, benzene, or alcohol, as they may damage the resin components.
- **Water Resistance:** This watch is rated for 200M water resistance. This means it is suitable for recreational scuba diving. Do not operate buttons while the watch is wet or submerged. Avoid exposing the watch to hot water or steam, as this can compromise the water resistance.
- **Shock Resistance:** While designed to be shock resistant, avoid strong impacts or dropping the watch from heights, as this can still cause damage.
- **Battery Replacement:** The approximate battery life is 3 years (Battery: CR1616). When the display becomes dim or functions become erratic, it's time to replace the battery. Battery replacement should ideally be performed by a qualified technician to ensure water resistance is maintained.
- **Temperature Exposure:** Avoid exposing the watch to extreme temperatures (very hot or very cold) for prolonged periods, as this can affect accuracy and battery life.

## TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Time is inaccurate:** Ensure the time and date are set correctly. Extreme temperatures or strong magnetic fields can affect accuracy. If the issue persists after setting, the watch may require servicing.
- **Buttons are not responding:** Ensure the watch is not in a locked mode (if applicable, though this model doesn't specify one). If the watch is wet, dry it thoroughly before attempting to press buttons. If still unresponsive, a reset (by removing and reinserting the battery) or professional servicing may be needed.
- **Water inside the watch:** Immediately take the watch to a qualified service center. Do not attempt to dry it yourself, as this can cause further damage.

## SPECIFICATIONS

<b>Model Number</b>	BG169R-4
<b>Module</b>	3189/3252
<b>Water Resistance</b>	200 Meters (20 ATM)
<b>Shock Resistance</b>	Yes
<b>Battery Type</b>	CR1616
<b>Approx. Battery Life</b>	3 years
<b>Accuracy</b>	+/- 30 seconds per month
<b>Case Diameter</b>	42.6 mm (approximate)
<b>Weight</b>	58 g (approximate)
<b>Material</b>	Resin (Case and Band)
<b>Display Type</b>	Digital
<b>Backlight</b>	EL Backlight with Afterglow
<b>Special Features</b>	Databank (25 sets), World Time (30 cities), Day Counter (5 records), 5 Daily Alarms, Hourly Time Signal, 1/100 sec. Stopwatch, Countdown Timer, Full Auto Calendar (to 2099), 12/24 Hour Formats, Button Operation Tone On/Off.

## WARRANTY AND SUPPORT

Your Casio Baby-G watch is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please refer to the warranty card included with your purchase for detailed information.

For technical support, repairs, or warranty claims, please contact Casio customer service or an authorized Casio service

center in your region. Contact information can typically be found on the Casio official website or on your warranty documentation.

For more information, you may visit the official Casio website: [www.casio.com](http://www.casio.com)