

RCA RCRP05BR

RCA RCRP05BR 5-Device Universal Remote Control Instruction Manual

Model: RCRP05BR

INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your RCA RCRP05BR 5-Device Universal Remote Control. This remote is designed to consolidate control of up to five audio/video devices, offering a familiar layout for cable box control and supporting various digital television features.

REMOTE CONTROL LAYOUT



The image above displays the RCA RCRP05BR universal remote control. Key sections include:

- **Top Section:** Device selection buttons (TV, AUX, SAT, CBL, VCR, DVD, AUD) and the Master Power button. The SETUP button is also located here.
- **Middle Section (Playback & Navigation):** Includes playback controls (Play, Pause, Stop, Rewind, Fast Forward, Skip), a circular navigation pad with an OK button, and MENU, INFO, GUIDE, and EXIT buttons.
- **Lower Middle Section (Channel & Volume):** Features Volume (+/-), Channel (+/-), MUTE, FAV (Favorites), LAST, and the colored A, B, C, D buttons. The ON DEMAND button is also present.
- **Bottom Section (Numeric Keypad & Advanced Functions):** A standard numeric keypad (0-9) and buttons for ASPECT, PIP (Picture-in-Picture), Swap, Move, Input, Macro1, and Macro2. The RCA logo is at the very bottom.

SETUP

1. Battery Installation

1. Remove the battery compartment cover on the back of the remote.
2. Insert two (2) fresh AA alkaline batteries, matching the polarity (+ and -) indicators inside the compartment.
3. Replace the battery compartment cover.

2. Programming the Remote

The remote can be programmed using direct code entry, auto code search, or a learning feature.

Direct Code Entry

1. Turn on the device you wish to control (e.g., TV, DVD player).
2. Press and hold the **SETUP** button until the red indicator light illuminates.
3. Press the device button you want to program (e.g., **TV**, **DVD**). The red indicator light will blink once and remain lit.
4. Enter the 4-digit code for your brand and device from the provided code list (not included in this manual, refer to product packaging or manufacturer's website).
5. If the code is valid, the red indicator light will turn off. If the light blinks four times, the code is invalid; re-enter the code.
6. Test the remote by pressing the **POWER** button. If the device turns off, try other functions like volume or channel. If it works, programming is complete. If not, try the next code for your brand or use auto code search.

Auto Code Search

1. Turn on the device you wish to control.
2. Press and hold the **SETUP** button until the red indicator light illuminates.
3. Press the device button you want to program. The red indicator light will blink once and remain lit.
4. Press the **POWER** button repeatedly (approximately every 2 seconds) until your device turns off.
5. Once the device turns off, press the **ENTER** button (usually the OK button in the center navigation pad) to save the code. The red indicator light will turn off.
6. Test the remote. If it works, programming is complete.

Learning Feature

This feature allows the universal remote to learn functions directly from your original remote control. This is useful for functions not covered by pre-programmed codes or for devices not listed.

1. Place the RCA universal remote and your original remote control on a flat surface, facing each other, about 1-2 inches apart.
2. Press and hold the **SETUP** button until the red indicator light illuminates.
3. Press the device button (e.g., **TV**) you want to assign the learned function to. The red indicator light will blink once and remain lit.
4. Press the button on the RCA remote that you want to teach a function (e.g., a specific function button). The red indicator light will blink rapidly.
5. Press and hold the corresponding button on your original remote control until the red indicator light on the RCA remote blinks twice and then stays lit. This indicates successful learning.
6. Repeat steps 4 and 5 for any other functions you wish to learn.
7. Press the **SETUP** button to exit learning mode. The red indicator light will turn off.
8. Test the learned functions.

3. Volume Punch-Through

This feature allows the volume control (VOL +/-) to always control a specific device, regardless of which device

mode the remote is currently in. This is useful if you use an audio receiver for all sound.

1. Press and hold the **SETUP** button until the red indicator light illuminates.
2. Press the device button (e.g., **AUD**) that you want to control the volume. The red indicator light will blink once and remain lit.
3. Press the **VOL+** button. The red indicator light will blink twice and turn off.
4. Now, when you press **VOL+/-** in any device mode, it will control the volume of the selected device (e.g., **AUD**).
5. To disable volume punch-through, repeat steps 1-3, but in step 3, press the **VOL-** button instead of **VOL+**.

OPERATING THE REMOTE

Device Selection

To control a specific device, press the corresponding device button at the top of the remote (e.g., **TV**, **CBL**, **DVD**). The remote will then send commands for that device.

Basic Functions

- **POWER:** Turns the selected device on or off.
- **VOL +/-:** Adjusts the volume.
- **CH +/-:** Changes channels.
- **MUTE:** Mutes or unmutes the audio.
- **Numeric Keypad (0-9):** For direct channel entry or other numeric inputs.

Advanced Functions

- **MENU:** Accesses the on-screen menu of the selected device.
- **GUIDE:** Displays the program guide (for TV/Cable/Satellite).
- **INFO:** Displays information about the current program or selection.
- **Navigation Pad (Up/Down/Left/Right/OK):** Used to navigate menus and confirm selections.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Controls playback for DVRs, VCRs, and DVD/Blu-ray players.
- **Colored Buttons (A, B, C, D):** These buttons (Red, Blue, Yellow, Green) are often used for special functions in cable/satellite boxes or Blu-ray players. Their function varies by device.
- **ON DEMAND:** Accesses On Demand services (for cable/satellite).
- **PIP (Picture-in-Picture), Swap, Move, Input, Macro1, Macro2:** These buttons provide additional functionality, which may need to be programmed via the learning feature or specific codes for your devices.

MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's indicator light becomes dim or functions become unreliable. Always use fresh AA alkaline batteries.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote not operating device:**
 - Ensure fresh batteries are installed correctly.
 - Verify the correct device button (e.g., **TV**, **CBL**) is pressed before attempting to control the device.
 - Reprogram the remote using a different code for your device, or try the auto code search method.

- Ensure there are no obstructions between the remote and the device.
- **Some buttons do not work after programming:**
 - The selected code may only support basic functions. Try another code for your device.
 - Use the learning feature to teach specific functions from your original remote.
- **Roku "Back" button not working (as noted in user reviews):**
 - The RCA RCRP05BR may not have a pre-programmed "Back" function for all Roku devices.
 - If your original Roku remote is IR-based, use the learning feature to teach the "Back" function to an unused button on the RCA remote.
 - If your Roku remote uses Wi-Fi Direct (not IR), the learning feature will not work directly. Some users have successfully used IR remote apps on smartphones (if the phone has an IR blaster) to teach the function.
- **Volume control not working as expected:**
 - Check if Volume Punch-Through is enabled for a different device than intended. Adjust or disable it as needed.

SPECIFICATIONS

Feature	Detail
Model Number	RCRP05BR
Number of Devices	5
Power Source	2 AA Batteries (not included)
Dimensions	11.1 x 4.75 x 2 inches
Weight	6.4 ounces
Special Features	Universal compatibility, Learning feature, Volume Punch-Through







WARRANTY INFORMATION

RCA products typically come with a limited warranty. Please refer to the warranty card included with your purchase or visit the official RCA website for detailed warranty terms and conditions specific to the RCRP05BR model. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or to access the latest code lists, please visit the official RCA support website or contact their customer service department. Contact information can usually be found on the product packaging or the RCA brand website.

Related Documents - RCRP05BR

	<p>RCA RCU403 Universal Remote Control User Manual</p> <p>Comprehensive user manual for the RCA RCU403 Universal Remote Control, covering setup, programming for TV, VCR, and Cable Box, troubleshooting, and warranty information.</p>
	<p>RCA D770 Universal Remote Control User Manual</p> <p>This manual provides comprehensive instructions for the RCA D770 Universal Remote Control, including setup, button descriptions, programming guides for various devices (TV, VCR, Cable Box, Satellite, Audio), troubleshooting tips, and information on available RCA accessories.</p>
	<p>RCA RCU300 Universal Remote Control User Manual</p> <p>Guide to the RCA RCU300 Universal Remote Control, detailing how to program and use it to operate up to three home entertainment devices like TVs, DVD players, VCRs, and cable boxes. Includes troubleshooting tips and warranty information.</p>
	<p>RCA RCU310 Universal Remote Control User Manual</p> <p>This user manual provides comprehensive instructions for the RCA RCU310 Universal Remote Control. Learn how to program the remote for TVs, DVD players, VCRs, and cable/satellite boxes using direct entry or code search methods. It also covers key descriptions, features like the sleep timer and on-screen menus, troubleshooting common issues, and the limited 90-day warranty.</p>
	<p>RCA RCU600BL Universal Remote Control User Manual</p> <p>Comprehensive user manual for the RCA RCU600BL Universal Remote Control, detailing setup, programming, features, and troubleshooting for controlling up to six home theater components.</p>
	<p>RCA D770 Universal Remote Control User Manual</p> <p>Comprehensive user manual for the RCA D770 Universal Remote Control, detailing setup, programming, key functions, troubleshooting, and warranty information for controlling various audio and video components.</p>