

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [GoodCook](#) /
- > [Good Cook Precision Diet Scale Deluxe Instruction Manual](#)

GoodCook 12805

Good Cook Precision Diet Scale Deluxe Instruction Manual

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Good Cook Precision Diet Scale Deluxe. Retain this manual for future reference.

- **Do not immerse:** Do not immerse the scale in water or other liquids.
- **Cleaning:** Wipe clean with a damp cloth. Do not use abrasive cleaners.
- **Placement:** Place the scale on a flat, stable surface for accurate measurements.
- **Capacity:** Do not exceed the maximum weight capacity of 16 oz (450 g).

PRODUCT OVERVIEW

The Good Cook Precision Diet Scale Deluxe, model 12805, is designed for accurate portioning of food items. It features easy-to-read markings in both US standard (ounces) and metric (grams) measurements, and includes a removable plastic tray for convenience.



Image: Good Cook Precision Diet Scale Deluxe, showing the scale and its included plastic tray within its retail packaging. The scale features clear measurement markings for ounces and grams.

Components:

- Diet Scale Base
- Removable Plastic Tray

SETUP

1. **Unpack:** Carefully remove the scale and its components from the packaging.
2. **Placement:** Place the scale on a firm, level, and stable surface. Ensure there are no vibrations or drafts that could affect accuracy.
3. **Attach Tray:** Place the clear plastic tray securely onto the scale platform.

OPERATING INSTRUCTIONS

Measuring Food Items:

1. Ensure the scale is on a level surface and the plastic tray is in place.
2. Verify that the scale indicator is at zero before placing any items on it. If not, gently tap the scale to reset it, or ensure no pressure is being applied.
3. Carefully place the item to be weighed onto the center of the plastic tray.
4. Read the weight indicated by the pointer on the scale's dial. The scale displays measurements in both ounces (oz) and grams (g).
5. Remove the item from the tray after weighing.

Weight Range:

The Good Cook Precision Diet Scale Deluxe has a weight range of 0-16 ounces (0-450 grams).

MAINTENANCE AND CARE

- **Cleaning:** The plastic tray can be removed and washed with warm, soapy water. Rinse thoroughly and dry completely before reattaching. The scale base should be wiped clean with a damp cloth. Do not use harsh chemicals or abrasive cleaning pads.
- **Storage:** Store the scale in a dry place away from extreme temperatures.
- **Handling:** Handle the scale with care. Avoid dropping it or subjecting it to strong impacts, as this may affect its accuracy.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inaccurate readings	Scale not on a level surface; item not centered; exceeding weight capacity; scale damaged.	Ensure scale is on a flat, stable surface. Center the item on the tray. Do not exceed 16 oz (450 g). If damaged, discontinue use.
Pointer does not return to zero	Residual pressure; internal mechanism issue.	Ensure nothing is resting on the scale. Gently tap the scale. If the issue persists, contact customer support.
Scale appears stuck	Debris under the tray or mechanism; physical obstruction.	Remove the tray and check for any obstructions. Clean thoroughly.

SPECIFICATIONS

- **Model:** 12805
- **Brand:** GoodCook
- **Product Dimensions:** 4.5 x 3.63 x 4 inches
- **Item Weight:** 6.4 ounces
- **Weight Capacity:** 0-16 oz (0-450 g)
- **Measurement Units:** Ounces (oz), Grams (g)

WARRANTY AND SUPPORT

GoodCook products are manufactured to high-quality standards. For specific warranty information or customer support, please refer to the product packaging or visit the official GoodCook website. Keep your purchase receipt as proof of purchase.

For further assistance, you may contact GoodCook customer service through their official channels.