

[manuals.plus](#) /

› [Severin](#) /

› [Severin WA 2103 Waffle Maker Instruction Manual](#)

**Severin WA 2103**

# Severin WA 2103 Waffle Maker Instruction Manual

Model: WA 2103

## INTRODUCTION

---

Thank you for choosing the Severin WA 2103 Waffle Maker. This appliance is designed to help you prepare delicious heart-shaped waffles quickly and easily. Please read this instruction manual carefully before using the appliance for the first time to ensure safe operation and optimal performance. Keep this manual for future reference.



Image: The Severin WA 2103 Waffle Maker in its closed position, featuring a black body and a silver top plate with the 'Severin' logo. Indicator lights are visible on the handle.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The appliance features a heat-resistant body for safe handling during operation.

## PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your Severin WA 2103 Waffle Maker:

- Non-stick waffle plates (heart-shaped)
- Adjustable thermostat control knob
- Power indicator light (green)
- Ready indicator light (red)
- Heat-resistant housing
- Non-slip rubber feet
- Integrated cable winder

# SEVERIN

**Corps résistant  
à la chaleur et pieds  
antidérapants  
en caoutchouc**

**1300 W**

**Rangement vertical  
et enrouleur de câble  
d'alimentation  
pour économiser  
de l'espace**

**Revêtement  
antiadhésif pour  
empêcher la pâte  
de coller et faciliter  
le nettoyage**



Image: A diagram of the Severin WA 2103 Waffle Maker with callouts indicating its features: heat-resistant body, non-slip feet, 1300W power, vertical storage capability, cable winder, and non-stick coating.

## SETUP AND FIRST USE

- Unpacking:** Carefully remove the waffle maker from its packaging. Retain the packaging for storage or disposal.
- Initial Cleaning:** Before first use, wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly. Do not use abrasive cleaners or scourers.
- Positioning:** Place the waffle maker on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the appliance.
- Power Connection:** Unwind the power cord from the integrated winder and plug it into a suitable 220V wall outlet.
- Preheating:** Close the waffle maker and set the thermostat to the desired browning level (start with a medium setting). The red indicator light will illuminate, indicating the appliance is heating.
- First Use Odor:** During the first use, a slight odor or smoke may occur. This is normal and will dissipate quickly.

Ensure the area is well-ventilated.

7. **Ready Indicator:** The green indicator light will turn on when the waffle maker has reached the set temperature and is ready for use.

## OPERATING INSTRUCTIONS

---

### Making Waffles

1. **Preheat:** Ensure the waffle maker is preheated until the green indicator light illuminates.
2. **Prepare Batter:** Prepare your favorite waffle batter. For best results, ensure the batter is not too thick or too thin.
3. **Lightly Grease (Optional):** Although the plates are non-stick, you may lightly grease them with a little oil or butter before cooking the first waffle, especially if your batter has low fat content.
4. **Pour Batter:** Open the waffle maker and carefully pour approximately 150-200ml (about 1/2 to 3/4 cup) of batter onto the center of the lower waffle plate. Do not overfill, as batter may overflow when the lid is closed.
5. **Close Lid:** Gently close the lid. Do not force it shut.
6. **Cooking Time:** The cooking time will vary depending on the recipe and your desired browning level. Typically, waffles cook in 3-5 minutes. The red indicator light will cycle on and off during cooking as the thermostat maintains the temperature.
7. **Check Doneness:** Carefully open the lid to check if the waffle is golden brown and cooked to your preference.
8. **Remove Waffle:** Use a heat-resistant wooden or plastic utensil to remove the cooked waffle **Do not use metal utensils** as they can damage the non-stick coating.
9. **Repeat:** Close the lid and wait for the green indicator light to illuminate again before cooking the next waffle.



Image: A person carefully pouring waffle batter from a ladle into the open Severin WA 2103 Waffle Maker, which is preheated and ready for cooking.



Image: A beautifully arranged table with a freshly cooked heart-shaped waffle topped with berries and candies, placed next to the Severin WA 2103 Waffle Maker and various waffle toppings.

## CLEANING AND MAINTENANCE

- Unplug and Cool:** Always unplug the waffle maker from the power outlet and allow it to cool completely before cleaning.
- Wipe Plates:** Wipe the non-stick cooking plates with a soft, damp cloth or sponge. For stubborn residue, you may use a small amount of mild dish soap, then wipe clean with a damp cloth.
- Avoid Abrasives:** Do not use abrasive cleaning pads, steel wool, or harsh detergents, as these can damage the non-stick coating.
- Exterior Cleaning:** Wipe the exterior of the appliance with a damp cloth. Do not immerse the appliance in water or any other liquid.
- Storage:** Once clean and dry, the waffle maker can be stored vertically to save space. Use the integrated cable winder to keep the cord tidy.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Waffle maker does not heat up.	Not plugged in; power outlet malfunction; appliance fault.	Ensure the appliance is properly plugged in. Check the power outlet with another device. If the problem persists, contact customer service.
Waffles stick to the plates.	Plates not sufficiently greased; batter too sticky; plates not clean.	Lightly grease plates before each waffle. Adjust batter recipe. Ensure plates are clean before use. Avoid metal utensils.
Waffles are not evenly cooked or too pale/dark.	Incorrect thermostat setting; insufficient preheating; uneven batter distribution.	Adjust the thermostat setting. Ensure the green indicator light is on before adding batter. Distribute batter evenly.
Smoke or odor during use (after first use).	Food residue on plates; excessive grease.	Clean the waffle plates thoroughly after each use. Use less grease if applying directly to plates.

## TECHNICAL SPECIFICATIONS

---

**Brand:** Severin

**Model Number:** S72103

**Product Name:** WA 2103 Waffle Maker

**Color:** Black

**Dimensions (L x W x H):** 20.5 x 25.4 x 10.2 cm (approx. 8.1 x 10 x 4 inches)

**Weight:** 1.61 kg (approx. 3.55 lbs)

**Power:** 1300 Watts

**Voltage:** 220 Volts

**Material:** Stainless Steel (housing accents)

**Special Features:** Heat-resistant body, non-stick plates, indicator lights (operation/temperature), adjustable thermostat, cord storage.

**Included Components:** Waffle maker, user manual.



Image: A visual representation of the Severin WA 2103 Waffle Maker with its key dimensions labeled: 20.3cm length, 25.5cm width, and 10.5cm height.

## WARRANTY AND SUPPORT

This Severin WA 2103 Waffle Maker comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or spare parts inquiries, please contact Severin customer service. Please have your model number (S72103) and proof of purchase ready.

Spare parts are guaranteed to be available for 1 year from the date of purchase.

You can find more information and contact details on the official Severin website: [www.severin.com](http://www.severin.com)