

## Kludi 388700575

# Kludi Zenta Shower Tap Instruction Manual

Model: 388700575

## INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Kludi Zenta single lever shower tap, model 388700575. Please read these instructions carefully before installation and use to ensure proper function and longevity of the product. Keep this manual for future reference.

Image: The Kludi Zenta shower tap, featuring a polished chrome finish, installed and in use, demonstrating its sleek design and functionality.

## SAFETY INFORMATION

Always observe general safety precautions during installation and maintenance. Ensure the water supply is turned off before beginning any work. If you are unsure about any step, consult a qualified professional. Do not use abrasive cleaners or harsh chemicals on the tap's surface, as this may damage the finish.

## PACKAGE CONTENTS

Verify that all components are present before starting the installation:

- 1 x Kludi Zenta Shower Tap (Chrome, Model 388700575)
- Mounting Set
- User Manual (this document)

## SETUP AND INSTALLATION

The Kludi Zenta shower tap is designed for wall mounting. Follow these steps for proper installation:

- 1. Prepare the Installation Area:** Ensure the wall surface is clean and suitable for mounting. Turn off the main water supply.

2. **Install Eccentric Connections:** The tap uses eccentric connections. Adjust them to the correct distance ( $150 \pm 17$  mm) to align with the tap's inlets. Ensure a secure, watertight seal.
3. **Mount the Tap:** Secure the shower tap to the eccentric connections. The tap features a G 1/2 shower outlet.
4. **Check for Leaks:** Once installed, slowly turn on the main water supply and check all connections for leaks.

#### Key Dimensions:

**Overall Width:** 190 mm

**Center-to-Center Distance (Eccentric Connections):**  $150 \pm 17$  mm

**Shower Outlet (G 1/2) Diameter:**  $\text{Ø}70$  mm

**Spout Reach:** 200 mm

**Tap Width:** 190 mm

**Product Dimensions:** 7.87 x 7.48 x 4.33 inches (200 x 190 x 110 mm approx.)



Image: Technical diagram illustrating the key dimensions and connection points for the Kludi Zenta shower tap, essential for accurate installation.

## OPERATING INSTRUCTIONS

---

The Kludi Zenta shower tap features a single lever for controlling both water flow and temperature. The ceramic head includes a hot water outlet limiter for safety and energy efficiency.

- **Water Flow:** Lift the lever to increase water flow. Push down to decrease or stop the flow.
- **Temperature Control:** Move the lever left for hot water and right for cold water. The ceramic head's limiter helps prevent accidental scalding by restricting the maximum hot water temperature.
- **Shower Outlet:** The tap includes a G 1/2 shower outlet for connecting a shower hose and head (not included).

## MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your shower tap.

- **Cleaning:** Clean the tap regularly with a soft cloth and mild soap or a non-abrasive cleaner specifically designed for chrome finishes. Rinse thoroughly with clean water and dry with a soft cloth to prevent water spots.
- **Avoid Harsh Chemicals:** Do not use abrasive sponges, scouring agents, or cleaners containing alcohol, ammonia, or phosphoric acid, as these can damage the chrome finish.
- **Check Connections:** Periodically check all connections for tightness to prevent leaks.

## TROUBLESHOOTING

---

If you encounter issues with your Kludi Zenta shower tap, refer to the following common troubleshooting tips:

- **Low Water Flow:** Check if the main water supply is fully open. Inspect the shower head for blockages or limescale buildup.

- **Leaks from Connections:** Ensure all connections are tightened properly. If leaks persist, check the seals and O-rings for damage and replace if necessary.
- **Temperature Issues:** If the water temperature is inconsistent, ensure both hot and cold water supplies are functioning correctly. The ceramic head's hot water limiter might need adjustment if the maximum hot water temperature is too low (consult a professional).
- **Stiff Lever:** Mineral deposits can sometimes cause the lever to become stiff. Gentle cleaning around the base of the lever might help. If the issue persists, the ceramic cartridge may need inspection by a professional.

For problems not listed here or if troubleshooting steps do not resolve the issue, please contact Kludi customer support or a qualified plumber.

## SPECIFICATIONS

<b>Brand</b>	Kludi
<b>Model Name</b>	Zenta - 388700575
<b>Part Number</b>	388700575
<b>Recommended Uses</b>	Shower
<b>Mounting Type</b>	Wall Mount
<b>Installation Type</b>	Wall-Mount
<b>Finish Type</b>	Polished Chrome
<b>Material</b>	Ceramic (Handle, Head)
<b>Color</b>	Gray (Chrome finish)
<b>Number of Handles</b>	1 (Single Lever)
<b>Spout Reach</b>	200 Millimeters
<b>Product Dimensions</b>	7.87 x 7.48 x 4.33 inches (200 x 190 x 110 mm)
<b>Item Weight</b>	3.23 pounds
<b>Flow Class</b>	A
<b>Shower Outlet</b>	G 1/2
<b>Special Features</b>	Eccentric connections, Ceramic head with hot water outlet limiter, Non-return valve

## WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please contact Kludi customer service directly. Refer to the official Kludi website or the packaging for specific contact details and warranty terms applicable to your region.

**Manufacturer:** Kludi

