

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Yamaha](#) /

› [Yamaha WS-904A Heavy Duty Tom Stand with 3-Hole Receiver 900 Series Instruction Manual](#)

Yamaha WS-904A

Yamaha WS-904A Heavy Duty Tom Stand with 3-Hole Receiver 900 Series Instruction Manual

Model: WS-904A

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your Yamaha WS-904A Heavy Duty Tom Stand with 3-Hole Receiver, 900 Series. This professional-grade double tom stand is engineered for reliability, durability, and versatility, utilizing Yamaha's renowned manufacturing processes. Please read this manual thoroughly before using the product to ensure safe and optimal performance.

SAFETY INFORMATION

- Always ensure all clamps and fasteners are securely tightened before use to prevent instruments from falling.
- Do not exceed the weight capacity of the stand. Overloading can cause instability and damage.
- Place the stand on a stable, level surface to prevent tipping.
- Keep hands and fingers clear of moving parts during adjustment to avoid pinching.
- Regularly inspect the stand for any signs of wear, damage, or loose components. Do not use if damaged.

PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Yamaha WS-904A Heavy Duty Tom Stand (900 Series)
- 1 x 3-Hole Receiver
- Note: CLs (Tom Holders/Clamps) are not included and must be purchased separately.*

SETUP

Follow these steps to set up your tom stand:

- 1. Unfold the Legs:** Carefully unfold the double-braced legs of the stand until they are fully extended and

stable. Ensure the stand is placed on a flat, level surface.

2. **Adjust Height:** Loosen the height adjustment clamp on the main shaft. Extend or retract the upper section to your desired height. This stand is designed to go lower than many other Yamaha double tom stands, making it ideal for hanging floor toms. Tighten the clamp securely once the desired height is achieved.
3. **Attach the 3-Hole Receiver:** The 3-hole receiver is designed to accept compatible tom holders or cymbal arms (not included). Insert the receiver into the top tube of the stand and secure it with the provided clamp.
4. **Mount Toms/Cymbals:** Insert your tom holders or cymbal arms into the holes of the receiver. Adjust their positions and angles as needed, then tighten their respective clamps to secure them firmly.



Image: The Yamaha WS-904A Heavy Duty Tom Stand with its double-braced legs and 3-hole receiver. This image shows the stand fully assembled and ready for tom holders.

OPERATING INSTRUCTIONS

Once the stand is set up and your instruments are mounted, ensure all adjustments are secure. Periodically check the stability of the stand during use, especially if making dynamic movements or playing vigorously. The heavy-duty construction and double-braced legs provide excellent stability for multiple drums and cymbals.

- **Adjusting Tom/Cymbal Position:** Loosen the clamp on the 3-hole receiver or the individual tom/cymbal arm to reposition. Re-tighten firmly once adjusted.
- **Stability Check:** Before each playing session, gently shake the stand to confirm all components are tight and the stand is stable.

MAINTENANCE

Proper maintenance will extend the life of your tom stand:

- **Cleaning:** Wipe down the stand with a soft, dry cloth after each use to remove dust and fingerprints. For stubborn grime, use a slightly damp cloth and dry thoroughly. Avoid abrasive cleaners.
- **Lubrication:** Periodically apply a small amount of silicone-based lubricant to the moving parts, such as the height adjustment mechanism, to ensure smooth operation.
- **Inspection:** Regularly check all screws, bolts, and clamps for tightness. Tighten any loose fasteners to prevent wobbling or component failure. Inspect rubber feet for wear.
- **Storage:** When not in use, collapse the stand and store it in a dry, temperate environment to prevent rust and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Legs not fully extended; clamps not tightened; uneven surface.	Ensure legs are fully spread. Tighten all clamps. Move stand to a level surface.
Tom/cymbal holder slips.	Clamp not tight enough; excessive weight.	Re-tighten the clamp firmly. Ensure the instrument's weight does not exceed the holder's capacity.
Difficulty adjusting height.	Clamp too tight; dirt/grime in the shaft; lack of lubrication.	Loosen the clamp. Clean the shaft and apply a small amount of lubricant.

SPECIFICATIONS

- **Model:** WS-904A
- **Series:** 900 Series
- **Type:** Heavy Duty Tom Stand with 3-Hole Receiver
- **Base Type:** Double-braced legs
- **Item Weight:** 11.15 pounds (5.06 kg)
- **Product Dimensions (L x W x H):** 25.2 x 7.68 x 6.89 inches (64.0 x 19.5 x 17.5 cm)
- **Assembly Required:** No (Stand comes pre-assembled)
- **UPC:** 086792892832

WARRANTY AND SUPPORT

Warranty: This Yamaha WS-904A Heavy Duty Tom Stand is covered by a **5-year warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. Please retain your proof of purchase for warranty claims.

Support: For technical assistance, spare parts, or warranty service, please contact Yamaha customer support through their official website or authorized service centers. Refer to the official Yamaha website for the most current contact information and support resources.

[Visit Yamaha Official Website](#)

