

Kikkerland MH35-BK

Kikkerland Photo and Card Holder with 8 Magnets Instruction Manual

Model: MH35-BK

- Introduction
- Package Contents
- Setup
- Operating Instructions
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. INTRODUCTION

The Kikkerland Photo and Card Holder provides a simple and elegant solution for displaying your photos, cards, and memos. It features a weighted steel cable and eight strong neodymium magnets, allowing for easy arrangement and rearrangement of your displayed items.

2. PACKAGE CONTENTS

- 1 x Weighted Steel Cable (58 inches / 147 cm)
- 8 x Neodymium Magnets

3. SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove the steel cable and magnets from the packaging.
2. **Choose a Location:** Select a suitable location on a wall or ceiling where you wish to display your items. Ensure the surface can support the weight of the cable and any items you plan to attach.
3. **Hang the Cable:** The cable features a loop at one end. Use a hook, nail, or appropriate wall fastener (not included) to securely hang the cable. The weighted end will ensure the cable hangs straight.
4. **Attach Photos/Cards:** Place your photo, card, or memo against the steel cable. Secure it by placing one of the neodymium magnets on top of the item, pressing it against the cable. The magnet will hold the item in place.



Image 1: The Kikkerland Photo and Card Holder in use, displaying multiple photos.

4. OPERATING INSTRUCTIONS

The photo and card holder is designed for ease of use and flexibility in displaying your items.

- **Changing Items:** To replace a displayed item, simply remove the magnet, swap the item, and re-attach the magnet.
- **Magnet Strength:** The included neodymium magnets are strong. They are designed to hold standard photos, postcards, and paper memos securely. For thicker items, consider using two magnets or ensuring the item is not excessively heavy.
- **Arrangement:** You can arrange your items at any point along the 58-inch cable. The weighted bottom ensures the cable remains taut and straight, regardless of the number or position of items.

5. MAINTENANCE

- **Cleaning:** Wipe the steel cable and magnets with a soft, dry cloth to remove dust. Avoid using abrasive cleaners or solvents, as these may damage the finish.
- **Magnet Care:** Handle magnets with care. While strong, they can be brittle and may chip or break if dropped or allowed to snap together forcefully. Keep magnets away from electronic devices and magnetic storage media.
- **Storage:** If storing the holder, coil the cable neatly and keep the magnets in a safe place to prevent loss.

6. TROUBLESHOOTING

Problem: Magnets are not holding items securely.

Solution: Ensure the item is not too thick or heavy for a single magnet. Try using two magnets for larger or heavier items. Verify that the magnets are placed directly against the steel cable with the item in between.

Problem: Cable is not hanging straight.

Solution: Check that the cable is hung from a single, stable point. The weighted end is designed to keep it straight; ensure it is not obstructed or resting on a surface.

7. SPECIFICATIONS

Brand	Kikkerland
Model Number	MH35-BK
Color	Black
Cable Length	58 inches (approx. 147 cm)
Magnets Included	8 Neodymium Magnets
Mounting Type	Wall Mount / Ceiling Mount
Frame Material	Metal
Item Weight	1.28 ounces (approx. 36 grams)

8. WARRANTY AND SUPPORT

For information regarding warranty, returns, or product support, please refer to the retailer's policy where the product was purchased or visit the official Kikkerland website. Keep your proof of purchase for any warranty claims.

© 2023 Kikkerland Design Inc. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0029SHUTA>

More documents and user manuals: <https://manuals.plus/>