

Sharper Image 1624596

Sharper Image 10x25 Camera Binoculars User Manual

Model: 1624596

INTRODUCTION

This manual provides comprehensive instructions for the proper setup, operation, and maintenance of your Sharper Image 10x25 Camera Binoculars. These binoculars combine powerful optical magnification with a digital camera, allowing you to observe distant subjects and capture images simultaneously. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The Sharper Image 10x25 Camera Binoculars are designed for versatility, offering both optical viewing and digital image capture. Key features include:

- **10x Magnification:** Provides a clear, magnified view of distant objects.
- **25mm Objective Lenses:** Ensures sufficient light gathering for bright images.
- **Integrated Digital Camera:** Captures still images of your observations.
- **LCD Display:** Shows the current photo count.
- **UV Coated Optics:** Reduces glare for improved viewing clarity.
- **USB Connectivity:** For transferring captured images to a computer.
- **Compact and Portable Design:** Easy to carry for outdoor activities.



Figure 1: The Sharper Image 10x25 Camera Binoculars shown with its retail packaging. The image highlights the compact design of the binoculars and illustrates its dual function of magnification and digital image capture.

SETUP

1. Battery Installation

1. Locate the battery compartment on the binoculars.
2. Open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment. **Note:** Batteries are not included.
4. Close the battery compartment cover securely.

2. Initial Focus Adjustment

1. Hold the binoculars up to your eyes.
2. Adjust the interpupillary distance by moving the two barrels closer or further apart until you see a single, clear circular field of view.
3. Use the central focus knob to bring a distant object into sharp focus.

OPERATING INSTRUCTIONS

1. Using the Binoculars

- Adjust the focus using the central focus knob for clear viewing.
- For users with varying eyesight, the right eyepiece may have a diopter adjustment ring. Rotate this ring until the image in the right eyepiece is sharp, then use the central focus knob for overall focus.

2. Taking Photos

1. Ensure batteries are installed and the device is powered on.
2. Aim the binoculars at your desired subject.
3. Press the camera shutter button (location may vary, refer to device markings) to capture an image.
4. The LCD display will show the number of photos taken.

3. Downloading Photos to a PC

1. Connect the binoculars to your computer using the provided USB cable.
2. Your computer should recognize the device as a removable storage device or camera.
3. Access the stored images on the binoculars.
4. Transfer the photos to your computer.
5. Use the included photo imaging software (if applicable) to view, adjust, and title your images.

MAINTENANCE

Cleaning the Lenses

- Use the included lens cleaning cloth or a soft, lint-free cloth specifically designed for optical lenses.
- Gently wipe the lens surfaces to remove dust and smudges.
- Avoid using abrasive materials or harsh chemicals, as these can damage the lens coatings.
- For stubborn dirt, a small amount of lens cleaning fluid applied to the cloth (not directly to the lens) may be used.

General Care

- Store the binoculars in a dry, cool place when not in use.
- Protect the lenses from scratches by using lens caps (if provided).
- Remove batteries if the device will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **No Power:**
 - Ensure batteries are correctly inserted with proper polarity.
 - Replace old batteries with fresh AAA batteries.
- **Blurry Images (Optical):**
 - Adjust the central focus knob.
 - Clean the objective and eyepiece lenses.
 - Ensure the interpupillary distance is correctly set for your eyes.
- **Camera Not Taking Photos:**
 - Check battery level.
 - Ensure the device is powered on.
 - Verify if the internal memory is full (if applicable, though not specified for this model).

• **Cannot Download Photos:**

- Ensure the USB cable is securely connected to both the binoculars and the computer.
- Try a different USB port on your computer.
- Restart your computer and the binoculars.
- Check if necessary drivers or software are installed (if required by the included software).

SPECIFICATIONS

Feature	Detail
Model Number	1624596
Magnification	10x
Objective Lens Diameter	25mm
Material	Polycarbonate (PC)
Dimensions (Product)	30.73 x 8.13 x 18.03 cm (12.1 x 3.2 x 7.1 inches)
Weight	1.18 kg
Power Source	2 x AAA batteries (not included)
Special Features	Focus Knob, Portable

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Sharper Image customer service directly. Contact details are typically available on the manufacturer's official website or product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question