

## Severin CM 2198

# Severin CM 2198 Crepe Maker Instruction Manual

Model: CM 2198 | Brand: Severin

## 1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation, maintenance, and care of your Severin CM 2198 Crepe Maker. Please read these instructions thoroughly before first use and keep them for future reference.

## 2. SAFETY INSTRUCTIONS

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep out of reach of children.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid touching hot surfaces. Use handles or knobs.
- Use only accessories recommended by the manufacturer.

## 3. PRODUCT OVERVIEW

The Severin CM 2198 is an electric crepe maker designed for convenient preparation of crepes and pancakes. It features a non-stick coated crepe pan with a diameter of approximately 30 cm.

### Components:

- Crepe Maker Unit with non-stick cooking surface
- Wooden Spatula
- Wooden Crepe Turning Stick

### Key Features:

- High-quality plastic housing
- Variable thermostat with 6 power levels
- On/Off switch
- Pilot light and ready-to-use indicator
- Cable storage
- Non-slip feet



Figure 1: The Severin CM 2198 Crepe Maker with a prepared crepe.



Figure 2: The wooden spatula and crepe turning stick provided with the appliance.

## 4. SETUP

---

1. **Unpacking:** Carefully remove the crepe maker and all accessories from the packaging. Retain packaging for storage or disposal.
2. **Initial Cleaning:** Before first use, wipe the non-stick cooking surface with a damp cloth and dry thoroughly. Clean the wooden spatula and turning stick with warm soapy water and rinse well.
3. **Placement:** Place the crepe maker on a flat, stable, and heat-resistant surface. Ensure there is adequate ventilation around the appliance.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet. Note that the power cord is approximately 86.5 cm long, so position the appliance close to an outlet.

## 5. OPERATING INSTRUCTIONS

---

1. **Preheating:** Turn the appliance on using the On/Off switch. The pilot light will illuminate. Adjust the variable thermostat to your desired heat setting (1-6). The ready-to-use indicator will light up when the desired temperature is reached.

2. **Preparing Crepes:** Pour a small amount of crepe batter onto the center of the hot non-stick surface.
3. **Spreading the Batter:** Immediately use the wooden crepe turning stick to spread the batter evenly in a circular motion across the entire cooking surface.
4. **Cooking:** Cook the crepe until the edges begin to brown and the surface appears set.
5. **Flipping:** Use the wooden spatula to gently lift the edge of the crepe and then flip it over to cook the other side.
6. **Removal:** Once cooked to your preference, remove the crepe from the surface using the wooden spatula.
7. **Repeat:** Continue with remaining batter, adjusting the temperature as needed.



Figure 3: The control panel showing the On/Off switch, pilot light, and variable thermostat.





Figure 4: Spreading crepe batter evenly with the wooden turning stick.

## 6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your crepe maker.

1. **Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Cleaning the Cooking Surface:** The non-stick coating prevents food from sticking. Simply wipe the cooled cooking surface with a soft, damp cloth or paper towel. For stubborn residue, a small amount of mild dish soap can be used, followed by wiping with a clean, damp cloth. Ensure no water enters the electrical components.
3. **Cleaning Accessories:** Wash the wooden spatula and turning stick with warm soapy water, rinse, and dry thoroughly.
4. **Exterior Cleaning:** Wipe the exterior housing with a damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the surface.
5. **Storage:** Once clean and dry, the crepe maker can be stored in a cool, dry place. Utilize the cable storage feature to keep the cord tidy.

## 7. TROUBLESHOOTING

- **Crepes sticking to the surface:**
  - Ensure the cooking surface is clean and free of residue.
  - Make sure the appliance is fully preheated before adding batter.
  - A very light coating of cooking oil or butter can be applied for the first crepe, though the non-stick surface typically does not require it.
- **Uneven cooking:**
  - Allow sufficient preheating time for the entire surface to reach a consistent temperature.
  - Ensure the batter is spread quickly and evenly across the surface using the turning stick.
- **Appliance not turning on:**
  - Check that the power cord is securely plugged into a working electrical outlet.
  - Verify that the On/Off switch is in the 'On' position.
  - Check your household's circuit breaker or fuse box.

## 8. SPECIFICATIONS

Feature	Specification
Model Number	CM 2198
Brand	Severin
Wattage	1000 watts
Voltage	240 Volts
Special Feature	Non-Stick Coating
Color	Black
Material	Plastic, Non-stick
Item Weight	1.54 Kilograms (3.38 pounds)
Product Dimensions	12.01 x 13.58 x 3.15 inches
Included Components	Wooden spatula, Wooden crepe turning stick
Number of Settings	6 (variable thermostat)

## 9. WARRANTY AND SUPPORT

Your Severin CM 2198 Crepe Maker comes with **alimited warranty**. For specific details regarding the warranty period and coverage, please refer to the warranty card included with your product or contact Severin customer support.

For technical assistance, spare parts, or any questions regarding your appliance, please visit the official

Severin website or contact their customer service department. Contact information can typically be found in the product packaging or on the manufacturer's website.

## Related Documents - CM 2198

 <p><b>SEVERIN</b></p> <p><b>JG 3521</b></p> <p>DE Bedienungsanleitung 4 EN Instructions for use 5 FR Mode d'emploi 6 NL Gebruiksaanwijzing 7 IT Istruzioni d'uso 8 ES Instrucciones de uso 9 PT Manual de instruções 10 PL Instrukcja obsługi 11 GR Οδηγός χρήσης 12</p> <p>DE Digitaler Joghurtbereiter 4 EN Digital yogurt maker 5 FR Machine à yaourt digital 6 NL Digitale joghurtbereider 7 IT Digitali yogurtizzatore 8 ES Digital yogurter 9 PT Digitalizador de iogurte 10 PL Digitalny przyrząd do jogurtu 11 GR Μηχανή ψηφιακή για γιαούρτι 12</p>	<p><a href="#">SEVERIN JG 3521 Digitaler Joghurtbereiter Bedienungsanleitung</a></p> <p>Entdecken Sie den SEVERIN JG 3521 Digitalen Joghurtbereiter. Diese Anleitung bietet detaillierte Informationen zur Verwendung, Sicherheit und Rezepten für die Zubereitung von hausgemachtem Joghurt.</p>
 <p><b>SEVERIN</b></p> <p><b>EZ 7405 / EZ 7406</b></p> <p>DE Bedienungsanleitung 4 EN Instructions for use 5 FR Mode d'emploi 6 NL Gebruiksaanwijzing 7 IT Istruzioni d'uso 8 ES Instrucciones de uso 9 PT Manual de instruções 10 PL Instrukcja obsługi 11 GR Οδηγός χρήσης 12</p> <p>DE Eiscremehersteller mit Joghurtfunktion 4 EN Ice cream maker with yogurt function 5 FR Machine à glace avec fonction yaourt 6 NL Ijscreammaker met yoghurtfunctie 7 IT Gelateria con funzione yogurt 8 ES Heladeria con función yogur 9 PT Máquina de gelado com função iogurte 10 PL Lodowarka z funkcją jogurtu 11 GR Μηχανή για παγωτό με λειτουργία γιαούρτι 12</p>	<p><a href="#">SEVERIN EZ 7405 / EZ 7406 Ice Cream Maker with Yoghurt Function User Manual</a></p> <p>Comprehensive user manual for the SEVERIN EZ 7405 and EZ 7406 ice cream maker with yoghurt function. Learn about setup, operation, safety instructions, cleaning, and troubleshooting for making ice cream and yoghurt.</p>
 <p><b>SEVERIN</b></p> <p><b>SM 3585</b></p> <p>DE Bedienungsanleitung 4 EN Instructions for use 5 FR Mode d'emploi 6 NL Gebruiksaanwijzing 7 IT Istruzioni d'uso 8 ES Instrucciones de uso 9 PT Manual de instruções 10 PL Instrukcja obsługi 11 GR Οδηγός χρήσης 12</p> <p>DE Induktion-Milchschäumer 4 EN Induction milk frother 5 FR Inducteur à lait 6 NL Inductie melkfoamer 7 IT Induttore a induzione 8 ES Inductor de leche 9 PT Indutor de leite 10 PL Indukcyjny miksownik 11 GR Μηχανή αερίωσης γάλακτος 12</p>	<p><a href="#">Severin SM 3585 Induction Milk Frother User Manual and Instructions</a></p> <p>Comprehensive user manual for the Severin SM 3585 Induction Milk Frother, covering operation, safety, cleaning, and troubleshooting for frothing milk and preparing hot beverages.</p>
 <p><b>SEVERIN</b></p> <p><b>WK 3472</b></p> <p>DE Bedienungsanleitung 4 EN Instructions for use 5 FR Mode d'emploi 6 NL Gebruiksaanwijzing 7 IT Istruzioni d'uso 8 ES Instrucciones de uso 9 PT Manual de instruções 10 PL Instrukcja obsługi 11 GR Οδηγός χρήσης 12</p> <p>DE Wasserkocher 4 EN Electric kettle 5 FR Bouilloire électrique 6 NL Elektrische waterkoker 7 IT Bollitore elettrico 8 ES Hervidor eléctrico 9 PT Fervilhador elétrico 10 PL Elektryczny czajnik 11 GR Ηλεκτρικό βραστήρα 12</p>	<p><a href="#">SEVERIN Wasserkocher WK 3472 - Bedienungsanleitung und Sicherheitshinweise</a></p> <p>Finden Sie detaillierte Anleitungen und wichtige Sicherheitshinweise für den SEVERIN Wasserkocher WK 3472. Erfahren Sie mehr über Anschluss, Bedienung, Reinigung und Wartung.</p>
 <p><b>SEVERIN</b></p> <p><b>FKS 8841</b></p> <p>DE Bedienungsanleitung 2 EN Instructions for use 3 FR Mode d'emploi 4 NL Gebruiksaanwijzing 5 IT Istruzioni d'uso 6 ES Instrucciones de uso 7 PT Manual de instruções 8 PL Instrukcja obsługi 9 GR Οδηγός χρήσης 10</p> <p>DE Flaschenkühlschrank 2 EN Refrigerator for bottles 3 FR Réfrigérateur pour bouteilles 4 NL Flessenkoeler 5 IT Refrigeratore per bottiglie 6 ES Refrigerador para botellas 7 PT Refrigirador para garrafas 8 PL Chłodziwa do butelek 9 GR Ψυγείο για μπουκάλια 10</p>	<p><a href="#">SEVERIN FKS 8841 Bedienungsanleitung und Produktdatenblatt</a></p> <p>Entdecken Sie die detaillierte Bedienungsanleitung und das Produktdatenblatt für den SEVERIN FKS 8841 Flaschenkühlschrank. Erfahren Sie mehr über Installation, Bedienung, Sicherheitshinweise und technische Spezifikationen dieses hochwertigen Geräts von SEVERIN.</p>



[SEVERIN FILKA KA 4850/KA 4851 Coffee Maker Safety and Operating Instructions](#)

Comprehensive safety instructions, troubleshooting guide, and technical specifications for the SEVERIN FILKA KA 4850 and KA 4851 automatic filter coffee machines. Learn about proper usage, maintenance, and error codes.