

BOSCH TAS4513UC

Bosch TAS4513UC Tassimo Single-Serve Coffee Brewer Instruction Manual

MODEL: TAS4513UC

Introduction

Thank you for choosing the Bosch TAS4513UC Tassimo Single-Serve Coffee Brewer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before first use and keep them for future reference.

Important Safety Information: Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. Ensure the appliance is placed on a stable, level surface and is not accessible to children.

1. Setup

- Unpacking:** Carefully remove all packaging materials from the coffee brewer. Retain packaging for future transport if needed.
- Initial Cleaning:** Before first use, wipe the exterior of the brewer with a damp cloth. Remove the water tank and wash it with warm, soapy water, then rinse thoroughly.
- Water Tank Filling:** Fill the 67-ounce removable water tank with fresh, cold water. Ensure the water level is between the MIN and MAX marks.
- First Use (Priming):**
 - Place an empty cup on the cup stand.
 - Ensure the water tank is filled.
 - Press the brew button to run a cycle without a T-Disc. This primes the system and cleans internal components.
 - Discard the water from the cup.



Image 1: The Bosch TAS4513UC Tassimo Single-Serve Coffee Brewer. This image displays the overall design of the brewer, featuring its black body with red accents, the T-Disc brewing mechanism, and the control panel.

2. Operating Instructions

1. **Power On:** Plug the brewer into a suitable electrical outlet. Press the power button (O | I) located on the side of the unit. The LED indicator will illuminate.
2. **Insert T-Disc:** Open the brewing head by lifting the lid. Place a Tassimo T-Disc into the disc holder with the barcode facing down. Close the brewing head firmly until it clicks.
3. **Place Cup:** Position your cup on the adjustable cup stand. Ensure the cup is large enough to hold the

beverage volume.

4. **Start Brewing:** Press the brew button. The brewer will automatically read the barcode on the T-Disc to determine the optimal brewing parameters (water volume, temperature, and brewing time). The brewing process will begin.
5. **Customization:** For some T-Discs, you may be able to adjust the beverage strength or size by pressing and holding the brew button during the brewing cycle. Refer to the T-Disc packaging for specific instructions.
6. **Completion:** The brewing process will stop automatically. Remove your beverage and enjoy. The brewer will enter standby mode after a period of inactivity.



Image 2: Detail of the T-Disc insertion area and cup stand. This view highlights where the T-Disc is placed and the adjustable platform for various cup sizes.

3. Maintenance

Regular cleaning and maintenance ensure optimal performance and longevity of your Bosch Tassimo brewer.

- **Daily Cleaning:**
 - After each use, remove and discard the used T-Disc.
 - Wipe the brewing head and T-Disc holder with a damp cloth.
 - Empty and rinse the drip tray and cup stand.
- **Water Tank Cleaning:** The 67-ounce removable water tank should be cleaned regularly with warm, soapy water and rinsed thoroughly.
- **Descaling:** The brewer features a descaling indicator. When illuminated, it indicates that descaling is required. Use a Tassimo-approved descaling solution and follow the instructions provided with the descaling product. Regular descaling prevents mineral buildup and maintains brewing quality.
- **Water Filter Replacement:** The brewer includes MAVEA water filters. Replace the water filter as indicated by the brewer or every 4-6 weeks, depending on water hardness and usage. Refer to the filter instructions for proper replacement.



Image 3: Side view of the Bosch Tassimo brewer, highlighting the removable water tank. This component is crucial for filling and maintaining water quality.

4. Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Brewer does not turn on.	No power supply.	Ensure the power cord is securely plugged into a working electrical outlet. Check the power switch (O I) is in the 'on' position.
No beverage is dispensed.	Water tank empty; T-Disc not inserted correctly; brewing head not closed properly.	Fill the water tank. Ensure the T-Disc is correctly placed with the barcode facing down. Close the brewing head firmly until it clicks.
Beverage tastes weak or watery.	Incorrect T-Disc; descaling needed; water filter needs replacement.	Ensure you are using the correct T-Disc for your desired beverage. Perform a descaling cycle if the indicator is on. Replace the water filter.
Grounds in the cup.	T-Disc puncture issue; brewing head not clean.	Inspect the T-Disc for damage before insertion. Clean the T-Disc holder and brewing head thoroughly to remove any residue.
Descaling indicator light is on.	Mineral buildup in the system.	Perform a descaling cycle using a Tassimo-approved descaling solution as per instructions.

5. Specifications

Brand:	BOSCH
Model Number:	TAS4513UC
Product Dimensions:	8"D x 8"W x 11"H
Item Weight:	8.2 pounds
Color:	Black (with Red accents)
Water Tank Capacity:	67 ounces (removable)
Special Features:	Removable Tank, Water Filter, Barcode Technology
Coffee Input Type:	Pre-packaged coffee discs (T-Discs)
Operation Mode:	Fully Automatic
Included Components:	Filter (2 MAVEA water filters)

6. Warranty and Support

Warranty Information: This Bosch TAS4513UC Tassimo Single-Serve Coffee Brewer comes with a 1-year parts-and-labor warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

Customer Support: For technical assistance, warranty service, or to order replacement parts, please contact Bosch customer service. Refer to the official Bosch website or your purchase documentation for current contact information.