

iLuv iMM153BLU

iLuv Vibro I Bed Shaker 30-Pin iPod Alarm Clock Speaker Dock

MODEL: IMM153BLU

User Manual

[Introduction](#)

[Package Contents](#)

[Product Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. Introduction

This manual provides instructions for the setup, operation, and maintenance of your iLuv Vibro I Bed Shaker 30-Pin iPod Alarm Clock Speaker Dock (model iMM153BLU). This device combines a digital dual alarm clock, an iPod docking station for charging and playback, an FM radio, and a unique bed shaker accessory designed to provide a strong vibration for waking users.

2. Package Contents

Verify that all items are present in the package:

- iLuv Vibro I Alarm Clock Speaker Dock (iMM153BLU)
- Bed Shaker Unit
- AC Power Adapter
- User Manual (this document)

3. Product Overview

Familiarize yourself with the components and controls of your iLuv Vibro I unit.



Figure 1: Front view of the iLuv Vibro I unit with an iPod docked and the bed shaker connected.

3.1 Main Unit Controls and Display

- **iPod Dock:** Located at the top center, for connecting compatible iPod models.
- **SNOOZE / DIMMER Button:** Large button on top for snooze function and adjusting display brightness.
- **Volume Buttons:** Typically located on the top panel, marked with '+' and '-' symbols.
- **Navigation/Playback Buttons:** Buttons for Play/Pause, Skip Forward/Backward, and Menu navigation.
- **Display Screen:** Digital display showing time, alarm status, and FM frequency.
- **Speakers:** Integrated speakers on the front panel for audio output.
- **FM Antenna:** Wire antenna extending from the rear for radio reception.
- **Auxiliary Input:** 3.5mm jack on the rear for connecting external audio devices.
- **Bed Shaker Port:** Jack on the rear for connecting the bed shaker unit.

3.2 Bed Shaker Unit



Figure 2: The compact bed shaker unit with its connecting cable.

The bed shaker is a small, disc-shaped device designed to vibrate intensely when an alarm is activated. It connects to the main unit via a cable and is typically placed under a pillow or mattress for tactile alarm notification.

4. Setup

4.1 Power Connection

1. Connect the AC power adapter to the DC IN jack on the rear of the iLuv Vibro I unit.
2. Plug the other end of the AC power adapter into a standard wall outlet.
3. The unit's display will illuminate.

4.2 Battery Backup (Optional)

For backup power to maintain time and alarm settings during a power outage, install 2 AAA batteries (not included) into the battery compartment located on the bottom of the unit. This backup power does not operate the speakers or charge an iPod.

4.3 Connecting the Bed Shaker

Plug the cable from the bed shaker unit into the designated "SHAKER" port on the rear of the iLuv Vibro I. Place the bed shaker under your pillow or mattress.

5. Operating Instructions

5.1 Setting the Time

1. Press and hold the **TIME SET** button (location may vary, refer to unit markings).
2. Use the **HOURL** and **MINUTE** buttons (often combined with navigation buttons) to adjust the time.
3. Press **TIME SET** again to confirm.

5.2 Setting Alarms (Alarm 1 and Alarm 2)

The unit features two independent alarms.

1. Press and hold either **ALARM 1 SET** or **ALARM 2 SET** button.
2. Use the **HOURL** and **MINUTE** buttons to set the desired alarm time.
3. Press the respective **ALARM SET** button again to confirm the time.
4. Repeatedly press the **ALARM SET** button to cycle through alarm modes: **iPod**, **FM Radio**, **Buzzer**, or **Bed Shaker** (or a combination). The selected icon will appear on the display.
5. To activate/deactivate an alarm, press the **ALARM ON/OFF** button for the corresponding alarm.

5.3 iPod Docking and Playback

The iLuv Vibro I is compatible with 30-pin iPod models (1st-4th generation iPod touch, classic, 1st-6th generation iPod nano, and iPod with video).

1. Carefully place your iPod onto the 30-pin connector in the docking station. Ensure it is seated firmly.
2. The iPod will begin charging automatically.
3. To play music, select your desired track or playlist on your iPod.
4. Use the **PLAY/PAUSE**, **SKIP**, and **VOLUME** buttons on the iLuv unit or your iPod to control playback.

5.4 FM Radio Operation

1. Press the **FM** button to switch to FM radio mode.
2. Extend the FM antenna for optimal reception.
3. Use the **TUNE +/-** buttons to manually tune to a station.
4. To auto-scan for stations, press and hold the **TUNE +/-** button.
5. To save a preset: Tune to the desired station, then press and hold a **PRESET NUMBER** button (e.g., M1-M10) until the display confirms.
6. To recall a preset: Briefly press the corresponding **PRESET NUMBER** button.

5.5 Auxiliary Input

Connect any audio device with a 3.5mm audio output to the **AUX IN** jack on the rear of the unit using a 3.5mm audio cable (not included). Press the **AUX** button to switch to auxiliary input mode. Audio playback is controlled from the connected device.

5.6 Snooze and Display Dimmer

- **Snooze:** When an alarm sounds, press the large **SNOOZE / DIMMER** button to temporarily silence the alarm for a set period (e.g., 9 minutes). The alarm will sound again after the snooze period.
- **Dimmer:** When the alarm is not sounding, repeatedly press the **SNOOZE / DIMMER** button to cycle through different display brightness levels.

6. Maintenance

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the unit. Do not use liquid cleaners or abrasive materials.
- **Storage:** If storing the unit for an extended period, remove the backup batteries.
- **Environment:** Avoid exposing the unit to extreme temperatures, humidity, or direct sunlight.

7. Troubleshooting

Problem	Possible Cause / Solution
Unit does not power on.	Ensure the AC power adapter is securely connected to both the unit and a working wall outlet.
iPod is not charging or playing.	<ul style="list-style-type: none">◦ Ensure the iPod is correctly seated in the 30-pin dock connector.◦ Verify the iPod model is compatible with the 30-pin dock.◦ Check if the unit is in iPod mode.
No sound from speakers.	<ul style="list-style-type: none">◦ Adjust the volume level on the unit and/or the connected iPod/auxiliary device.◦ Ensure the correct input source (iPod, FM, AUX) is selected.◦ If using AUX, check the audio cable connection.
Alarm does not sound or bed shaker does not vibrate.	<ul style="list-style-type: none">◦ Ensure the alarm is set and activated (alarm icon visible on display).◦ Verify the alarm source (iPod, FM, Buzzer, Shaker) is correctly selected.◦ Check the bed shaker cable connection to the unit.◦ If using iPod/FM for alarm, ensure volume is not muted or too low.
Poor FM radio reception.	Extend and reposition the FM wire antenna for better signal. Try moving the unit to a different location.
Display is too bright/dim.	Press the SNOOZE / DIMMER button repeatedly to adjust brightness.

8. Specifications

Brand	iLuv
Model Number	iMM153BLU
Color	Blue
Compatible Devices	iPod touch (1st, 2nd, 3rd, 4th gen), iPod classic, iPod nano (1st, 2nd, 3rd, 4th, 5th, 6th gen), iPod with video. (30-pin connector)
Item Weight	5 Pounds
Power Source	AC Power Adapter (Battery backup: 2 x AAA, not included)
Radio Tuner	FM with 10 programmable presets
Alarm Features	Dual alarm, Wake to iPod, FM radio, Buzzer, or Bed Shaker

9. Warranty and Support

This iLuv product is covered by a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For technical support, warranty claims, or further assistance, please visit the official iLuv website or contact their customer service department. Keep your proof of purchase for warranty service.