

[Manuals.plus](#) /

› [Magic Sing](#) /

› Magic Sing ET-V11 Traditional Children Holiday Song Chip User Manual

Magic Sing ET-V11

Magic Sing ET-V11 Traditional Children Holiday Song Chip User Manual

Model: ET-V11 (Mag-0135)

Brand: Magic Sing

1. INTRODUCTION

This manual provides instructions for the Magic Sing ET-V11 Traditional Children Holiday Song Chip. This song chip is designed to expand the song library of compatible Magic Sing Karaoke Systems, offering 234 built-in traditional children's holiday songs.



Image: Magic Sing Song Chip. This image displays a typical Magic Sing song chip, which is inserted into compatible karaoke systems to add new song collections.

2. COMPATIBILITY

The Magic Sing ET-V11 song chip is compatible with the following Magic Sing Karaoke System microphones and models:

- ET-1000 (Black)
- ET-2000 (Silver)
- ET-3000
- LS-3700 Series
- ED-6000
- ED-7000
- ED-8000
- ED-11000

- ED-9000
- LS-2100 Series
- EG-18K (EG-18000)
- ET-4500
- ET-9K (ET-9000)
- ET-12K (ET-12000)
- ET-13K (ET-13000)
- ET-18K (ET-18000)
- ET-19KV (ET-19000V)
- ET-21KV (ET-21000V)
- MT-9K (MT-9000)
- MT-14K (MT-14000)
- MT-15K (MT-15000)

Ensure your Magic Sing system is listed above for proper functionality.

3. SETUP: INSTALLING THE SONG CHIP

1. **Power Off:** Before installation, ensure your Magic Sing Karaoke System is completely powered off and unplugged from the power source.
2. **Locate Chip Slot:** Identify the song chip slot on your Magic Sing microphone or main unit. Refer to your primary system's manual if you are unsure of its location. The slot is typically a small opening designed to securely hold the song chip.
3. **Insert Chip:** Gently insert the ET-V11 song chip into the designated slot. Ensure the gold contacts on the chip align with the connectors in the slot. Apply gentle, even pressure until the chip is fully seated. Do not force the chip.
4. **Secure Chip (if applicable):** Some models may have a latch or cover to secure the chip. Close or engage any securing mechanisms if present.
5. **Power On:** Plug in and power on your Magic Sing Karaoke System. The system should automatically detect the new song chip.
6. **Verify Installation:** Navigate through your system's menu to the song selection screen. The new songs from the ET-V11 chip should now be available for selection.

4. OPERATING THE SONG CHIP

Once installed, the songs from the ET-V11 chip integrate directly into your Magic Sing Karaoke System's song library. No special operation is required for the chip itself.

- **Song Selection:** Use your Magic Sing system's remote control or microphone buttons to browse and select songs. The new holiday songs will appear alongside your existing song collection.
- **Search Function:** Utilize the system's search function to quickly find specific songs by title or artist from the ET-V11 chip.
- **Song Lists:** Refer to the included song lists to identify the specific titles available on this chip.

5. MAINTENANCE AND CARE

- **Handling:** Always handle the song chip by its edges to avoid touching the gold contacts. Oils and dirt from fingers can interfere with connectivity.

- **Cleaning:** If the gold contacts appear dirty, gently wipe them with a clean, dry, lint-free cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the song chip in a protective case or a clean, dry environment away from extreme temperatures, direct sunlight, and magnetic fields.
- **Removal:** To remove the chip, ensure the karaoke system is powered off. Gently pull the chip straight out from the slot. Avoid bending or twisting.

6. TROUBLESHOOTING

Chip Not Detected

- **Re-insert Chip:** Power off the system, remove the chip, and re-insert it firmly, ensuring proper alignment.
- **Clean Contacts:** Gently clean the gold contacts on the chip with a dry, lint-free cloth.
- **Check Compatibility:** Verify that your Magic Sing system model is listed as compatible with the ET-V11 chip.
- **System Restart:** Perform a full power cycle of your Magic Sing system (unplug, wait 30 seconds, plug back in).

Songs Not Playing Correctly

- **System Firmware:** Ensure your Magic Sing system's firmware is up to date, if applicable. Consult your system's manual or the Magic Sing website for updates.
- **Other Chips:** If using multiple song chips, ensure they are all properly seated and compatible with each other.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	ET-V11 (Mag-0135)
ASIN	B002B8PZCM
Item Weight	3.48 ounces
Package Dimensions	9.69 x 5 x 0.28 inches
Date First Available	February 28, 2010
Included Content	234 Traditional Children Holiday Songs
Power Source	Battery Powered (for compatible systems, chip itself is passive)
Color Name	Silver, Black (referring to compatible systems, chip color not specified)

8. WARRANTY INFORMATION

Specific warranty details for the Magic Sing ET-V11 song chip are not provided in the product information. Please refer to the warranty documentation included with your Magic Sing Karaoke System or contact Magic Sing customer support for details regarding accessory warranties.

9. CUSTOMER SUPPORT

For further assistance or inquiries regarding the Magic Sing ET-V11 Traditional Children Holiday Song Chip, please contact Magic Sing customer support. Contact information can typically be found on the official Magic Sing website or in the documentation provided with your main karaoke system.

You may also visit the official Magic Sing Store on Amazon for additional product information[Magic Sing Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question