

Domo B3970

Domo B3970 Bread Maker Instruction Manual

Model: B3970 | Brand: Domo

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Domo B3970 Bread Maker. Please read these instructions carefully before first use and keep them for future reference. The Domo B3970 is designed to simplify the bread-making process, offering 12 programs for various bread types, doughs, and even jam.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Avoid contact with moving parts.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or cabinets to allow for proper ventilation.

PARTS IDENTIFICATION

Familiarize yourself with the components of your Domo B3970 Bread Maker:



Figure 1: Front-side view of the white Domo B3970 bread maker, showing the control panel, LCD display, and viewing window.



Figure 2: Close-up of the control panel, displaying buttons for COLOR, LOAF SIZE, START/STOP, MENU, TIME -, and TIME +, along with the LCD display and a list of 12 programs.



Figure 3: Accessories included with the bread maker: the non-stick bread pan, kneading paddle, measuring cup, measuring spoon, and a hook tool for removing the paddle.

- **Housing:** The main body of the appliance.
- **Lid:** Covers the baking chamber, often with a viewing window.
- **Viewing Window:** Allows monitoring of the baking process.
- **Control Panel:** Contains buttons for program selection, time, loaf size, and crust color.
- **LCD Display:** Shows program number, time remaining, and selected settings.
- **Bread Pan:** Removable non-stick pan where ingredients are mixed and baked.
- **Kneading Paddle:** Attaches to the shaft in the bread pan to mix and knead dough.
- **Measuring Cup:** For accurate liquid measurements.
- **Measuring Spoon:** For accurate dry ingredient measurements (e.g., yeast, salt).
- **Hook Tool:** Used to remove the kneading paddle from the baked bread.

SETUP

1. **Unpacking:** Carefully remove the bread maker and all accessories from the packaging. Remove any protective films or stickers.
2. **Initial Cleaning:** Wash the bread pan and kneading paddle with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the appliance with a damp cloth.
3. **Placement:** Place the bread maker on a stable, flat, and heat-resistant surface. Ensure there is adequate ventilation around the appliance, keeping it away from walls or other heat-sensitive objects.
4. **Insert Bread Pan:** Place the bread pan into the baking chamber and press down firmly until it clicks into place.
5. **Attach Kneading Paddle:** Securely attach the kneading paddle onto the shaft inside the bread pan.

OPERATING INSTRUCTIONS

Basic Operation

1. **Add Ingredients:** Follow your recipe carefully. Generally, add liquids first, then dry ingredients, and finally yeast on top of the dry ingredients, keeping it separate from liquids and salt initially.
2. **Close Lid:** Close the lid securely.
3. **Plug In:** Connect the power cord to a grounded electrical outlet. The display will light up, showing the default program (usually Program 1: BASIC) and time.
4. **Select Program:** Press the **MENU** button repeatedly to cycle through the 12 available programs until your desired program is selected.
5. **Select Loaf Size:** Press the **LOAF SIZE** button to choose between 750g and 1100g, if applicable for the selected program.
6. **Select Crust Color:** Press the **COLOR** button to select your preferred crust color: Light, Medium, or Dark.
7. **Set Delay Timer (Optional):** If you wish to delay the start of the baking process, press the **TIME +** or **TIME -** buttons to adjust the delay time. The maximum delay is 13 hours. This time includes the baking cycle duration.
8. **Start Program:** Press the **START/STOP** button once. The indicator light will illuminate, and the bread maker will begin operation.
9. **End of Cycle:** Once the program is complete, the bread maker will beep, and the automatic keep-warm

function may activate (if applicable for the program).

10. **Remove Bread:** Unplug the appliance. Using oven mitts, carefully remove the bread pan by twisting and lifting. Invert the pan to release the bread. If the kneading paddle remains in the bread, use the hook tool to carefully remove it. Allow the bread to cool on a wire rack before slicing.

Program Descriptions

The Domo B3970 offers 12 distinct programs:

- **1. BASIC:** For white and mixed breads, mainly using wheat flour.
- **2. FRENCH:** For light breads made from fine flour.
- **3. WHOLE WHEAT:** For breads with whole wheat flour.
- **4. QUICK:** For quick preparation of white bread.
- **5. SWEET:** For sweet breads with additives like fruit or sugar.
- **6. ULTRA FAST-I:** Very fast baking for smaller loaves.
- **7. ULTRA FAST-II:** Very fast baking for larger loaves.
- **8. DOUGH:** For preparing doughs that will be baked in a conventional oven.
- **9. JAM:** For making homemade jams.
- **10. GLUTEN FREE:** Specifically designed for gluten-free recipes.
- **11. CAKE:** For mixing and baking cakes.
- **12. SANDWICH:** For light, fluffy sandwich bread.
- **13. BAKE:** For baking only, without kneading or rising cycles.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your bread maker.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Bread Pan and Kneading Paddle:** Remove the bread pan and kneading paddle. Wash them with warm, soapy water using a soft sponge. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating. Rinse thoroughly and dry completely.
3. **Exterior:** Wipe the exterior of the bread maker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
4. **Lid and Viewing Window:** Clean the lid and viewing window with a damp cloth. For stubborn stains, a mild detergent can be used.
5. **Do Not Immerse:** Never immerse the main unit of the bread maker in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your Domo B3970 Bread Maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Bread does not rise	Expired yeast, incorrect water temperature, too much salt/sugar, incorrect program.	Check yeast expiry date. Use lukewarm water (35-40°C). Ensure correct ingredient measurements. Select appropriate program.

Problem	Possible Cause	Solution
Bread is too dense/heavy	Too much flour, not enough liquid, old yeast.	Measure ingredients precisely. Ensure fresh yeast.
Bread sticks to the pan	Pan coating damaged, bread not cooled sufficiently.	Avoid using metal utensils in the pan. Allow bread to cool on a rack for at least 15-20 minutes before slicing.
Kneading paddle stuck in bread	Normal occurrence.	Use the provided hook tool to carefully remove the paddle after the bread has been taken out of the pan.
Machine does not start	Not plugged in, power outage, START/STOP button not pressed.	Check power connection. Ensure power supply. Press START/STOP button firmly.

SPECIFICATIONS

Key technical specifications for the Domo B3970 Bread Maker:

Feature	Specification
Brand	DOMO
Model Number	B3970 (DO-B3970)
Color	White
Product Dimensions (L x W x H)	45 x 30 x 35 cm
Item Weight	7 kg
Capacity	Up to 1100 Grams (1.1 kg)
Power/Wattage	600 watts
Voltage	240 Volts
Material	Aluminium (pan), Plastic (housing)
Number of Programs	12
Special Features	Mixing, kneading, baking functions, heat-insulated exterior walls, 13-hour delay timer, transparent lid, non-stick pan, illuminated LCD display, automatic keep-warm function.
Included Accessories	Measuring cup, measuring spoon, kneading paddle, hook tool.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase. In case of technical issues or for customer support, please contact Domo customer service through their official website or the contact details provided in your product packaging.



© 2023 Domo. All rights reserved.

Related Documents - B3970

	DOMO B3970 Bread Maker Instruction Manual This document provides comprehensive instructions for the DOMO B3970 Bread Maker, covering setup, operation, maintenance, and safety guidelines. It also details warranty information and recycling instructions.
	DOMO B3985 Automatische Broodbakmachine Gebruiksaanwijzing Deze handleiding biedt uitgebreide instructies voor de DOMO B3985 Automatische Broodbakmachine, inclusief bediening, programma's, ingrediënten, veiligheidstips en probleemoplossing.
	DOMO B3961 Broodbakmachine Handleiding Handleiding voor de DOMO B3961 broodbakmachine. Bevat instructies voor gebruik, veiligheid, programma's, reiniging en probleemoplossing.
	DOMO DO1094P Pannenkoekenplaat Handleiding Ontdek de DOMO DO1094P Pannenkoekenplaat met deze uitgebreide handleiding. Leer hoe u veilig en efficiënt pannenkoeken maakt, inclusief onderhoudstips en recepten. Perfect voor thuisgebruik.



[DOMO B3970 Bread Maker Instruction Manual](#)

This document provides comprehensive instructions for the DOMO B3970 Bread Maker, covering setup, operation, maintenance, and safety guidelines. It also details warranty information and recycling instructions.

lang:nl **score:44** filesize: 511.86 K page_count: 88 document date: 2022-04-26




[\[pdf\] User Manual](#)

DOMO M FR B3970 data vandenborre be manual |||

Downloaded from www.vandenborre.be HANDLEIDING MODE D EMPLOI GEBRAUCHSANLEITUNG INSTRUCTION BOOKLET BROODBAKMACHINE MACHINE A PAIN BROTBACKMASCHINE BREAD MAKER **B3970** PRODUCT OF **B3970** GARANTIEVOORWAARDEN Dit apparaat heeft een garantietermijn van 2 jaar vanaf de datum Dvaonwnalnaonadkeodofr...

lang:fr **score:43** filesize: 904.04 K page_count: 74 document date: 2013-03-22

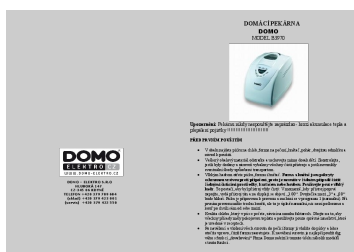

[\[pdf\]](#)

zkrácená verze návodu k obsluze pro Domáci pekárna Domo B3970 NÁVOD K OBSLUZE Databáze

návodů v češtině domaci pekarna domo b3970 106822 locked navod cz preview 107 |||

DOMC PEKRNA DOMO MODEL **B3970** DOMO ELEKTRO S.R.O HLUBOK 147 CZ-345 06 KDYN TELEFON 420 379 789 684 sklad 420 379 423 001 servis 420 379 422 550 Upozornnn: Pekrnu nikdy nespoustjte naprzdno- hroz akumulace tepla a peplen pojistky PED PRVNM POUZITM V obalu najdete pc...

lang:hr **score:32** filesize: 350.3 K page_count: 4 document date: 2023-04-02

DOMO

HANDLEIDING
MODE D'EMPLOI
GEBRAUCHSANLEITUNG
INSTRUCTION BOOKLET
MANUAL DE INSTRUCCIONES
NAVOD K POUŽITÍ

BROODBAKMACHINE
MACHINE A PAIN
BROTBACKMASCHINE
BREAD MAKER
DOMÁCI PEKÁRNA



B3970

PRODUCT OF LINEA

[\[pdf\]](#) User Manual

HANDLEIDING MODE D'EMPLOI B3970 update 2017 1100g 3 1678setpoint de media b3970 1678 |||

HANDLEIDING MODE D'EMPLOI GEBRAUCHSANLEITUNG INSTRUCTION
BOOKLET MANUAL DE INSTRUCCIONES N VOD K POUŽITÍ BROODBAKMACHINE
MACHINE A PAIN BROTBCKMASCHINE BREAD MAKER DOM C PEK RNA

B3970 PRODUCT OF **B3970** GARANTIEVOORWAARDEN Wij hanteren een
garantietermijn van 2 jaar vanaf de datum van aa...

lang:nl **score:28** filesize: 1.28 M page_count: 88 document date: 2017-04-12

DOMO

HANDLEIDING
MODE D'EMPLOI
GEBRAUCHSANLEITUNG
INSTRUCTION BOOKLET
MANUAL DE INSTRUCCIONES
NAVOD K POUŽITÍ

BROODBAKMACHINE
MACHINE A PAIN
AUTOMATISCHER BROTBCKAUTOMAT
BREAD MAIKER
DOMÁCI PEKÁRNA



B3970

PRODUCT OF LINEA

[\[pdf\]](#) User Manual

Consulter le manuel moule à pain bol original media s xrX71rB830Rn |||

HANDLEIDING MODE D'EMPLOI GEBRAUCHSANLEITUNG INSTRUCTION
BOOKLET MANUAL DE INSTRUCCIONES NVOD K POUZIT
BROODBAKMACHINE MACHINE A PAIN AUTOMATISCHER
BROTBACKAUTOMAT BREAD MAKER DOMC PEKRNA **B3970** PRODUCT OF

B3970 GARANTIEVOORWAARDEN Wij hanteren een garantietermijn van 2 jaar
vanaf de datum van aa...

lang:nl **score:19** filesize: 1.22 M page_count: 88 document date: 2018-10-30

DOMO



BROOD Recepten PAIN
Recettes

[\[pdf\]](#)

DOMO R FR B3970 data vandenborre be 80 recepten |||

Downloaded from www.vandenborre.be Brood pain Recepten Recettes Downloaded
from www.vandenborre.be Downloaded from Zelf brood een heerlijke bakken: manier
om www.vandenborre.be gezond te leven Cuire son pain soi-meme: une facon
delicieuse de vivre sainement buitengewoon brood bakken D...

lang:nl **score:19** filesize: 4.43 M page_count: 44 document date: 2017-09-25

