

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Studiocanal](#) /
- › [Brick \[Blu-ray\] User Manual](#)

Studiocanal B002BD9DOS

Brick Blu-ray Disc User Manual

Model: B002BD9DOS

1. INTRODUCTION

Welcome to the user manual for the 'Brick' Blu-ray disc. This guide provides essential information to ensure you have the best viewing experience, from initial setup to maintenance and troubleshooting. 'Brick' is an off-beat drama from writer/director Rian Johnson, imitating the conventions of 1940s hardboiled film noir. It features Joseph Gordon-Levitt as Brendan, a high school outsider investigating his ex-girlfriend's disappearance.

2. PRODUCT OVERVIEW



Figure 2.1: Front Cover. This image displays the front cover artwork of the 'Brick' Blu-ray disc case, featuring the film's title, lead actor Joseph Gordon-Levitt, and various critical accolades and ratings.



Figure 2.2: Back Cover. This image shows the back cover of the 'Brick' Blu-ray disc case, providing a detailed plot summary, a list of the main cast and crew, and technical specifications such as aspect ratio and audio format. The UPC is visible at the bottom left.

3. SETUP

To begin watching 'Brick' on Blu-ray, follow these simple steps:

1. **Prepare Your Player:** Ensure your Blu-ray player or compatible game console (e.g., PlayStation, Xbox) is connected to your television or display device and powered on.
2. **Open Disc Tray:** Press the 'Eject' button on your Blu-ray player to open the disc tray.
3. **Insert Disc:** Carefully hold the 'Brick' Blu-ray disc by its edges to avoid touching the playback surface. Place the disc into the tray with the label side facing up.
4. **Close Disc Tray:** Press the 'Eject' button again or gently push the tray to close it.
5. **Automatic Playback:** The player should automatically detect the disc and begin loading the movie. If not, navigate to the disc icon on your player's menu and select 'Play'.

4. OPERATING INSTRUCTIONS

Once the 'Brick' Blu-ray disc has loaded, you can use your player's remote control to navigate and enjoy the film:

- **Play/Pause:** Press the **PLAY** button to start the movie. Press **PAUSE** to temporarily stop playback. Press **PLAY** again to resume.
- **Stop:** Press the **STOP** button to end playback and return to the disc's main menu or player's home screen.
- **Fast Forward/Rewind:** Use the **FF (Fast Forward)** and **REW (Rewind)** buttons to quickly scan through the movie. Multiple presses often increase the speed.
- **Skip Chapters:** Use the **NEXT** and **PREVIOUS** chapter buttons to jump to the beginning of the next or previous chapter.
- **Menu:** Press the **MENU** button to access the disc's main menu, where you can select scenes, audio tracks, subtitles, and special features.
- **Audio/Subtitle:** Look for dedicated **AUDIO** and **SUBTITLE** buttons on your remote to change language tracks or toggle subtitles on/off.

5. MAINTENANCE AND CARE

Proper care of your Blu-ray disc will ensure its longevity and optimal performance:

- **Handle with Care:** Always hold the disc by its outer edges or the center hole. Avoid touching the shiny playback surface.
- **Keep Clean:** If the disc gets dirty, gently wipe it with a soft, lint-free cloth (like a microfiber cloth) from the center outwards. Do not use abrasive materials or harsh chemicals.
- **Store Properly:** Store the disc in its original Blu-ray case when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not place the disc on rough surfaces or stack it without its case, as this can lead to scratches that may affect playback.

6. TROUBLESHOOTING

If you encounter issues while playing your 'Brick' Blu-ray disc, consider the following common solutions:

Problem	Possible Cause	Solution
Disc not playing or loading.	Disc is dirty or scratched; player is not Blu-ray compatible; disc inserted incorrectly.	Clean the disc with a soft cloth. Ensure your player supports Blu-ray discs. Re-insert the disc correctly, label side up.
Video or audio skipping/freezing.	Disc surface is dirty or damaged; player firmware is outdated.	Clean the disc. Check for visible scratches. Update your Blu-ray player's firmware if available.
No sound or picture.	Cables are loose; incorrect input selected on TV; TV/player volume is muted.	Check all HDMI/audio cables. Ensure your TV is on the correct input source. Unmute TV/player volume.

7. SPECIFICATIONS

Key technical specifications for the 'Brick' Blu-ray disc:

Feature	Detail
Product Format	Blu-ray
ASIN	B002BD9DOS
UPC	5055201808561
Run Time	1 hour and 50 minutes
Release Date	July 20, 2009
Studio / Manufacturer	Studiocanal
Number of Discs	1

Feature	Detail
Color	Color
Package Dimensions	7.1 x 5.42 x 0.58 inches; 2.93 ounces

Note: Some specifications in source data may list 'DVD' as media format, but this product is specifically the Blu-ray edition.

8. WARRANTY AND SUPPORT

As a pre-recorded Blu-ray disc, 'Brick' typically does not come with a manufacturer's warranty in the traditional sense, unlike electronic devices. If you purchased this disc new and it is defective upon arrival (e.g., unplayable due to manufacturing defect), please contact your retailer for their return or exchange policy. For general information about the film or its production, you may refer to the studio, Studiocanal, or official movie databases.

For further assistance with your Blu-ray player, please consult your player's specific user manual or the manufacturer's support resources.