

[Manuals.plus](#) /

› [Room Essentials](#) /

› Room Essentials Torchiere Floor Lamp Model 074-02-0411 Instruction Manual

Room Essentials 074-02-0411

Room Essentials Torchiere Floor Lamp

MODEL: 074-02-0411

Instruction Manual

Important Safety Instructions

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Do not** connect the lamp to power until assembly is complete.
- **Always** unplug the lamp from the electrical outlet before cleaning, changing the light bulb, or performing any maintenance.
- **Do not** use with a damaged cord or plug. If the cord or plug is damaged, contact customer support for assistance.
- **Do not** exceed the maximum wattage specified for the light bulb. Refer to the specifications section for details.
- **For indoor use only.** This lamp is not intended for outdoor use or in wet locations.
- Keep the lamp away from flammable materials.
- Ensure the lamp is placed on a stable, level surface to prevent tipping.

Package Contents

Verify that all components are present before beginning assembly. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Lamp Base (1)
- Pole Sections (Multiple, typically 3-4)
- Lamp Head/Socket Assembly (1)
- Plastic Shade (1)
- Power Cord with Plug (Attached to lamp head/socket)

Assembly Instructions

Follow these steps carefully to assemble your torchiere floor lamp.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Retain packaging materials until assembly is complete.
2. **Attach Base to Bottom Pole:** Screw the lowest pole section into the lamp base. Turn clockwise until securely tightened. Ensure the power cord passes freely through the center of the base.
3. **Connect Pole Sections:** Screw the remaining pole sections together, one by one, in a clockwise direction. Ensure each section is fully tightened to create a stable pole. Guide the power cord through each section as you connect them.
4. **Attach Lamp Head/Socket:** Screw the lamp head/socket assembly onto the top pole section. Ensure it is securely tightened. The rotary switch should be easily accessible.
5. **Install Shade:** Place the plastic shade over the lamp head, resting it securely on the designated support ring or grooves.
6. **Insert Light Bulb:** Screw a compatible light bulb (E26 Medium base, maximum 150W incandescent or 26W CFL) into the lamp socket. Do not overtighten.



This image displays the fully assembled Room Essentials Torchiere Floor Lamp. It features a black metal base and pole, topped with a white translucent plastic shade that directs light upwards.

Operating Instructions

To operate your Room Essentials Torchiere Floor Lamp:

1. **Connect to Power:** Insert the power plug into a standard 120V AC electrical outlet.
2. **Turn On/Off:** Locate the 3-way rotary switch on the lamp socket. Turn the switch clockwise to cycle through the light settings (low, medium, high, off).
3. **Bulb Compatibility:** This lamp uses an E26 Medium base bulb. It supports incandescent bulbs up to 150 watts or CFL bulbs up to 26 watts. Using bulbs outside these specifications may damage the lamp or create a fire hazard.

Maintenance

Proper care and maintenance will ensure the longevity of your lamp.

- **Cleaning:** Always unplug the lamp before cleaning. Use a soft, dry cloth to wipe down the metal pole and base. For the plastic shade, a slightly damp cloth can be used, followed by a dry cloth. Avoid abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled completely before attempting to replace it. Unscrew the old bulb counter-clockwise and screw in a new E26 Medium base bulb, ensuring it meets the wattage requirements.
- **Cord Inspection:** Periodically inspect the power cord for any signs of damage, such as fraying or cuts. If damage is found, discontinue use and contact customer support.

Troubleshooting

If you encounter issues with your lamp, refer to the following common problems and solutions:

- **Lamp Does Not Turn On:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check if the light bulb is securely screwed into the socket.
 - Replace the light bulb with a new one to rule out a burnt-out bulb.
 - Verify that the wall switch (if applicable) is in the ON position.
 - Check your home's circuit breaker or fuse box.
- **Light Flickers:**
 - Ensure the light bulb is screwed in tightly.
 - Try a different light bulb to see if the issue is with the bulb itself.
 - Check the electrical connection at the wall outlet.
- **Lamp is Unstable:**
 - Ensure all pole sections and the base are securely tightened.
 - Place the lamp on a flat, level surface.

Specifications

Feature	Specification
Model Number	074-02-0411
Product Dimensions (D x W x H)	14" x 14" x 71"
Body Material	Metal (Steel)
Shade Material	Plastic
Switch Type	3-Way Rotary
Bulb Base	E26 Medium
Max. Incandescent Wattage	150 Watts
Max. CFL Wattage	26 Watts
Voltage	120 Volts
Power Source	Corded Electric

Indoor/Outdoor Usage	Indoor
----------------------	--------

Warranty and Support

For warranty information or technical support, please refer to the retailer's return policy or contact the manufacturer directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question