

Acer ET.CV3WP.B02

Acer V193W Widescreen LCD Monitor User Manual

Model: V193W (ET.CV3WP.B02)

[Contents](#) [Setup](#) [Operation](#) [Introduction](#) [Safety](#) [Package](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Acer V193W Widescreen LCD Monitor. Please read this manual thoroughly before using the product to ensure optimal performance and safety. Keep this manual for future reference.



Figure 1: Front view of the Acer V193W Widescreen LCD Monitor.

2. SAFETY INFORMATION

- Always place the monitor on a stable, flat surface.
- Do not block ventilation openings.
- Keep the monitor away from water and excessive moisture.
- Use only the power adapter supplied with the monitor.
- Unplug the monitor during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon unpacking:

- Acer V193W LCD Monitor
- Power Cord
- VGA Cable

- User Manual (this document)

4. SETUP

4.1 Assembling the Stand

Carefully attach the monitor base to the stand column, then secure the stand column to the back of the monitor. Ensure all screws are tightened securely.

4.2 Connecting the Monitor

1. **Power Connection:** Connect the power cord to the monitor's power input, then plug the other end into a grounded electrical outlet.
2. **Video Connection:** Connect one end of the VGA cable to the VGA port on your computer's graphics card and the other end to the VGA input port on the monitor. Tighten the screws on the VGA connector to secure the connection.



Figure 2: Illustrative image of monitor rear ports (VGA and Power). Actual port layout may vary slightly.

4.3 Powering On

Press the power button located on the front or bottom bezel of the monitor. The power indicator light will illuminate. Turn on your computer. The monitor should automatically detect the input signal.

5. OPERATING THE MONITOR

5.1 Front Panel Controls

The monitor features several buttons on its front panel for adjusting settings. These typically include:

- **Power Button:** Turns the monitor on or off.
- **Menu Button:** Opens the On-Screen Display (OSD) menu.
- **Arrow Buttons (< / >):** Navigate through OSD menu options and adjust values.
- **Select/Auto Button:** Confirms selections in the OSD menu or performs auto-adjustment.

5.2 Adjusting Display Settings (OSD Menu)

To access and adjust monitor settings:

1. Press the **Menu** button to open the OSD menu.
2. Use the **Arrow** buttons to navigate through categories like **Brightness**, **Contrast**, **Color**, and **Image**.
3. Press the **Select** button to enter a sub-menu or select an option.
4. Use the **Arrow** buttons to adjust values.
5. Press **Menu** again to exit the OSD menu.

For optimal display, ensure your computer's display resolution is set to the monitor's native resolution of 1440 x 900.

6. MAINTENANCE

6.1 Cleaning the Monitor

- Always unplug the monitor before cleaning.
- Use a soft, lint-free cloth lightly dampened with water or a mild, non-abrasive screen cleaner.
- Do not spray cleaner directly onto the screen.
- Avoid using harsh chemicals, solvents, or abrasive materials.

6.2 Storage

If storing the monitor for an extended period, disconnect all cables and store it in a cool, dry place, preferably in its original packaging to protect it from dust and physical damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image on screen	Power cable disconnected; Video cable disconnected; Monitor off; Computer off.	Check power and video cable connections; Press monitor power button; Turn on computer.
Image too dark/bright	Brightness/Contrast settings incorrect.	Adjust Brightness and Contrast via the OSD menu.

Problem	Possible Cause	Solution
Image is blurry or distorted	Incorrect resolution; Loose video cable.	Set computer resolution to 1440 x 900; Ensure VGA cable is securely connected. Use OSD auto-adjust function.
No sound (if applicable)	No built-in speakers.	This monitor model does not feature built-in speakers. External speakers are required for audio output.

8. SPECIFICATIONS

Feature	Detail
Brand	Acer
Model Number	ET.CV3WP.B02
Screen Size	19 inches
Resolution	1440 x 900 (XGA+ Wide)
Aspect Ratio	16:9
Response Time	5 milliseconds
Refresh Rate	60 hertz
Display Type	LCD
Connectivity	VGA
Item Weight	9.5 pounds
Mounting Type	Wall Mount (VESA compatible, bracket not included)

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Acer website. For technical support, contact Acer customer service through their official channels. Please have your model number (ET.CV3WP.B02) and serial number ready when contacting support.

Acer Support Website: <https://www.acer.com/support>