

[Manuals.plus](#) /

› [Bomann](#) /

› Bomann KM 6009 CB Stand Mixer and Kitchen Scale User Manual

Bomann KM 6009 CB

Bomann KM 6009 CB Stand Mixer and Kitchen Scale User Manual

Model: KM 6009 CB | Brand: Bomann

1. INTRODUCTION

Thank you for choosing the Bomann KM 6009 CB Stand Mixer. This versatile kitchen appliance is designed to assist you with various baking and cooking tasks, featuring a powerful 1000W motor and a 5-liter stainless steel bowl. It comes equipped with three essential mixing attachments and includes a digital kitchen scale for precise ingredient measurement. Please read this manual carefully before first use to ensure safe and optimal operation.



Image 1.1: The Bomann KM 6009 CB Stand Mixer in red with its 5-liter stainless steel bowl and an accompanying digital kitchen scale.

2. IMPORTANT SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. Keep this manual for future reference.

- Read all instructions before operating the appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from attachments during operation to prevent injury and damage to the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been

damaged in any manner.

- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always operate the appliance on a flat, stable surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not exceed the maximum capacities specified in the operating instructions.

3. PACKAGE CONTENTS

Carefully unpack all items and check for any damage. Ensure all components are present before discarding packaging materials.

- 1x Bomann KM 6009 CB Stand Mixer (Motor Unit)
- 1x 5-Liter Stainless Steel Mixing Bowl
- 1x Dough Hook (Aluminium die-cast)
- 1x Stirring Hook (Aluminium die-cast)
- 1x Whisk (Stainless Steel)
- 1x Transparent Splash Guard Lid with Refill Opening
- 1x Digital Kitchen Scale
- 1x User Manual



Image 3.1: The stand mixer shown with its three primary attachments: dough hook, stirring hook, and whisk.

4. PRODUCT COMPONENTS

4.1 Stand Mixer

- **Motor Unit:** Houses the 1000W motor and control panel.
- **Mixing Bowl:** 5-liter capacity, made of stainless steel.
- **Rotary Switch:** Electronic speed control with 6 settings (Min to Max) and a pulse function, illuminated in blue.
- **Release Lever:** For tilting the mixer arm upwards.
- **Attachment Port:** Where mixing tools are connected.
- **Splash Guard:** Transparent lid with a refill opening to prevent splatters and allow ingredient addition during operation.
- **Suction Feet:** Anti-slip base for stability during operation.

4.2 Mixing Attachments

- **Dough Hook:** Designed for kneading heavy doughs such as bread, pasta, and pizza dough. Made from aluminium die-cast.
- **Stirring Hook:** Ideal for mixing medium-heavy doughs like shortcrust pastry, cookie dough, and cake batter. Made from aluminium die-cast.
- **Whisk:** Used for whipping egg whites, cream, meringues, and light batters. Made from stainless steel.



Image 4.1: Close-up of the stainless steel whisk attachment in the mixing bowl, suitable for whipping.



Image 4.2: Close-up of the aluminium die-cast dough hook attachment in the mixing bowl, designed for kneading heavy dough.



Image 4.3: Close-up of the aluminium die-cast stirring hook attachment in the mixing bowl, used for mixing medium-heavy batters.

4.3 Digital Kitchen Scale

- **Weighing Surface:** High-quality glass surface.
- **Display:** Digital display for weight readings.
- **Control Buttons:** ON/OFF/TARE, MODE (for unit selection).
- **Measurement Range:** Up to 5 kg, with 1-gram increments.
- **Auto-Off Function:** To conserve battery life.



Image 4.4: The included Bomann digital kitchen scale with its glass weighing surface and digital display.

5. SETUP AND FIRST USE

5.1 Before First Use

1. Remove all packaging materials and promotional labels.
2. Clean the mixing bowl, splash guard, and all mixing attachments (dough hook, stirring hook, whisk) with warm soapy water. Rinse thoroughly and dry completely. The main motor unit should only be wiped with a damp cloth.
3. Place the stand mixer on a clean, dry, flat, and stable surface. Ensure the suction feet are securely attached to the countertop.

5.2 Assembling the Stand Mixer

1. Ensure the appliance is unplugged from the power outlet.
2. Press the release lever (located on the side of the mixer) and gently tilt the mixer arm upwards until it locks into place.
3. Place the stainless steel mixing bowl into its base, turning it slightly clockwise until it is securely locked.
4. Select the desired mixing attachment (dough hook, stirring hook, or whisk) for your recipe. Insert the attachment into the attachment port and turn it slightly until it clicks into place.
5. Lower the mixer arm by pressing the release lever again and gently pushing the arm down until it locks into its

operating position.

6. Attach the transparent splash guard lid onto the mixer arm, ensuring it covers the bowl opening.



Image 5.1: The stand mixer with the transparent splash guard lid in place, highlighting the 5-liter bowl capacity.

6. OPERATING INSTRUCTIONS

6.1 Using the Stand Mixer

1. Ensure the mixer is correctly assembled with the desired attachment and bowl.
2. Add your ingredients to the mixing bowl. Do not exceed the maximum capacity of 2.5-3 kg of dough.
3. Plug the appliance into a suitable power outlet.
4. Turn the rotary switch to the desired speed setting (Min to Max). The planetary mixing system ensures thorough and even mixing.
5. For short bursts of power, turn the switch to the "P" (Pulse) setting and release.
6. During operation, you can add ingredients through the refill opening on the splash guard.

7. After mixing, turn the rotary switch to "0" (Off) and unplug the appliance.
8. Press the release lever and tilt the mixer arm upwards. Remove the attachment by turning it slightly and pulling it down. Remove the mixing bowl by turning it counter-clockwise.

Note: To prevent overheating, do not operate the mixer for more than 5 minutes continuously. Allow it to rest for at least 10 minutes between uses, especially when kneading heavy doughs.



Image 6.1: Close-up of the blue-illuminated rotary switch for speed control on the Bomann Stand Mixer.

6.2 Using the Digital Kitchen Scale

1. Place the scale on a flat, stable surface.
2. Press the "ON/OFF/TARE" button to turn on the scale. Wait for the display to show "0g" or "0.0".
3. Press the "MODE" button to select your desired unit of measurement (e.g., grams, ml for water/milk).
4. Place the item to be weighed directly on the glass surface or in a container. The weight will be displayed.
5. To use the Tare function (to weigh multiple ingredients in the same container): Place the first ingredient or empty container on the scale. Press "ON/OFF/TARE" to reset the display to "0". Add the next ingredient.

6. To turn off the scale, press and hold the "ON/OFF/TARE" button for a few seconds, or it will automatically turn off after a period of inactivity.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your appliance.

1. Always unplug the appliance before cleaning.
2. **Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
3. **Mixing Bowl, Splash Guard, Whisk:** These parts are dishwasher-safe or can be washed by hand in warm soapy water. Rinse thoroughly and dry immediately to prevent water spots or corrosion.
4. **Dough Hook, Stirring Hook:** These aluminium die-cast attachments are **NOT dishwasher-safe**. Wash them by hand in warm soapy water, rinse, and dry immediately. Dishwashing can cause discoloration and damage to the aluminum finish.
5. **Digital Kitchen Scale:** Wipe the glass surface and body with a damp cloth. Do not immerse in water.
6. Store the appliance and its accessories in a clean, dry place.

8. TROUBLESHOOTING

If you encounter issues with your Bomann KM 6009 CB, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Mixer does not start.	Not plugged in; power outlet faulty; mixer arm not fully lowered and locked.	Check power connection; try a different outlet; ensure mixer arm is securely locked in place.
Attachments are difficult to install/remove.	Incorrect alignment; debris in the attachment port.	Ensure the attachment is aligned correctly with the shaft; clean the attachment port.
Mixer stops during operation.	Overload protection activated; continuous operation for too long.	Reduce the amount of ingredients; turn off the mixer and let it cool down for at least 10 minutes before restarting.
Ingredients are not mixing evenly.	Incorrect attachment used for the consistency; insufficient mixing time.	Ensure the correct attachment is used (e.g., dough hook for heavy dough); increase mixing time or speed as appropriate.
Kitchen scale display is blank or inaccurate.	Low battery; scale not on a flat surface; overload.	Replace batteries; ensure scale is on a level, stable surface; do not exceed 5 kg capacity.

9. TECHNICAL SPECIFICATIONS

9.1 Stand Mixer

- **Model:** KM 6009 CB
- **Power:** 1000 Watts
- **Voltage:** 220-240 V, 50 Hz

- **Bowl Capacity:** 5 Liters (for 2.5 - 3 kg dough)
- **Speed Settings:** 6 (electronic, continuous)
- **Mixing System:** Planetary
- **Material:** Plastic housing, Stainless steel bowl, Aluminium die-cast attachments (dough hook, stirring hook), Stainless steel whisk
- **Special Feature:** Robust planetary mixing mechanism, 35° swiveling multi-function arm, safety circuit.
- **Dimensions (approx. L x H x D):** 366 mm x 299 mm x 215 mm (based on image)



Image 9.1: Diagram showing the approximate dimensions of the Bomann KM 6009 CB Stand Mixer.

9.2 Digital Kitchen Scale

- **Type:** Extra-flat digital kitchen scale
- **Weighing Surface:** High-quality glass
- **Measurement Range:** Up to 5 kg
- **Increments:** 1 gram
- **Functions:** Tare function, Automatic shut-off
- **Dimensions (approx. L x H x D):** 220 mm x 17 mm x 150 mm

10. WARRANTY AND SUPPORT

The Bomann KM 6009 CB Stand Mixer and Digital Kitchen Scale come with a **2-year warranty**. This warranty includes free pickup and shipping service for eligible repairs. For warranty claims, technical support, or spare parts inquiries, please contact your retailer or the Bomann customer service department. Please retain your proof of purchase for warranty validation.

© 2023 Bomann. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B002CF0G6O>

More documents and user manuals: <https://manuals.plus/>