

Electrolux E201SM

Electrolux S-Bag Classic Long Performance Vacuum Cleaner Bags E201SM User Manual

Model: E201SM

1. PRODUCT OVERVIEW

The Electrolux S-Bag Classic Long Performance E201SM vacuum cleaner bags are high-quality synthetic bags designed for various Electrolux vacuum cleaner models. This megapack contains 12 synthetic bags, engineered to offer extended performance and superior dust retention compared to traditional paper bags.

Key Features:

- **Synthetic Material:** Provides enhanced filtration and durability.
- **Long Performance:** Designed to hold 50% more dust than standard paper vacuum cleaner bags, reducing the frequency of bag changes.
- **Improved Airflow:** Maintains strong suction power as the bag fills.
- **Compatibility:** Suitable for a wide range of Electrolux vacuum cleaner models.



Image 1: Electrolux S-Bag Classic Long Performance Vacuum Cleaner Bags. This image displays the packaging of the S-Bag E201SM, showing multiple synthetic vacuum cleaner bags.

2. SETUP AND INSTALLATION

Follow these steps to correctly install a new S-Bag Classic Long Performance vacuum cleaner bag into your compatible Electrolux vacuum cleaner.

1. **Prepare the Vacuum Cleaner:** Ensure your vacuum cleaner is unplugged from the power outlet before attempting to open it. This prevents accidental startup and ensures safety.
2. **Open the Bag Compartment:** Locate and open the vacuum cleaner's bag compartment. The method for opening varies by model; refer to your vacuum cleaner's specific user manual if unsure.
3. **Remove the Old Bag (if applicable):** Carefully remove the full or old dust bag. Most S-Bags feature a hygienic closing system that seals the bag opening when removed, preventing dust leakage. Dispose of the old bag responsibly.
4. **Insert the New Bag:** Take a new Electrolux S-Bag Classic Long Performance bag from the megapack. Align the cardboard collar of the new bag with the bag holder in the vacuum cleaner's compartment. Push the bag firmly onto the holder until it is securely in place. Ensure the bag is fully unfolded inside the compartment without obstructing any filters or closing mechanisms.

5. **Close the Compartment:** Close the bag compartment lid securely. Ensure it clicks into place, indicating it is properly sealed.
6. **Reconnect Power:** Plug the vacuum cleaner back into the power outlet. Your vacuum cleaner is now ready for use with the new bag.

3. OPERATING INSTRUCTIONS

Once the S-Bag is installed, operate your vacuum cleaner as usual. The synthetic material and long performance design of these bags allow for efficient dust collection over an extended period.

When to Replace the Bag:

- **Indicator Light/Gauge:** Many Electrolux vacuum cleaners have an indicator light or gauge that signals when the dust bag is full and needs replacement. Observe this indicator during operation.
- **Reduced Suction Power:** If you notice a significant decrease in your vacuum cleaner's suction power, even after checking for blockages, the dust bag may be full.
- **Visible Fullness:** Periodically check the bag compartment. If the bag appears visibly full or distended, it's time for a replacement.
- **Odor:** A persistent unpleasant odor during vacuuming can indicate a full bag or the need for filter replacement.

Note: Do not overfill the dust bag, as this can strain the vacuum cleaner motor and reduce cleaning efficiency.

4. MAINTENANCE

Proper maintenance of your vacuum cleaner bags ensures optimal performance and longevity of your appliance.

- **Regular Replacement:** Replace the S-Bag regularly as indicated by your vacuum cleaner or when suction power diminishes.
- **Filter Checks:** While replacing the dust bag, it is a good practice to check and clean or replace your vacuum cleaner's motor filter and exhaust filter according to your vacuum cleaner's manual. Clogged filters can also reduce suction.
- **Storage:** Store unused S-Bags in a cool, dry place away from direct sunlight and moisture to maintain their integrity.
- **Disposal:** Dispose of used dust bags in regular household waste. The hygienic closing system helps contain dust and allergens.

5. TROUBLESHOOTING

If you encounter issues related to the dust bag, consider the following:

- **Reduced Suction Power:**
 - *Solution:* Check if the dust bag is full and replace it if necessary. Also, inspect the vacuum cleaner's filters for clogs and clean or replace them. Ensure there are no blockages in the hose or nozzle.
- **Bag Not Fitting Correctly:**

- *Solution:* Ensure you are using the correct S-Bag model (E201SM) for your Electrolux vacuum cleaner. Double-check that the cardboard collar is properly seated in the bag holder and that the bag is fully unfolded inside the compartment.
- **Dust Leakage:**
 - *Solution:* Ensure the bag is correctly installed and the bag compartment lid is securely closed. Check for any tears or damage to the bag before installation.

6. SPECIFICATIONS

Specification	Detail
Manufacturer	Electrolux
Part Number	E201SM
Item Model Number	E201SM
Material	Synthetic
Color	White
Special Features	Long Performance, Lightweight
Compatible Devices	Vacuum Cleaner
Capacity	3.5 Liters (approximate)

7. COMPATIBILITY

The Electrolux S-Bag Classic Long Performance E201SM vacuum cleaner bags are compatible with a wide range of Electrolux vacuum cleaner models, including but not limited to:

- AirMax/GREEN
- Bolido
- Clario
- Clario2
- Ergospace/GREEN
- Essensio
- Excellio
- JetMaxx/GREEN
- Maximus
- Mondo Plus
- Oxygen+
- Superpro
- UltraOne/GREEN
- UltraSilencer/GREEN
- Viva Control

- Viva Quickstop

Always refer to your specific vacuum cleaner's manual to confirm bag compatibility.

8. WARRANTY AND SUPPORT

For specific warranty information regarding your Electrolux S-Bag Classic Long Performance vacuum cleaner bags, please refer to the product packaging or visit the official Electrolux website. Warranty terms may vary by region and retailer.

If you require further assistance or have questions not covered in this manual, please contact Electrolux customer support through their official website or the contact information provided with your vacuum cleaner appliance.