

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Westinghouse](#) /

> [Westinghouse 0395500 25 Watt A19 Soft White Incandescent Dimmable Light Bulb User Manual](#)

Westinghouse 0395500

Westinghouse 25 Watt A19 Soft White Incandescent Dimmable Light Bulb

MODEL: 0395500

Introduction

This manual provides essential instructions for the safe and effective use of your Westinghouse 25 Watt A19 Soft White Incandescent Dimmable Light Bulb. Please read this manual thoroughly before installation and retain it for future reference.

Safety Information

- **WARNING:** To avoid electric shock, always turn off power to the fixture at the circuit breaker or fuse box before installing or removing the bulb.
- Do not use this bulb in wet locations or where it may be directly exposed to water.
- Ensure the bulb is securely screwed into the socket. A loose connection can cause overheating or flickering.
- Do not exceed the maximum wattage rating of your light fixture.
- Allow the bulb to cool completely before handling or replacing.

Product Overview

The Westinghouse 25 Watt A19 Soft White Incandescent Dimmable Light Bulb provides a warm, inviting glow suitable for various indoor applications. Its A19 shape is a standard household bulb size, and its dimmable feature allows for adjustable light levels when used with compatible dimmer switches.



Image: Westinghouse 25 Watt A19 Soft White Incandescent Dimmable Light Bulb. This image displays the classic A19 bulb shape with a standard screw base.

Setup (Installation)

1. **Turn off power:** Locate the light fixture's circuit breaker or wall switch and turn off the power completely.
2. **Remove old bulb (if applicable):** If replacing an existing bulb, ensure it is cool to the touch before carefully unscrewing it counter-clockwise from the socket.
3. **Install new bulb:** Gently screw the Westinghouse A19 bulb clockwise into the light fixture's socket until it is snug. Do not overtighten.
4. **Restore power:** Turn the power back on at the circuit breaker or wall switch.

Operating

Once installed, the bulb operates like any standard incandescent light bulb.

- **Turning On/Off:** Use the wall switch connected to the fixture to turn the light on or off.
- **Dimming Function:** This bulb is dimmable. If your fixture is connected to a compatible dimmer switch, you can adjust the light output by manipulating the dimmer control. Ensure your dimmer

switch is rated for incandescent bulbs.

Maintenance

Minimal maintenance is required for this light bulb.

- **Cleaning:** Before cleaning, always turn off the power to the fixture and allow the bulb to cool. Wipe the bulb with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Replacement:** Replace the bulb when it burns out. Follow the installation steps outlined in the 'Setup' section.

Troubleshooting

- **Bulb does not light:**
 - Check if the power switch is on.
 - Ensure the bulb is screwed in tightly.
 - Verify that the circuit breaker has not tripped.
 - Test the bulb in another working fixture to confirm if the bulb itself is faulty.
- **Bulb flickers:**
 - Ensure the bulb is screwed in securely.
 - If using a dimmer, ensure it is compatible with incandescent bulbs and is functioning correctly.
 - Check for loose wiring in the fixture or switch (consult a qualified electrician if unsure).

Specifications

Feature	Detail
Brand	Westinghouse
Model Number	0395500
Wattage	25 Watts
Bulb Shape Size	A19
Light Color	Soft White
Special Feature	Dimmable
Light Source Type	Incandescent
Unit Count	2.0 Count (per package)
UPC	030721039553

Warranty and Support

Westinghouse products are manufactured to high-quality standards. For information regarding warranty coverage or technical support, please refer to the packaging or visit the official Westinghouse website.

You can also visit the Westinghouse store for more products and information:[Westinghouse Store](#)

