

## Adesso AKB-440UB

# Adesso AKB-440UB SlimTouch Desktop Keyboard User Manual

Model: AKB-440UB

## INTRODUCTION

---

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your Adesso AKB-440UB SlimTouch Desktop Keyboard. This device combines a full-size keyboard with an integrated touchpad and multimedia hotkeys, designed for efficient desktop use.

## PACKAGE CONTENTS

---

Verify that your package contains the following items:

- Adesso AKB-440UB SlimTouch Desktop Keyboard
- User Manual (this document)

## SETUP

---

Follow these steps to set up your Adesso AKB-440UB keyboard:

1. **Connect the Keyboard:** Locate an available USB-A port on your computer. Plug the USB connector of the keyboard into the USB-A port.
2. **System Recognition:** Your operating system (Windows 7 or later is recommended) should automatically detect and install the necessary drivers for the keyboard and touchpad. No additional software installation is typically required.
3. **Placement:** Position the keyboard on a stable, flat surface. Ensure adequate space for comfortable typing and touchpad use.



Image: Front view of the Adesso AKB-440UB SlimTouch Desktop Keyboard, showing the full QWERTY layout, numeric keypad, and integrated touchpad.

## OPERATING INSTRUCTIONS

---

The Adesso AKB-440UB keyboard features a standard QWERTY layout, a numeric keypad, multimedia hotkeys, and an integrated touchpad.

### Keyboard Functions

- **Standard Keys:** All standard alphanumeric and function keys operate as on a conventional keyboard.
- **Membrane Keys:** The keyboard uses quiet tactile membrane keys for comfortable typing.
- **Numeric Keypad:** Located on the right side, it provides dedicated keys for numerical input. Ensure Num Lock is active for numeric input.
- **Windows Key:** Located on the bottom row, this key provides quick access to the Windows Start menu and other operating system functions.

### Integrated Touchpad

The integrated touchpad utilizes GlidePoint technology, allowing for precise cursor control without an external mouse.

- **Cursor Movement:** Slide your finger across the touchpad surface to move the cursor on the screen.
- **Left Click:** Press the left button below the touchpad, or tap once on the touchpad surface.
- **Right Click:** Press the right button below the touchpad, or tap twice on the touchpad surface (if configured in OS settings).
- **Scrolling:** Some operating systems allow for two-finger scrolling on the touchpad. Refer to your operating system's mouse settings for advanced touchpad configurations.



Image: Close-up view of the integrated touchpad and its dedicated left and right click buttons.



Image: Diagram illustrating key features of the Adesso AKB-440UB keyboard, including Multimedia and Internet Hotkeys, Numeric Keypad, Windows Key, and Built-in Touchpad.

## Multimedia Hotkeys

The keyboard includes 7 multimedia hotkeys for quick access to common functions:

- **F1-F7 (Multimedia):** These keys, often used in conjunction with a Function (Fn) key (if present, though not explicitly listed for this model, standard for many multimedia keyboards), control media playback, volume, and internet functions. Refer to the icons on the keys for specific functions (e.g., Play/Pause, Stop, Previous Track, Next Track, Mute, Volume Down, Volume Up).

## MAINTENANCE

---

Proper care ensures the longevity of your keyboard:

- **Cleaning:** Use a soft, damp cloth to clean the surface of the keyboard and touchpad. Avoid harsh chemicals or abrasive cleaners. For dust between keys, use compressed air.
- **Liquid Exposure:** Avoid spilling liquids on the keyboard. If a spill occurs, immediately disconnect the keyboard from the computer and allow it to dry completely before reconnecting.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

---

If you encounter issues with your Adesso AKB-440UB keyboard, try the following solutions:

- **Keyboard Not Responding:**

- Ensure the USB cable is securely plugged into a working USB-A port on your computer.
- Try plugging the keyboard into a different USB-A port.
- Restart your computer.

- **Touchpad Not Working:**

- Verify the keyboard is connected properly.
- Check your operating system's mouse or touchpad settings to ensure the touchpad is enabled.
- If the cursor freezes intermittently, try pressing the 'Fn' key (if applicable) or disconnecting and reconnecting the keyboard.

- **Keys Not Functioning Correctly:**

- Ensure no debris is lodged under the keys.
- Test the keyboard on another computer to determine if the issue is with the keyboard or the computer's software/drivers.

## SPECIFICATIONS

---

Feature	Detail
Brand	Adesso
Model Number	AKB-440UB
Connectivity Technology	USB-A (Wired)
Keyboard Description	Membrane
Special Feature	Integrated Trackpad
Color	Black
Product Dimensions	18.25"L x 6.5"W x 1"H
Material	Metal
Number of Keys	104
Keyboard Layout	QWERTY
Compatible Devices	PC
Item Weight	1.8 Pounds
External Testing Certification	FCC, CE, ROHS

## WARRANTY AND SUPPORT

---

The Adesso AKB-440UB SlimTouch Desktop Keyboard comes with a **1-year limited warranty** from the date of purchase. For warranty claims or technical support, please contact Adesso customer service. Keep your proof of purchase for warranty validation.

For further assistance, visit the official Adesso website or refer to the contact information provided with your product

packaging.