

[Manuals.plus](#) /

› [Fel-Pro](#) /

› FEL-PRO 61505 Exhaust Pipe Gasket Installation and Maintenance Manual

Fel-Pro 61505

FEL-PRO 61505 Exhaust Pipe Gasket

INSTALLATION AND MAINTENANCE MANUAL

1. Introduction

The FEL-PRO 61505 Exhaust Pipe Gasket is an application-specific sealing solution designed to provide a reliable seal for your vehicle's exhaust system. Engineered with precision, this gasket prevents exhaust leaks, ensuring optimal performance and reducing noise. Fel-Pro gaskets are manufactured to meet or exceed original equipment specifications, offering durability and a trusted seal for automotive repair environments.



Figure 1: The FEL-PRO 61505 Exhaust Pipe Gasket. This image displays the FEL-PRO 61505 Exhaust Pipe Gasket, a circular steel flange gasket with two bolt holes on either side, designed to create a tight seal in an exhaust system connection.

2. Setup and Installation

Proper installation is critical for the effective sealing performance of the FEL-PRO 61505 Exhaust Pipe Gasket. Always prioritize safety during any automotive repair.

2.1 Safety Precautions

- Ensure the vehicle's engine and exhaust system are completely cool before beginning work to prevent burns.
- Use appropriate personal protective equipment, including gloves and eye protection.
- If lifting the vehicle, use sturdy jack stands on a level surface.

2.2 Installation Steps

1. **Locate and Access:** Identify the exhaust pipe connection where the gasket needs to be replaced or installed. This typically involves removing bolts connecting two exhaust pipe flanges.
2. **Remove Old Gasket:** Carefully remove the old, worn, or damaged gasket. If the old gasket is stuck, gentle prying may be necessary.
3. **Clean Surfaces:** Thoroughly clean both mating flange surfaces. Remove any rust, carbon deposits, or old gasket material using a wire brush or scraper. A clean, smooth surface is essential for a proper seal.
4. **Position New Gasket:** Place the new FEL-PRO 61505 gasket onto one of the exhaust flanges, aligning the bolt holes. The gasket is designed for a specific fit.
5. **Reassemble Flanges:** Bring the two exhaust flanges together, ensuring the gasket remains properly seated between them. Insert the bolts through the aligned holes.
6. **Tighten Fasteners:** Hand-tighten all bolts first. Then, using a torque wrench, tighten the bolts evenly in a crisscross pattern to the vehicle manufacturer's specified torque values. Over-tightening or uneven tightening can damage the gasket or flanges.
7. **Inspect:** After tightening, visually inspect the installation to ensure the gasket is properly seated and the connection is secure.

3. Operating

Once correctly installed, the FEL-PRO 61505 Exhaust Pipe Gasket functions passively by maintaining a tight, leak-free seal between exhaust system components. It is designed to withstand the high temperatures and pressures of the exhaust system, ensuring that exhaust gases are directed away from the vehicle's cabin and that the exhaust system operates efficiently.

4. Maintenance

The FEL-PRO 61505 Exhaust Pipe Gasket is a maintenance-free component once installed. However, periodic inspection of the exhaust system is recommended as part of routine vehicle maintenance. Look for:

- Visible signs of exhaust leaks (soot marks around the flange).
- Audible exhaust leaks (hissing or puffing sounds).
- Loose or corroded fasteners at the gasket connection.

If a leak is detected, the gasket should be replaced following the installation steps outlined in Section 2.

5. Troubleshooting

If you experience issues after installing or during the use of the exhaust pipe gasket, consider the following:

5.1 Exhaust Leaks

- **Symptom:** Loud exhaust noise, hissing sound, exhaust fumes in the cabin, reduced engine performance.
- **Possible Causes:** Improper gasket installation, damaged gasket, loose or corroded bolts, warped flange surfaces.
- **Solution:**
 - a. Inspect the gasket area for visible signs of damage or improper seating.
 - b. Check the tightness of the flange bolts and re-torque to specifications if necessary.
 - c. If the gasket is damaged or the leak persists, replace the gasket following the installation instructions. Ensure flange surfaces are clean and flat.

6. Specifications

Brand	Fel-Pro
Model	61505
Material	Steel
Shape	Flange
Item Weight	0.48 ounces
Product Dimensions	6 x 4 x 0.02 inches
UPC	614046904545

7. Warranty Information

Warranty coverage for the FEL-PRO 61505 Exhaust Pipe Gasket is typically provided by the manufacturer or the retailer at the time of purchase. Please refer to your original purchase documentation or contact Fel-Pro directly for specific warranty terms and conditions.

8. Customer Support

For technical assistance, product inquiries, or support regarding the FEL-PRO 61505 Exhaust Pipe Gasket, please contact Fel-Pro customer service or an authorized Fel-Pro dealer. You can typically find contact information on the official Fel-Pro website or through your product retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B002E2M1M2>

More documents and user manuals: <https://manuals.plus/>