

One touch KC32

One Touch KC32 Automatic Multi-Grater User Manual

Model: KC32

1. INTRODUCTION

Thank you for choosing the One Touch KC32 Automatic Multi-Grater. This device is designed to safely and effortlessly grate various food items such as cheese, chocolate, nuts, hazelnuts, and cookies. Its hands-free operation makes it ideal for all users, including those with limited dexterity. This manual provides essential information for the proper setup, operation, and maintenance of your new grater.

2. SAFETY INSTRUCTIONS

- Read all instructions carefully before first use.
- Keep the device out of reach of children.
- Do not immerse the motor unit (top part) in water or any other liquid.
- Always ensure the device is switched off before assembling, disassembling, or cleaning.
- Handle grater blades with care as they are sharp.
- Only use the device for its intended purpose as described in this manual.
- Do not attempt to grate frozen foods or extremely hard items, as this may damage the blades or motor.
- Ensure batteries are inserted correctly according to polarity markings.
- Remove batteries if the device will not be used for an extended period.

3. PACKAGE CONTENTS

Your One Touch KC32 Automatic Multi-Grater package includes:

- 1x One Touch KC32 Automatic Multi-Grater unit (motor housing, grating chamber)
- 1x Airtight collection container
- 1x Coarse grater disc
- 1x Fine grater disc
- 1x Lid for collection container



Image: The One Touch KC32 Automatic Multi-Grater shown with its airtight collection container and lid.

4. SETUP

4.1. Battery Installation

1. Ensure the grater is switched off.
2. Locate the battery compartment on the top part of the motor unit.
3. Open the battery compartment cover.
4. Insert 4 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
5. Close the battery compartment cover securely.

4.2. Assembly

1. Select the desired grater disc (coarse or fine).
2. Carefully place the chosen grater disc into the grating chamber, ensuring it sits securely on the central spindle.
3. Attach the grating chamber to the motor unit by twisting until it locks into place.
4. Place the airtight collection container underneath the grating chamber.



Image: The two interchangeable grater discs (coarse and fine) included with the KC32.

5. OPERATING INSTRUCTIONS

1. Ensure the grater is fully assembled with the desired disc and collection container in place.
2. Open the top lid of the grating chamber.
3. Place the food item (e.g., cheese, chocolate, nuts) into the grating chamber. Do not overfill.
4. Close the top lid securely.
5. Press and hold the "One Touch" button located on the top of the unit to begin grating. The device will operate hands-free.
6. Release the button to stop grating.
7. Once grating is complete, remove the collection container. You can use the included lid to store grated items.



Image: The One Touch KC32 grater actively grating cheese into fine strands.



Image: The One Touch KC32 grater actively grating chocolate into fine shavings.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your grater.

1. Before cleaning, ensure the device is switched off and remove the batteries if performing a deep clean.
2. Disassemble the grating chamber, grater disc, and collection container from the motor unit.
3. The grating chamber, grater discs, and collection container are dishwasher safe. Alternatively, wash them by hand with warm, soapy water and rinse thoroughly.

- 4. Wipe the motor unit (top part) with a damp cloth.**Do not immerse the motor unit in water.**
- 5. Ensure all parts are completely dry before reassembling or storing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grater does not turn on.	Batteries are dead or incorrectly inserted.	Check battery polarity or replace with new AA batteries.
Grating performance is poor.	Food item is too hard or too large; grater disc is dull or clogged.	Ensure food items are suitable for grating. Clean the grater disc.
Device stops during operation.	Overload protection activated; batteries are low.	Reduce the amount of food. Replace batteries. Allow motor to cool if it feels warm.

8. SPECIFICATIONS

Model: One Touch KC32

Color: White

Dimensions: 18 x 18 x 18 cm

Weight: 392 Grams

Power Source: 4x AA Batteries (not included)

Material: Durable plastic body, stainless steel grater discs.

Dishwasher Safe Parts: Grating chamber, grater discs, collection container.






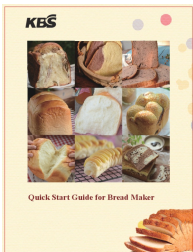
UPC: 771948514941

9. WARRANTY INFORMATION

One Touch products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

10. SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact the retailer where you purchased the One Touch KC32 Automatic Multi-Grater. For further assistance, you may also visit the official One Touch website (if available) for product support and FAQs.

	<p>One Touch Automatic Can Opener (The Classic) User Manual KC08</p> <p>Comprehensive user manual for the One Touch Automatic Can Opener (The Classic), model KC08. Includes instructions for battery installation, operation, safety precautions, care, maintenance, and troubleshooting.</p>
	<p>One Touch Automatic Jar Opener - Original Instructions and User Guide</p> <p>Comprehensive instructions and safety information for the One Touch Automatic Jar Opener (Article No. 92 29 03) by Westfalia Werkzeugcompany. Learn how to use, maintain, and dispose of the product safely.</p>
	<p>Zanussi ZMBN4DX Microwave Oven: Features and Specifications</p> <p>Discover the Zanussi ZMBN4DX microwave oven, featuring an XL turntable for even heating, a built-in grill function for crispy finishes, and an electronic touch-activated door. Learn about its 900W microwave power, automatic defrosting, and favorite function for quick cooking.</p>
	<p>NutriBullet Smart Touch Blender Recipe Guide: Delicious Blending and Healthy Recipes</p> <p>Explore a world of blended possibilities with the NutriBullet Smart Touch Blender recipe guide. Discover easy-to-follow recipes for smoothies, soups, dips, cocktails, and more, along with tips for healthy eating.</p>
	<p>OneShot Low Profile Automatic Soap System Touch-Free Dispenser</p> <p>Discover the OneShot Low Profile Automatic Soap System by Technical Concepts. Features touch-free operation, low refill indicators, and easy installation for hygienic hand hygiene. Includes product specifications and FAQs.</p>
	<p>KBS Bread Maker Quick Start Guide</p> <p>A comprehensive quick start guide for the KBS Bread Maker, covering essential tips for making bread, initial use, basic processes, common formulas, and step-by-step instructions.</p>