

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Capresso](#) /

› [Capresso 464.05 CoffeeTeam GS 10-Cup Digital Coffeemaker Instruction Manual](#)

Capresso 464.05

Capresso 464.05 CoffeeTeam GS 10-Cup Digital Coffeemaker Instruction Manual

Model: 464.05

1. PRODUCT OVERVIEW

The Capresso 464.05 CoffeeTeam GS is a 10-cup digital coffeemaker featuring an integrated conical burr grinder and a glass carafe. This innovative design ensures fresh coffee by grinding whole beans immediately before brewing, preserving maximum flavor. Its compact, space-saving design incorporates direct-feed technology for convenience.



Image: The Capresso 464.05 CoffeeTeam GS coffeemaker, showing its digital display, control panel, integrated bean hopper, and glass carafe. Dimensions are indicated as 15.5 inches high, 9 inches deep, and 9.5 inches wide.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Do not overfill the water reservoir to prevent damage to internal electronics.

3. INITIAL SETUP

1. **Unpacking:** Carefully remove all packaging materials and ensure all parts are present.
2. **First Use Cleaning:** Before first use, clean all removable parts (carafe, filter basket, bean hopper lid) with warm, soapy water. Wipe the exterior of the coffeemaker with a damp cloth.
3. **Initial Rinse Cycle:** Run 2-3 cycles with only water (no coffee) to clean the internal components and remove any manufacturing residues.
4. **Set Clock:** Use the 'H' (Hour) and 'M' (Minute) buttons on the control panel to set the current time.

4. OPERATING INSTRUCTIONS

4.1. Brewing Coffee with Whole Beans (Grind & Brew)

1. **Fill Water Reservoir:** Open the water reservoir lid and pour fresh, cold water into the reservoir. Use the water level markings inside to select the desired number of cups (up to 10). Be careful not to overfill.
2. **Add Coffee Beans:** Open the bean hopper lid and add whole coffee beans. The hopper can hold enough beans for a full 10-cup brew.
3. **Insert Filter:** Open the filter basket holder and place a #4 cone paper filter or the reusable gold-tone filter into the basket.
4. **Select Grind & Brew Mode:** Press the 'MODE' button until the 'GRIND/BREW' indicator light is illuminated.
5. **Select Number of Cups:** Press the '2-10' button to select the number of cups you wish to brew. This setting determines the amount of beans to be ground.
6. **Adjust Aroma (Optional):** Press the 'AROMA' button to select your desired coffee strength (light, medium, or strong).
7. **Start Brewing:** Press the 'ON/OFF' button to start the brewing process. The coffeemaker will automatically grind the beans and then brew the coffee.

4.2. Brewing Coffee with Pre-Ground Coffee

1. **Fill Water Reservoir:** Open the water reservoir lid and pour fresh, cold water into the reservoir, matching the desired number of cups.
2. **Add Pre-Ground Coffee:** Open the filter basket holder and place a #4 cone paper filter or the reusable gold-tone filter into the basket. Add your desired amount of pre-ground coffee to the filter.
3. **Select Brew Mode:** Press the 'MODE' button until the 'BREW' indicator light is illuminated.
4. **Start Brewing:** Press the 'ON/OFF' button to start the brewing process.

4.3. Programming Auto-Start

1. **Prepare Coffeemaker:** Follow steps 1-3 (for whole beans) or 1-2 (for pre-ground) from the respective brewing sections.
2. **Set Program Time:** Press and hold the 'PROG' button until the display flashes. Use the 'H' and 'M' buttons to set your desired brew start time.
3. **Confirm Program:** Press the 'PROG' button again to confirm the set time. The 'PROG' indicator light will illuminate, indicating that the auto-start function is active.

4.4. Sneak-A-Cup Feature

The coffeemaker is equipped with a 'Sneak-A-Cup' feature, allowing you to temporarily remove the carafe during the brewing cycle to pour a cup of coffee. The drip-stop mechanism will temporarily halt the coffee flow. Replace the carafe within 20 seconds to prevent overflow.

Your browser does not support the video tag.

Video: This video demonstrates the general operation and features of the Capresso CoffeeTeam coffeemaker, including filling the bean hopper, water reservoir, and using the control panel for brewing and programming.

5. MAINTENANCE

5.1. Daily Cleaning

- After each use, discard the used coffee grounds and rinse the filter basket and carafe with warm water.
- Wipe down the exterior of the coffeemaker with a damp cloth.

5.2. Feeder Channel Cleaning

Regular cleaning of the feeder channel is crucial to prevent blockages and ensure consistent performance of the conical burr grinder. This should be done periodically, especially if you notice reduced coffee flow or grinding issues.

1. **Remove Feeder Channel Cover:** Locate the small cover over the feeder channel, usually near the bean hopper, and carefully remove it.
2. **Use Included Brush:** Use the small brush provided with your coffeemaker to gently clear any accumulated coffee grounds from the feeder channel.
3. **Replace Cover:** Once clean, securely replace the feeder channel cover.

Your browser does not support the video tag.

Video: This video demonstrates the process of cleaning the feeder channel of the Capresso CoffeeTeam coffeemaker using the included brush.

5.3. Descaling

Depending on water hardness, descaling should be performed every 2-4 months to remove mineral deposits. Use a commercial descaling solution or a mixture of white vinegar and water (1 part vinegar to 2 parts water). Follow the descaling product's instructions or run a brew cycle with the solution, then rinse thoroughly with several cycles of fresh water.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee not brewing.	No water in reservoir, coffeemaker not plugged in, or brew cycle not initiated.	Ensure reservoir is filled, plug in the coffeemaker, and press the 'ON/OFF' button.
Grinder not working or coffee not feeding.	Feeder channel clogged with grounds, or bean hopper empty.	Clean the feeder channel (refer to Section 5.2) and ensure there are enough whole beans in the hopper.

Problem	Possible Cause	Solution
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio, grind setting, or aroma setting.	Adjust the amount of coffee, experiment with finer/coarser grind settings, or change the 'AROMA' setting.
Water overflowing from reservoir.	Reservoir overfilled.	Do not fill water above the maximum fill line.
Carafe overflowing.	Carafe not placed correctly, or drip-stop mechanism clogged.	Ensure carafe is fully seated. Clean the drip-stop mechanism if it appears clogged.

7. SPECIFICATIONS

- **Brand:** Capresso
- **Model Name:** CoffeeTeam GS
- **Item Model Number:** 464.05
- **Capacity:** 10 Cups
- **Color:** Black
- **Special Feature:** Coffee Grinder, Permanent Filter, Programmable
- **Coffee Maker Type:** Drip Coffee Machine
- **Style:** Glass Carafe
- **Operation Mode:** Semi-Automatic
- **Included Components:** 10-Cup Coffeemaker With Built-In Conical Burr Grinder, Filter
- **Product Dimensions:** 9.25 x 9.25 x 15.25 inches
- **Item Weight:** 10 pounds
- **Power Source:** Corded-Electric
- **Coffee Input Type:** Whole Beans
- **Is Dishwasher Safe:** No

8. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Capresso website or contact Capresso customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

You may also consider purchasing extended protection plans for additional coverage beyond the manufacturer's standard warranty. Options such as 3-Year or 4-Year Protection Plans are available from various retailers.