

Ewbank SC1000

Ewbank Dynamo Steam Cleaner SC1000 User Manual

Model: SC1000

[Introduction](#) [Safety Information](#) [Product Overview](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The Ewbank Dynamo Steam Cleaner SC1000 is a powerful and versatile cleaning device designed to eliminate grease, dirt, and stains using only steam. This chemical-free cleaning solution is suitable for a wide range of surfaces, from floors and carpets to tiles, bathrooms, and kitchen areas. Its compact design and comprehensive set of attachments make it an efficient tool for maintaining a clean and sanitized home environment.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Ewbank Dynamo Steam Cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged from the power outlet before filling with water, emptying, or performing any maintenance.
- Do not leave the steam cleaner unattended while it is operating.
- Keep children and pets away from the appliance when it is in use.
- Use only clean tap water. Do not add cleaning solutions, perfumes, or other chemicals to the water tank, as this can damage the unit and void the warranty.
- Steam is hot. Avoid direct contact with steam to prevent burns. Use caution when opening the water tank cap.
- Do not immerse the appliance in water or any other liquid.
- Regularly check the power cord for damage. Do not operate the appliance with a damaged cord or plug.
- Ensure all attachments are securely fitted before use.

3. PRODUCT OVERVIEW AND COMPONENTS

The Ewbank Dynamo Steam Cleaner SC1000 comes with a variety of accessories designed for comprehensive cleaning. These attachments can be conveniently stored in the front compartment of the unit.



Figure 3.1: Ewbank Dynamo Steam Cleaner SC1000 with all included accessories.



Nylon brush and
Mini Nylon Brush



Floor Head Cleaner
with Brush



Flat Surface Tool



Floor Swivel
Tool Adapter



Extension Tubes



Straight adapter



Reusable
Floor Towels



Jet Nozzle



Water Jug & Funnel



Figure 3.2: Key features of the Ewbank Dynamo Steam Cleaner, including heating to over 200°F, built-in storage, variety of attachments, and chemical-free cleaning.



Figure 3.3: A detailed view of the various accessories included with the steam cleaner, such as nylon brushes, floor head cleaner with brush, flat surface tool, floor swivel tool adapter, straight adapter, jet nozzle, extension tubes, water jug, funnel, and reusable floor towels.

Included Components:

- Steam Dynamo Unit
- 2 x Extension Tubes
- Jet Nozzle
- Floor Head Cleaner with Brush
- Floor Tool Swivel Adapter
- Nylon Brush
- Mini Nylon Brush
- Straight Adapter
- Water Jug & Funnel
- Reusable Floor Towel

4. SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all components from the packaging.
2. **Fill Water Tank:** Ensure the unit is unplugged. Unscrew the water tank cap. Use the provided water jug and funnel to fill the 51 fl. oz. (1.58 Quarts) tank with clean tap water. Do not overfill. Securely replace the cap.
3. **Attach Accessories:** Select the appropriate attachment for your cleaning task. For floor cleaning, connect the extension tubes to the main unit, then attach the floor head cleaner with brush and a reusable floor towel. For detailed cleaning, attach the jet nozzle, nylon brush, or mini nylon brush directly to the steam gun.
4. **Power On:** Plug the steam cleaner into a standard electrical outlet (1500W, 230V). The indicator light will illuminate, signaling that the unit is heating up.
5. **Heat Up:** Allow approximately 8-10 minutes for the water to heat up and produce steam. The indicator light will change or turn off when the unit is ready for use.

5. OPERATING INSTRUCTIONS

The Ewbank Dynamo Steam Cleaner provides steam on demand with up to 54 psi pressure, offering 45 minutes of continuous steam cleaning from a single fill.

General Operation:

- Once the unit is ready, press the steam-on-demand trigger on the steam gun to release steam.
- Always test the steam on an inconspicuous area first to ensure compatibility with the surface.
- Move the attachment slowly over the surface to allow the steam to penetrate and loosen dirt.
- Wipe away loosened dirt and moisture with a clean cloth or the reusable floor towel.

Specific Cleaning Applications:



Figure 5.1: Demonstrating the use of the steam cleaner on hard floors for effective cleaning.


Bathrooms



Tile



Kitchen

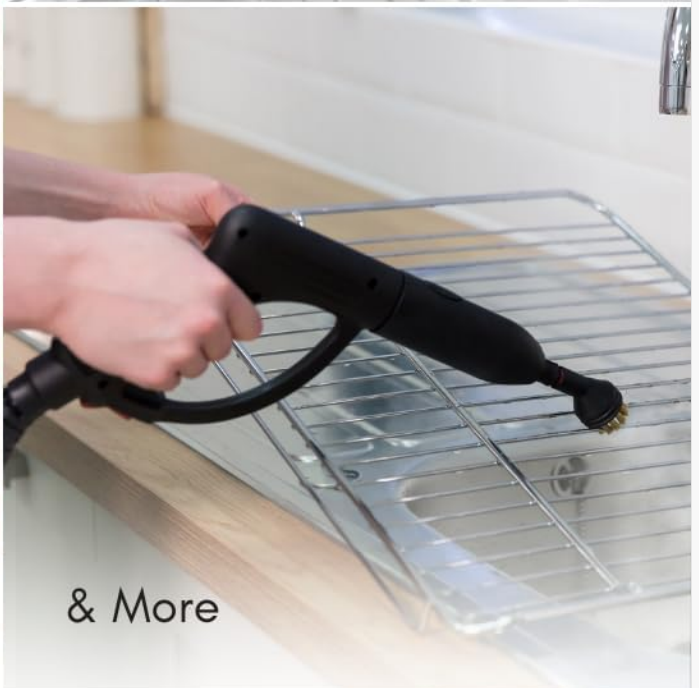

& More

Figure 5.2: Versatile cleaning applications including floors, stovetops, carpets, and windows.



Heats up to over 200° F

Built-in storage

Variety of attachments for many different surfaces

Kills bacteria & viruses without chemicals

Figure 5.3: Further applications covering bathrooms, tiles, kitchen areas, and various other surfaces.

- **Hard Floors & Tiles:** Use the floor head cleaner with extension tubes and a floor towel. Move the head back and forth over the surface. For stubborn spots, hold the head over the area for a few seconds.
- **Carpets & Rugs:** Attach the floor head cleaner with a floor towel. The steam will help refresh and sanitize carpet fibers.
- **Kitchen Surfaces (Stovetops, Countertops, Sinks):** Use the jet nozzle or a nylon brush for concentrated steam. For heavily soiled areas like ovens, apply steam to loosen grime, then wipe with a cloth.
- **Bathrooms (Tiles, Grout, Showers, Sinks):** The jet nozzle and brushes are ideal for cleaning grout lines, faucets, and shower walls. The window/tile attachment can be used for streak-free cleaning of glass shower doors.
- **Windows & Mirrors:** Use the window/tile attachment for a streak-free finish. Steam the surface, then wipe clean.
- **Upholstery & Fabrics:** Use the garment head or a clean cloth over the jet nozzle. Hold the attachment a few inches away from the fabric to avoid oversaturation. Test on an inconspicuous area first.

Official Product Video:

Your browser does not support the video tag.

Video 5.1: Official demonstration of the Ewbank SC1000 Steam Dynamo Steam Cleaner in action, showcasing its various uses and features for effective home cleaning.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your steam cleaner.

- **Empty Water Tank:** After each use, unplug the unit and allow it to cool completely. Carefully unscrew the water tank cap and empty any remaining water.
- **Clean Attachments:** Wash all removable attachments with warm, soapy water. Rinse thoroughly and allow them to air dry before storing. The reusable floor towel can be machine washed.
- **Wipe Down Unit:** Wipe the exterior of the steam cleaner with a damp cloth. Do not use abrasive cleaners or solvents.
- **Descaling (Periodically):** Depending on water hardness, mineral deposits may build up inside the boiler. To descale, mix a solution of equal parts white vinegar and water. Pour into the tank, let it sit for a few hours (or overnight), then drain and rinse thoroughly. Run a tank of clean water through the unit to flush out any residue.
- **Storage:** Store the steam cleaner and its attachments in a cool, dry place. The compact design allows for convenient storage of accessories in the unit's front compartment.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam produced.	Unit not plugged in; water tank empty; insufficient heating time; steam trigger not pressed.	Ensure unit is plugged in; fill water tank; allow 8-10 minutes for heating; press steam trigger firmly.
Steam pressure is low.	Low water level; mineral buildup in boiler; attachment clogged.	Refill water tank; descale the unit (see Maintenance); clean or replace attachment.
Water leaking from unit/attachments.	Water tank cap not securely tightened; attachments not properly fitted; overfilling the tank.	Ensure cap is tight; re-attach accessories firmly; do not overfill the tank.
Unit not turning on.	No power to outlet; faulty power cord/plug.	Check power outlet with another appliance; inspect power cord for damage. If damaged, contact customer support.

8. TECHNICAL SPECIFICATIONS

Model Name: SC1000

Brand: Ewbank

Power Source: Corded Electric

Wattage: 1500 watts

Voltage: 230 volts

Tank Volume: 1.58 Quarts (51 fl. oz.)

Steam Pressure: Up to 54 psi

Continuous Steam Time: Up to 45 minutes

Item Weight: 13 Pounds

Product Dimensions: 22.3 x 14.7 x 12.4 inches

Color: Red

Surface Recommendation: Carpet, Floors, Countertops, Windows, Tiles, Sink, Wall, Upholstery

Special Feature: Corded, On-board storage

Country of Origin: China

9. WARRANTY AND SUPPORT

The Ewbank Dynamo Steam Cleaner SC1000 comes with a **Limited One Year Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical support, or replacement parts, please contact Ewbank Customer Service. Keep your proof of purchase for warranty validation.

For additional information and support, you may also refer to the official Ewbank website or the provided PDF user manual: [Ewbank SC1000 User Manual \(PDF\)](#).

© 2024 Ewbank. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question