

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Westclox](#) /

› [Westclox 14 Inch Round Office Wall Clock \(Model 32189A\) Instruction Manual](#)

Westclox 32189A

Westclox 14 Inch Round Office Wall Clock (Model 32189A) Instruction Manual

INTRODUCTION

Thank you for choosing the Westclox 14 Inch Round Office Wall Clock. This clock features a large, easy-to-read black and white dial, quartz accuracy, and the flexibility of being powered by either battery or an AC adapter. This manual provides detailed instructions for setting up, operating, and maintaining your new wall clock.



Front view of the Westclox 14 Inch Round Office Wall Clock, highlighting its clear, analog display.

SAFETY INFORMATION

- Always use the correct size and type of battery (1 AA battery) as specified.
- Ensure batteries are inserted with correct polarity (+ and -).
- Remove exhausted batteries promptly.
- If using the AC adapter, ensure it is the one provided with the clock and is connected to a suitable power outlet.
- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- This clock is designed for indoor use only.

PACKAGE CONTENTS

- Westclox 14 Inch Round Office Wall Clock
- AC Power Adapter
- Instruction Manual

SETUP

1. Powering the Clock

The Westclox wall clock can be powered by either one AA battery or the included AC power adapter. Choose one power source; do not use both simultaneously.

Battery Installation (1 AA Battery, not included)

1. Locate the battery compartment on the back of the clock.
2. Insert one fresh AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings in the compartment.
3. Close the battery compartment cover securely.

AC Power Connection

1. Locate the DC input jack on the back of the clock.
2. Connect the small plug of the included AC power adapter into the DC input jack.
3. Plug the AC power adapter into a standard wall outlet.



Rear view of the clock, showing the battery compartment and time setting knob.

BATTERY OR ELECTRIC OPERATED!



ELECTRIC ADAPTER INCLUDED

The included AC power adapter for electric operation.

2. Mounting the Clock

The clock features a keyhole slot on the back for easy wall mounting.

1. Choose a suitable location on a wall for the clock.
2. Install a screw or nail into the wall, ensuring it is securely anchored and protrudes enough to engage the keyhole slot.
3. Align the keyhole slot on the back of the clock with the screw/nail on the wall and slide the clock down to secure it in place.

OPERATING INSTRUCTIONS

Setting the Time

Once the clock is powered, set the correct time:

1. Locate the time setting knob on the back of the clock, typically a small wheel or dial near the center of the movement.
2. Gently turn the knob in either direction to move the hour and minute hands to the desired time.
3. For best accuracy, set the time a minute or two ahead, then wait for the exact time to arrive before stopping the hands.

MAINTENANCE


- **Cleaning:** To clean the clock, wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or internal components.
- **Battery Replacement:** If the clock is battery-powered and begins to lose time or stops running, replace the AA battery with a fresh one.
- **Storage:** If storing the clock for an extended period, remove the battery to prevent leakage and potential damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock is not running.	No power or incorrect power source connection.	If battery-powered, check battery polarity and replace with a fresh AA battery. If AC-powered, ensure the adapter is securely plugged into the clock and a working wall outlet.
Clock is losing or gaining time.	Weak battery or unstable power supply.	Replace the AA battery with a fresh one. If using AC power, try a different outlet or ensure the adapter connection is stable.
Hands are stuck or not moving smoothly.	Obstruction or internal mechanism issue.	Ensure nothing is obstructing the hands. If the issue persists, contact customer support. Do not attempt to disassemble the clock.

SPECIFICATIONS

- **Brand:** Westclox
- **Model:** 32189A
- **Dimensions:** 14 inches (Width) x 14 inches (Height)
- **Display Type:** Analog
- **Power Source:** 1 AA Battery (not included) or AC Adapter (included)
- **Movement:** Quartz
- **Material:** Plastic frame, Glass lens, Metal hands
- **Indoor/Outdoor Usage:** Indoor
- **Item Weight:** Approximately 2.35 pounds

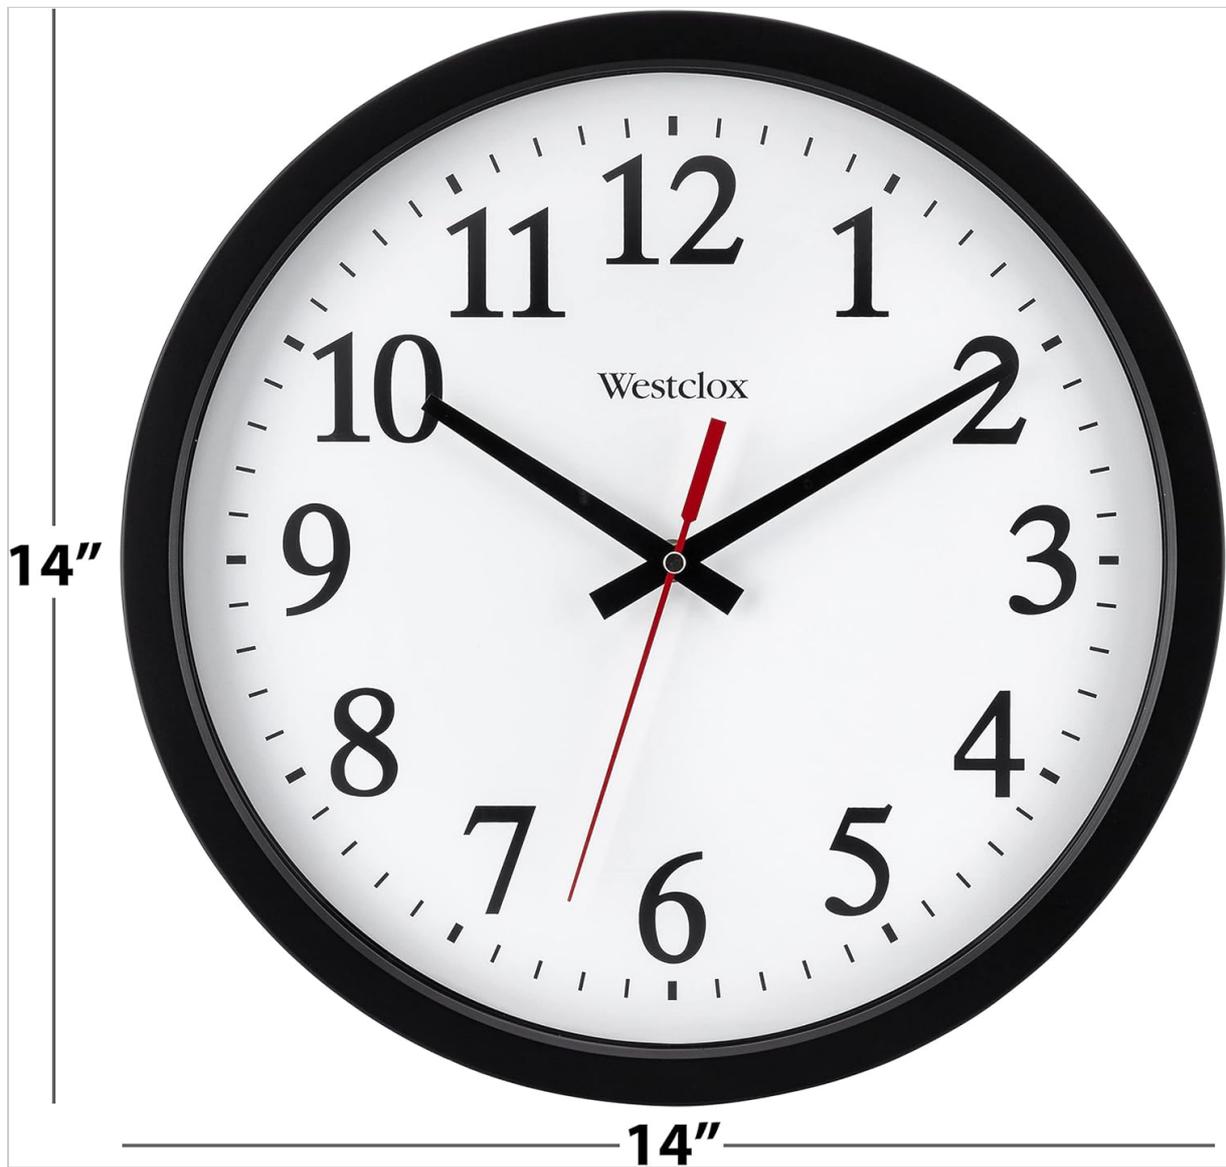

Clock dimensions: 14 inches in diameter.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Westclox website. Keep your purchase receipt for warranty claims.

For additional assistance, you may contact Westclox customer service directly.