

[Manuals.plus](#) /

› [Bosch](#) /

› Bosch Steam Iron TDA2610 User Manual

Bosch TDA2610

Bosch Steam Iron TDA2610 User Manual

Model: TDA2610

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the voltage indicated on the rating plate corresponds to your mains voltage.
- Do not immerse the iron, power cord, or plug in water or other liquids.
- Keep the iron out of reach of children and persons with reduced physical, sensory, or mental capabilities.
- Never leave the iron unattended while it is connected to the mains supply or cooling down.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged. Contact authorized service personnel for repair.
- Place the iron on a stable, heat-resistant surface when not in use.
- The soleplate can become extremely hot. Avoid contact with skin.
- Unplug the iron from the mains socket before filling or emptying the water tank, and after use.

2. PRODUCT OVERVIEW

The Bosch TDA2610 Steam Iron is designed for efficient and effective ironing with its powerful steam features and durable soleplate.



Image 2.1: Top-down view of the Bosch TDA2610 Steam Iron, showing the control panel and water tank.

Key Components:

- **Water Tank:** Transparent, 290 ml capacity for easy monitoring and refilling.

- **Temperature Control Dial:** For selecting appropriate ironing temperature for different fabrics.
- **Steam Control Slider:** Adjusts continuous steam output.
- **Steam Shot Button:** Delivers a powerful burst of steam.
- **Spray Button:** Activates the water spray function.
- **Soleplate:** Palladium-glissée soleplate with three steam zones for optimal steam distribution and smooth gliding.
- **Slim Ironing Tip:** Designed for easy access around buttons and seams.
- **LED Indicator Light:** Illuminates when the iron is heating up and turns off when the set temperature is reached.
- **Flexible Power Cord:** 1.9 meters long with cord storage.

3. SETUP AND FIRST USE

Before First Use:

1. Remove any stickers or protective film from the soleplate.
2. It is recommended to iron an old piece of fabric (e.g., a towel) for a few minutes to remove any manufacturing residues.

Filling the Water Tank:

1. Ensure the iron is unplugged from the mains socket.
2. Set the steam control slider to the 'dry ironing' position (no steam).
3. Open the water tank filler cap.
4. Fill the water tank with tap water up to the 'MAX' mark. Do not overfill.
5. Close the filler cap securely.



Image 3.1: Illustrates the process of filling the water tank of the steam iron.

4. OPERATING INSTRUCTIONS

Setting the Temperature:

1. Plug the iron into a suitable mains socket.
2. Turn the temperature control dial to the desired setting according to the fabric type (refer to garment care labels).
3. The LED indicator light will illuminate, indicating the iron is heating. It will turn off when the set temperature is reached.

Steam Ironing:

Steam ironing is suitable for most fabrics except synthetics and silk. Ensure the water tank is filled.

1. Set the temperature control dial to the steam zone (usually between '••' and 'MAX').
2. Once the LED indicator light turns off, slide the steam control to the desired steam output.
3. For an extra burst of steam, press the **Steam Shot** button. This is useful for stubborn creases.
4. For vertical steaming (e.g., curtains, hanging garments), hold the iron vertically and press the **Steam Shot** button.



Image 4.1: The iron's soleplate gliding smoothly over fabric, demonstrating effective ironing.

Dry Ironing:

For dry ironing, set the steam control slider to the 'dry ironing' position (no steam symbol). Select the appropriate temperature for the fabric.

Spray Function:

Press the **Spray** button to moisten stubborn creases. Ensure the water tank contains water.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your iron and ensure optimal performance.

Cleaning the Soleplate:

- After use, allow the iron to cool completely.
- Wipe the soleplate with a damp cloth and a non-abrasive liquid cleaner, if necessary.
- Do not use abrasive scourers or chemical cleaners as these can damage the soleplate.

Anti-Calc / Self-Clean Function:

The iron features a dual cleaning function with a self-clean system and calc-clean to prevent limescale buildup.

1. Fill the water tank to the MAX level.
2. Set the steam control to 'no steam' and the temperature dial to 'MAX'.
3. Plug in the iron and wait until the indicator light turns off.
4. Unplug the iron.
5. Hold the iron horizontally over a sink.
6. Activate the self-clean function (refer to the specific button/lever on your iron, usually marked 'Self Clean' or 'Calc Clean'). Hot water and steam will be expelled from the soleplate, carrying away scale particles.
7. Shake the iron gently until the water tank is empty.
8. Heat the iron again to dry the soleplate.

Storage:

- After use, unplug the iron and allow it to cool completely.
- Empty any remaining water from the tank.
- Wrap the power cord around the cord storage area.
- Store the iron upright in a safe, dry place.



Image 5.1: Detail of the flexible cord connection, highlighting the design for durability and ease of storage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet fault; temperature dial set to 'OFF'.	Check plug and power outlet; turn temperature dial to a heat setting.

Problem	Possible Cause	Solution
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to 'dry ironing'.	Fill water tank; set temperature to steam zone; adjust steam control.
Water leaks from soleplate.	Temperature too low for steam; water tank overfilled; calc buildup.	Increase temperature; do not overfill; perform Anti-Calc/Self-Clean.
White flakes coming from soleplate.	Limescale buildup.	Perform Anti-Calc/Self-Clean function.

7. TECHNICAL SPECIFICATIONS

- **Model:** TDA2610
- **Power:** 2100 W
- **Voltage:** 220 V
- **Soleplate:** Palladium-glissée
- **Continuous Steam Output:** 30 g/min
- **Steam Shot:** 90 g
- **Water Tank Capacity:** 290 ml
- **Cord Length:** 1.9 m
- **Special Features:** Variable Temperature Control, Vertical Steam, Spray Function, Dual Anti-Calc System (Self-Clean & Calc-Clean), Slim Ironing Tip
- **UPC:** 013201137987

8. WARRANTY AND SUPPORT

This Bosch appliance comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your product or visit the official Bosch website.

For technical support, spare parts, or service inquiries, please contact your local authorized Bosch service center. You can find contact information on the Bosch website or in the documentation provided with your iron.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B002G1Y2ZA>

More documents and user manuals: <https://manuals.plus/>