

[Manuals.plus](#) /

› [Bosch](#) /

› Bosch TDZ1101 Descaling Solution User Manual

Bosch TDZ1101

Bosch TDZ1101 Descaling Solution User Manual

Model: TDZ1101

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of the Bosch TDZ1101 Descaling Solution. This product is designed to remove limescale deposits from compatible Bosch steam generators and steam irons, ensuring optimal performance and extending the lifespan of your appliance. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INSTRUCTIONS

WARNING: Descaling solutions contain chemicals that can be harmful if misused. Always follow these safety guidelines:

- **Keep out of reach of children.** Store the product in a secure location.
- **Avoid contact with skin and eyes.** In case of contact, rinse immediately with plenty of water and seek medical advice.
- **Do not ingest.** If swallowed, seek immediate medical attention and show the product packaging or label.
- **Use in a well-ventilated area.** Avoid inhaling fumes.
- **Wear protective gloves and eye protection** during handling and application.
- **Do not mix with other cleaning agents or chemicals.** This can produce dangerous reactions.
- **Dispose of empty containers responsibly** according to local regulations.

Refer to the specific instructions provided with your appliance for detailed descaling procedures, as these may vary.

3. PRODUCT OVERVIEW

The Bosch TDZ1101 is a liquid descaling solution supplied in ampoules, designed to effectively dissolve stubborn limescale from the internal components of Bosch steam generators and steam irons. Regular descaling helps maintain appliance efficiency and performance.



Figure 1: Bosch TDZ1101 Descaling Solution packaging. The image shows the product box containing four ampoules of descaling liquid, labeled "4 AntiCalc" and indicating compatibility with TDS11/TS11 steam generators. The packaging also states "Original parts for Bosch Siemens".

Each package contains multiple ampoules, providing several applications. The solution is formulated to be safe for the internal materials of compatible Bosch appliances.



Figure 2: Close-up of Bosch TDZ1101 Descaling Solution vial. This image displays a single vial of the descaling solution, with text indicating it is for compact steam generators and steam irons from specific series like TDS11, TS11, TD51, TS12, TD90, TDA36, TDA50, TDA70. It also confirms "Original parts for Bosch Siemens".

4. PREPARATION FOR DESCALING

Before beginning the descaling process, ensure the following:

- **Consult your appliance's user manual:** Always refer to the specific descaling instructions for your Bosch steam generator or iron model. Procedures may vary.
- **Ensure the appliance is cool and unplugged:** Disconnect the appliance from the power supply and allow it to cool down completely.
- **Empty the water tank:** Drain any remaining water from the appliance's water tank.
- **Prepare a suitable container:** Have a basin or container ready to collect the descaling solution and rinse water.
- **Wear protective gear:** Put on protective gloves and eye protection.

5. OPERATING INSTRUCTIONS: DESCALING PROCEDURE

The following is a general guide. Always prioritize the instructions in your specific appliance's manual.

1. **Open the descaling ampoule:** Carefully open one ampoule of Bosch TDZ1101 descaling solution.
2. **Pour into the water tank:** Pour the entire contents of the ampoule into the water tank of your steam generator or iron.
3. **Add water:** Fill the water tank with clean tap water up to the maximum fill line, or as specified by your appliance's manual, to dilute the descaling solution.
4. **Initiate descaling cycle:** Follow your appliance's instructions to start the descaling program or process. This typically involves heating the appliance and allowing the solution to work through the system.
5. **Allow to act:** Let the descaling solution act for the recommended duration as per your appliance's manual. This may involve leaving the appliance on for a period or performing specific steam bursts.

- 6. **Rinse thoroughly:** After the descaling cycle is complete, empty the water tank. Fill the tank with clean water and run several rinsing cycles (e.g., steaming or flushing) to remove all traces of the descaling solution. Repeat this step until no residue or odor remains.
- 7. **Wipe clean:** Wipe the soleplate of the iron or any external parts that came into contact with the solution with a damp cloth.
- 8. **Test on an old cloth:** Before ironing delicate garments, test the iron on an old piece of fabric to ensure no descaling residue is left that could stain clothes.

The Bosch TDZ1101 solution is designed to dissolve even stubborn limescale, restoring efficient steam production.

6. MAINTENANCE AND STORAGE

To ensure the longevity and effectiveness of the descaling solution:

- **Storage:** Store the unused ampoules in their original packaging in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Frequency of use:** The frequency of descaling depends on the hardness of your water and how often you use your appliance. Refer to your appliance's manual for recommended descaling intervals.
- **Disposal:** Dispose of empty ampoules and any leftover solution according to local environmental regulations. Do not pour down drains indiscriminately.

7. TROUBLESHOOTING

If you encounter issues after descaling, consider the following:

- **Appliance still not steaming effectively:**
 - Ensure you followed all steps in your appliance's manual.
 - The limescale build-up might have been severe. A second descaling cycle might be necessary.
 - Ensure the appliance is fully rinsed; residual descaler can sometimes impede steam.
- **White flakes or residue:**
 - This indicates that limescale has been dislodged but not fully flushed out. Perform additional rinsing cycles with clean water.
 - Wipe the soleplate thoroughly.
- **Unusual odor:**
 - This usually means residual descaling solution. Continue rinsing with clean water until the odor dissipates.

If problems persist, consult your appliance's user manual or contact Bosch customer support.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Bosch
Model Number	TDZ1101

Product Form	Liquid
Volume per Ampoule	25 Milliliters
Total Package Volume	100.0 Milliliters
Product Weight	150 Grams
Special Feature	Descaler
GTIN / UPC	787269224322
Dimensions (Package)	12.4 x 4.6 x 4.6 cm

9. WARRANTY AND SUPPORT

This Bosch TDZ1101 Descaling Solution is designed as an accessory for Bosch appliances. The product itself is typically covered by a standard manufacturer's warranty against defects. The provided information indicates a product guarantee of "2." which generally refers to a 2-year warranty period for accessories in many regions.

For specific warranty details, product support, or technical assistance, please contact Bosch customer service directly or visit the official Bosch website. Ensure you have your product model number (TDZ1101) and any relevant appliance model numbers ready when contacting support.

Online Resources: For further information and support, you may visit the official Bosch website:www.bosch-home.com

© 2024 Bosch. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B002G1Y304>

More documents and user manuals: <https://manuals.plus/>