

Jensen CD-560

Jensen CD-560 Portable Stereo CD Player User Manual

Model: CD-560

Brand: Jensen

INTRODUCTION

Thank you for purchasing the Jensen CD-560 Portable Stereo CD Player with AM/FM Stereo Radio and Bluetooth. This unit is designed to provide high-quality audio playback from various sources, including CDs, AM/FM radio, Bluetooth-enabled devices, and auxiliary input devices. Please read this manual thoroughly before operating the unit to ensure proper use and to maximize its performance.

SAFETY INFORMATION

- **Power Source:** Operate the unit only from the power sources indicated in this instruction manual or as marked on the unit.
- **Ventilation:** Do not block any ventilation openings. Ensure adequate space around the unit for proper airflow.
- **Water and Moisture:** Do not expose the unit to rain or moisture. Do not place objects filled with liquids, such as vases, on the unit.
- **Heat:** Do not place the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- **Batteries:** When using batteries, ensure they are inserted with correct polarity. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries responsibly.
- **Listening Volume:** Avoid listening at excessively high volume levels for prolonged periods to prevent hearing damage.

PACKAGE CONTENTS

Please check that the following items are included in your package:

- Jensen CD-560 Portable Stereo CD Player Unit
- AC Power Cord
- Instruction Manual (this document)

PRODUCT OVERVIEW



Image: Front view of the Jensen CD-560 Portable Stereo CD Player. The unit is black with a foldable carrying handle on top and a telescopic antenna extending from the rear. The front features two speaker grilles on either side of a central control panel. The control panel includes a blue LED display showing '15', and various buttons with blue backlighting, including 'PROG', 'PLAY/PAUSE', 'REPEAT', 'PAIRING', and track navigation buttons. A circular play/pause button is centrally located with a blue illuminated ring. On the right side, a tuning knob and 'FM ST' indicator are visible.

Key Features and Controls:

- **Top-Loading CD Player:** Compatible with standard audio CDs and CD-R/RW discs.
- **AM/FM Stereo Radio:** Built-in tuner for receiving local radio stations. Features a telescopic antenna for improved reception.
- **Bluetooth Connectivity:** Supports A2DP & AVRCP profiles for wireless audio streaming from compatible devices.
- **Auxiliary Input:** 3.5mm jack for connecting external audio devices like MP3 players or smartphones.
- **Blue LED Display:** Shows CD track number and other operational information.
- **Blue Ambient Lighting:** Provides a subtle blue glow around controls.
- **Control Buttons:** Include Skip/Search (forward & back), Repeat (1 or all), Program (PROG), Play/Pause, and Pairing.
- **Foldable Carrying Handle:** For easy portability.
- **Power Options:** Operates on AC power or 8 'C' size batteries.

SETUP

Power Connection

The CD-560 can be powered by either AC household current or batteries.

AC Power Operation:

1. Ensure the unit's power switch is in the OFF position.
2. Insert the AC power cord into the AC jack located on the back of the unit.
3. Plug the other end of the AC power cord into a standard AC 120V~60Hz wall outlet.

Battery Power Operation:

1. Open the battery compartment door located on the bottom of the unit.
2. Insert 8 'C' size (UM-2) batteries (not included) into the compartment, observing the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment door securely.

Note: Disconnect the AC power cord when operating on batteries to prevent battery drain.

Antenna Adjustment

For optimal FM radio reception, fully extend the telescopic antenna. For AM reception, the unit has a built-in ferrite bar antenna, which is directional. Rotate the unit for the best AM reception.

OPERATING INSTRUCTIONS

General Controls

- **Power ON/OFF:** Use the main power switch to turn the unit on or off.
- **Function Selector:** Use the selector switch to choose between CD, AM, FM, Bluetooth, or AUX modes.
- **Volume Control:** Rotate the volume knob to adjust the sound level.

CD Playback

1. Set the Function Selector to 'CD'.
2. Open the CD compartment door by gently lifting the 'OPEN/CLOSE' area.
3. Place a CD (label side up) onto the center spindle.
4. Close the CD compartment door firmly.
5. The CD will begin playing automatically. If not, press the **PLAY/PAUSE** button.
6. **PLAY/PAUSE:** Press to pause playback, press again to resume.
7. **SKIP/SEARCH:** Press the **SKIP FORWARD** (▶▶) or **SKIP BACKWARD** (◀◀) buttons to skip to the next or previous track. Press and hold to search rapidly through the current track.
8. **REPEAT:** Press the **REPEAT** button once to repeat the current track. Press again to repeat all

tracks on the CD. Press a third time to cancel repeat mode.

9. **PROGRAM:** To program tracks for playback, press the **PROG** button while the CD is stopped. Use the **SKIP** buttons to select a track, then press **PROG** again to confirm. Repeat for up to 20 tracks. Press **PLAY/PAUSE** to start programmed playback.

AM/FM Radio Operation

1. Set the Function Selector to 'AM' or 'FM'.
2. Extend the telescopic antenna for FM reception.
3. Rotate the **TUNING** knob to select your desired radio station.
4. The 'FM ST' indicator will illuminate when a strong FM stereo signal is received.

Bluetooth Operation

1. Set the Function Selector to 'Bluetooth'. The unit will enter pairing mode, and the 'PAIRING' indicator will flash.
2. Enable Bluetooth on your external device (e.g., smartphone, tablet) and search for available devices.
3. Select 'Jensen CD-560' from the list of found devices.
4. Once paired, the 'PAIRING' indicator will stop flashing and remain solid. You can now play audio from your Bluetooth device through the CD-560.
5. Use the controls on your Bluetooth device or the CD-560 (Play/Pause, Skip) to control playback.

Auxiliary Input

1. Set the Function Selector to 'AUX'.
2. Connect one end of a 3.5mm audio cable (not included) to the AUX IN jack on the CD-560.
3. Connect the other end of the cable to the headphone jack or audio output of your external audio device.
4. Play audio from your external device. The sound will be output through the CD-560 speakers.

MAINTENANCE

Cleaning the Unit

Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.

CD Lens Care

A dirty CD lens can cause skipping or playback errors. Use a specialized CD lens cleaner disc to clean the lens periodically. Do not touch the lens with your fingers.

Battery Replacement

When the unit's performance degrades or the sound becomes distorted during battery operation, it's time to replace the batteries. Follow the battery power operation steps in the Setup section to replace

all 8 'C' size batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	AC cord not properly connected; Batteries are dead or inserted incorrectly.	Check AC cord connection; Replace batteries or ensure correct polarity.
CD skips or does not play.	CD is dirty or scratched; CD lens is dirty; CD is inserted incorrectly.	Clean or replace CD; Use a CD lens cleaner; Reinsert CD correctly.
Poor radio reception.	Antenna not extended; Unit position.	Fully extend FM telescopic antenna; Rotate unit for better AM reception.
Bluetooth device cannot pair.	Unit not in pairing mode; Device too far; Bluetooth on device is off.	Ensure unit is in Bluetooth mode and 'PAIRING' flashes; Move device closer; Enable Bluetooth on your device.
No sound from AUX input.	Cable not connected properly; Volume too low on external device.	Check 3.5mm cable connection; Increase volume on external device.

SPECIFICATIONS

Feature	Detail
Model Number	CD-560 (1854390)
Power Source	AC 120V~60Hz or 8 x 'C' (UM-2) Batteries
Output Power	2 x 1.5W RMS
CD Compatibility	CD, CD-R/RW
Bluetooth Version	Supports A2DP & AVRCP
Auxiliary Input	3.5mm Stereo Jack
Product Dimensions (L x W x H)	12 x 10.1 x 5.6 inches
Item Weight	6 pounds
Color	Black

WARRANTY AND SUPPORT

Jensen products are designed for reliability and performance. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Jensen website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may also contact Jensen customer service directly through their official channels.

© 2025 Jensen. All rights reserved.

Related Documents - CD-560


	<p>Jensen CD-560 Portable Stereo Compact Disc Player User Manual</p> <p>User manual for the Jensen CD-560 portable stereo compact disc player with AM/FM stereo radio and Bluetooth. Includes safety instructions, operation guides, troubleshooting, and technical specifications.</p>
	<p>Jensen CD-590 Portable Bluetooth Stereo CD Cassette Player User Manual</p> <p>Comprehensive user manual for the Jensen CD-590 portable stereo system. Discover features like Bluetooth streaming, CD/cassette playback, AM/FM radio, and auxiliary input. Includes essential safety guidelines, operating instructions, troubleshooting tips, and warranty information from Spectra Merchandising International.</p>
	<p>Jensen CD-560 Portable Stereo CD Player with AM/FM Radio and Bluetooth User Manual</p> <p>User manual for the Jensen CD-560 portable stereo compact disc player, detailing its features, operation, safety instructions, troubleshooting, and specifications. Includes AM/FM radio, Bluetooth connectivity, and CD playback.</p>
	<p>Jensen CD-475 Portable CD Player with AM/FM Stereo Radio User Manual</p> <p>User manual for the Jensen CD-475 portable CD player with AM/FM stereo radio. Provides operating instructions, safety precautions, troubleshooting, and specifications for optimal use.</p>
	<p>Jensen AWM970 Owner's Manual: Installation, Operation, and Specifications</p> <p>This comprehensive owner's manual provides detailed instructions for the Jensen AWM970 mobile audio system. It covers installation, basic operation, tuner, CD, DVD, VCD, MP3, USB, and iPod functions, remote control operation, setup menus, and technical specifications. Includes wiring diagrams and troubleshooting information.</p>



[Jensen JWM40 Mobile Audio System: Installation and Owner's Manual](#)

Comprehensive guide for the Jensen JWM40 mobile audio system, covering installation, operation, features like Bluetooth, CD/DVD/MP3 playback, and troubleshooting. Learn how to set up and use your Jensen JWM40.

Documents - Jensen – CD-560

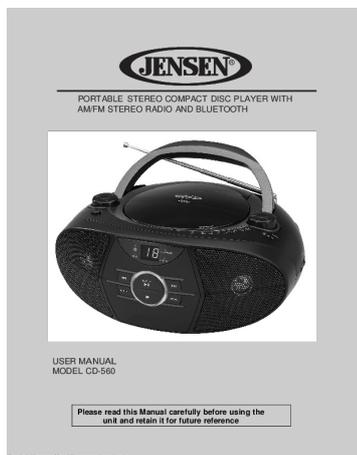


[\[pdf\] User Manual Instructions](#)

ManualsLib Makes it easy to find manuals online! Search through 700 000 online and instruction user service guides owners installation Provided By MANUALSLIB COM manualslib Product Manual JENSEN Portable Stereo CD Player with AM FM Radio Bluetooth

09b0e27e7d92257345ff4e80f9f29f2cf33e4808 1cda1aa0dc22c77e3c0c00a2caaa0358d59fba5a manual JENC560 petra attachment 3903076 606c47e23078c726318475 |||

PORTABLE STEREO COMPACT DISC PLAYER WITH AM/FM STEREO RADIO AND BLUETOOTH USER MANUAL MODEL **CD-560** Please read this Manual carefully before using the unit and retain it for future reference Downloaded from www.Manualslib.com manuals search engine WARNING TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE...

lang:en score:42 filesize: 1.64 M page_count: 15 document date: 2018-02-06

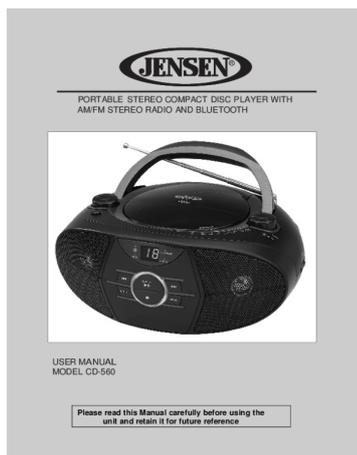

[Jensen CD-560 Portable Stereo Compact Disc Player User Manual](#)

User manual for the Jensen CD-560 portable stereo compact disc player with AM/FM stereo radio and Bluetooth. Includes safety instructions, operation guides, troubleshooting, and technical specifications.


lang:en score:33 filesize: 1.64 M page_count: 15 document date: 2019-07-24



[\[pdf\] User Manual](#)

Microsoft Word CD 560 Spanish USA 1213 CLEMENT ESTEREO PORTÁTIL REPRODUCTOR DE DISCOS MANUAL DEL PROPIETARIO MODELO Por favor lea este Manual de Instrucciones cuidadosamente antes utilizar esta unidad y consérvelo para SIB spectrainl images stories jn UM ESTREO PORTTIL REPRODUCTOR DE DISCOS COMPACTOS CON AM/FM RADIO Y BLUETOOTH MANUAL DEL PROPIETARIO MODELO **CD-560** Por favor, lea este Manual de Instrucciones cuidadosamente antes de utilizar esta unidad y consrvlo para futura referencia. ADVERTENCIA PARA PREVENIR EL PELIGRO DE INCENDIO O DESCARGA, ...

lang:es score:23 filesize: 8.46 M page_count: 20 document date: 2015-03-12

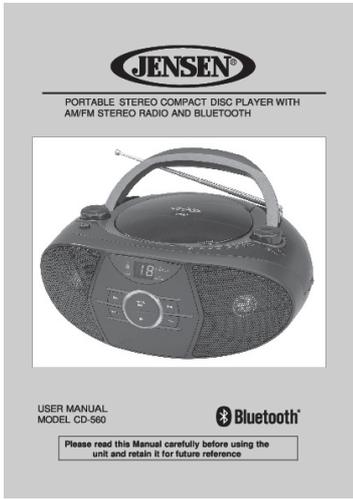


[\[pdf\]](#) User Manual Label

Microsoft Word CD 560 English UM USA 1213 CLEMENT Download Spectra Merchandising International Inc Jensen EIB spectraintl images stories jn |||

E-1 AC Outlet Polarized A C Plug E-2 E-3 E-4 1 8 7 2 3 6 4 BBS 5 9 10 19 11 18 12 17 16 13 14 15 20 /AUX IN 21 22 23 E-5 E-6 PLEASE READ THIS IMPORTANT INFORMATION: CD mechanisms used in devices like this are designed to fully read all commercial CDs. They will als...

lang:en score:11 filesize: 11.99 M page_count: 15 document date: 2015-03-12

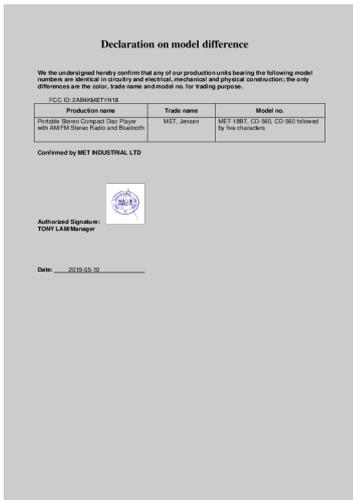

[\[pdf\]](#) Decleration of Conformity

FACSIMILE TRANSMISSION User Intertek Testing Services Family models declaration MET INDUSTRIAL LTD METYH18 Portable Stereo Compact Disc Player with AM FM Radio and Bluetooth 2AB4KMETYH18 metyh18

Declaration on model difference We the undersigned hereby confirm that any of our production units ... pact Disc Player with AM/FM Stereo Radio and Bluetooth Trade name MET, Jensen Model no. MET-18BT, **CD-560, CD-560** followed by five characters Confirmed by MET INDUSTRIAL LTD Authorized Signature: T...

lang:en score:10 filesize: 54 K page_count: 1 document date: 2019-05-13



[\[pdf\]](#) Decleration of Conformity

Models Difference MET INDUSTRIAL LTD METYH18B Portable Stereo Compact Disc Player with AM FM Radio and Bluetooth 2AB4KMETYH18B metyh18b

Declaration on model difference We the undersigned hereby c nfirm that any of our production unit ... le Steeo Compact Disc Playe with AM/FM Stereo Radio and Bluetooth MET, JENSEN Model no. MET-18BT, **CD-560A, CD-5608, CD-560C, CD-5600** and **CD-560** followed by five characters whee the 5 characteS deno...

lang:en score:10 filesize: 70.41 K page_count: 1 document date: 2021-06-09