Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Logitech /
- Logitech Wireless Presenter R400, PowerPoint Clicker with Laser Pointer, Wireless Presentation Clicker Remote Red Laser 5
 buttons Clicker

Logitech 910-001354

Logitech Wireless Presenter R400 User Manual

Model: 910-001354 | Brand: Logitech

Introduction

The Logitech Wireless Presenter R400 is designed to enhance your presentations with intuitive controls and a bright red laser pointer. Its 2.4 GHz wireless connectivity allows you to move freely up to 50 feet away from the receiver, providing flexibility and greater impact during your talks. This device offers a smooth and simple way to navigate through your slides with easy-to-find controls.



WHAT'S IN THE BOX

- R400 Presentation Pointer
- Wireless Mini-Receiver
- 2 x AAA Batteries
- Carrying Case
- Quick-Start Guide

SETUP

1. Battery Installation

The R400 requires 2 AAA batteries for operation. To install or replace batteries:

- 1. Locate the battery compartment on the back of the presenter.
- 2. Slide open the battery cover.
- 3. Insert 2 AAA batteries, ensuring correct polarity (+/-).
- 4. Close the battery cover securely.

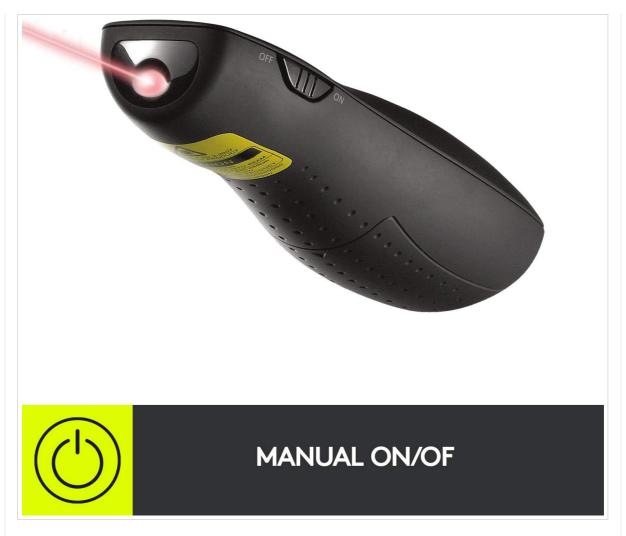


Figure 2: Battery compartment location and other features.

2. Connecting the Wireless Mini-Receiver

The R400 uses a plug-and-play USB receiver. No software installation is required.

- 1. Remove the wireless mini-receiver from its storage slot at the bottom of the presenter.
- 2. Plug the mini-receiver into an available USB port on your computer.
- 3. The presenter should automatically connect to your computer.

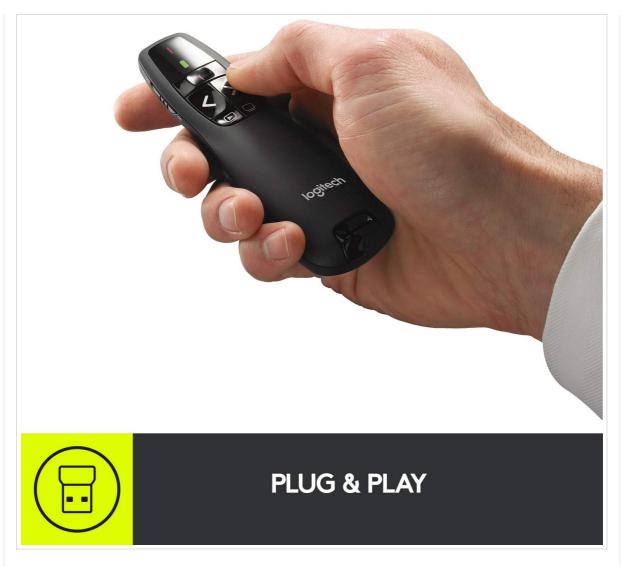


Figure 3: Plugging the USB receiver into a computer.



Figure 4: The USB receiver provides up to 50-foot wireless range.

OPERATING INSTRUCTIONS

Power On/Off

Locate the ON/OFF switch on the side of the presenter. Slide it to the 'ON' position to power on the device and to 'OFF' when not in use to conserve battery life.



Figure 5: Manual ON/OFF switch for battery conservation.

The R400 features intuitive controls for seamless presentation navigation:

- Laser Pointer Button: Press and hold to activate the bright red laser pointer. Release to turn off.
- Next Slide (>) Button: Press to advance to the next slide in your presentation.
- Previous Slide (<) Button: Press to go back to the previous slide in your presentation.
- Start Presentation Button: Initiates the slideshow from the current slide.
- Black Screen Button: Toggles the screen black, useful for drawing audience attention back to you. Press again to resume the presentation.



Figure 6: Overview of the R400's control buttons.



Figure 7: The bright red laser pointer highlights key points effectively.

MAINTENANCE

Battery Replacement

When the battery indicator light turns red or the presenter's performance degrades, it's time to replace the batteries. Refer to the "Battery Installation" section under Setup for detailed steps.

Cleaning

Wipe the presenter with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

TROUBLESHOOTING

- Presenter not responding:
 - Ensure the mini-receiver is securely plugged into a USB port.

- Check if the presenter is powered on (ON/OFF switch).
- Replace the batteries if the battery indicator is low or off.
- Try plugging the mini-receiver into a different USB port on your computer.

• Laser pointer not working:

- Ensure the presenter is powered on.
- Press and hold the laser pointer button firmly.
- Verify that the surface you are pointing at is suitable for laser projection (some screens or glass surfaces may not show the laser well).

• Limited wireless range:

- Ensure there are no major obstructions (e.g., walls, large metal objects) between the presenter and the receiver.
- Move closer to the computer if experiencing interference.

SPECIFICATIONS

Wireless Type	2.4 GHz Radio Frequency
Wireless Range	Up to 50 feet (15 meters)
Laser Type	Class 2 Red Laser
Battery Type	2 x AAA Batteries (included)
Operating System Compatibility	Windows 10, 11 or later; Windows XP, Windows Vista
Hardware Platform	PC
Item Weight	3.52 ounces
Product Dimensions	8 x 6.2 x 1.9 inches
Model Number	910-001354

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Logitech website or the Quick-Start Guide included in your product packaging.

An official User Manual (PDF) is available for download:Logitech Wireless Presenter R400 User Manual

Related Documents - 910-001354



Logitech R400 Laser Presentation Remote Setup Guide

Concise setup guide and features overview for the Logitech R400 Laser Presentation Remote, including troubleshooting tips and product specifications.



Logitech R500 Laser Presentation Remote - User Guide and Specifications

Detailed information on the Logitech R500 Laser Presentation Remote, including features, benefits, specifications, and compatibility for seamless presentations.



Logitech Spotlight Presentation Remote: Getting Started Guide & Software Overview

Comprehensive guide to setting up and using the Logitech Spotlight Presentation Remote, including software installation, connection methods (USB & Bluetooth), product features, and the Lite version.



Logitech R400 Presenter Disassembly Guide

Step-by-step instructions for disassembling the Logitech R400 Presenter, detailing necessary tools and procedures to access internal components and troubleshoot issues like a misaligned laser diode.



Logitech Laser Presentation Remote Setup Guide and Features

Official setup guide for the Logitech Laser Presentation Remote. Learn about its features, troubleshooting steps, and how to set it up for presentations.



Logitech G102 | G203 LIGHTSYNC Gaming Mouse Setup Guide

A comprehensive setup guide for the Logitech G102 and G203 LIGHTSYNC gaming mice, detailing installation, button programming, and LIGHTSYNC RGB customization.