

[Manuals.plus](#) /

› [VTech](#) /

› VTech Disney Bounce Time Turtle 80-106303 Instruction Manual

VTech 80-106303

VTech Disney Bounce Time Turtle 80-106303 Instruction Manual

Model: 80-106303

INTRODUCTION

The VTech Disney Bounce Time Turtle is an interactive toy designed to engage children in active play and learning. This manual provides essential information for the safe and proper setup, operation, and maintenance of your Bounce Time Turtle.

PRODUCT OVERVIEW

Key Features

- Bounce and colors theme for engaging play.
- Two modes of play: Music and Learning, teaching shapes, numbers 1-3, and colors.
- Motion sensor activated by bouncing, rewarding movement.
- Includes two sing-along songs and seven melodies.
- Designed to build confidence and encourage movement in young children.

Components



Figure 1: The VTech Disney Bounce Time Turtle, showing its green turtle body, orange handle with light-up buttons, and yellow base.



Figure 2: Rear view of the product packaging, highlighting features such as the handle, light-up buttons, bouncing seat, and feet, along with learning benefits.

SETUP

Battery Installation

1. Locate the battery compartment, typically on the underside of the toy.
2. Using a screwdriver, open the battery compartment cover.
3. Insert the required AA batteries (included) into the compartment, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.

Note: Batteries are required and included. Always use fresh batteries of the specified type.

Assembly

This product does not require assembly. It is ready for use after battery installation.

OPERATING INSTRUCTIONS

Power On/Off

- Locate the On/Off switch, usually on the base or side of the turtle.
- Slide the switch to the "On" position to activate the toy.
- Slide the switch to the "Off" position to conserve battery life when not in use.

Play Modes

The Bounce Time Turtle features two interactive play modes:

- **Music Mode:** In this mode, the toy plays various melodies and sing-along songs as the child bounces.
- **Learning Mode:** This mode focuses on teaching colors, shapes, and numbers (1-3) through interactive phrases and sounds triggered by bouncing.

To switch between modes, refer to the specific button or switch indicated on the toy itself, often near the handle or control panel.

Interaction



Figure 3: A child demonstrating the bouncing action on the VTech Disney Bounce Time Turtle.

- Encourage the child to sit on the turtle's back and hold onto the handle.
- The toy's motion sensor will detect bouncing movements.
- Bouncing will activate sounds, music, and learning phrases, providing auditory feedback and encouraging continued play.
- Press the light-up buttons on the handle to trigger additional sounds and phrases related to colors, shapes, or numbers, depending on the selected mode.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the toy with a slightly damp cloth. Do not immerse in water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight. Remove batteries if the toy will not be used for an extended period to prevent leakage.
- **Battery Replacement:** Replace batteries when sounds become faint or the lights dim.

TROUBLESHOOTING

Problem	Solution
Toy does not turn on or respond.	Ensure the On/Off switch is in the "On" position. Check battery installation for correct polarity. Replace with fresh AA batteries.
Sounds are faint or distorted.	Replace with fresh AA batteries.
Motion sensor is not responding.	Ensure the child is bouncing with sufficient movement. Check battery level and replace if low.

SPECIFICATIONS

Model Number:	80-106303
Brand:	VTech
Manufacturer:	Vtech Disney
Recommended Age:	18 months - 3 years
Maximum Weight Recommendation:	20 Kilograms
Product Dimensions (LxWxH):	50.8 x 15.2 x 40 cm
Item Weight:	2 kg
Material Type(s):	Foam, Plastic
Batteries Required:	Yes
Batteries Included:	Yes
Battery Type(s):	AA

Assembly Required:	No
Portable:	Yes
UPC:	705235378008

WARRANTY AND SUPPORT

VTech products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty policy provided at the time of purchase or visit the official VTech website. For technical support or customer service inquiries, please contact VTech customer support through their official channels.

SAFETY INFORMATION

- Adult supervision is required at all times when a child is using this toy.
- Ensure the toy is placed on a flat, stable surface during use.
- Do not exceed the maximum weight recommendation of 20 kilograms.
- Regularly inspect the toy for any damage or loose parts. Discontinue use if any damage is found.
- Keep batteries out of reach of children. Dispose of used batteries responsibly.
- This toy is intended for children aged 18 months to 3 years.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

