

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm Finepix A170 Digital Camera Instruction Manual

Fujifilm FinePix A170

Fujifilm Finepix A170 Digital Camera Instruction Manual

Model: FinePix A170

Brand: Fujifilm

1. PRODUCT OVERVIEW

The Fujifilm Finepix A170 is a compact 10.2-megapixel digital camera designed for ease of use and portability. It features a 3x optical zoom lens developed by Fujinon, a 2.7-inch LCD screen, and intelligent shooting modes like SR Auto for automatic scene recognition. Its slim design makes it ideal for everyday photography.



Front view of the Fujifilm Finepix A170 Digital Camera, highlighting its compact design and lens.

2. KEY FEATURES

The Finepix A170 incorporates several features to enhance your photography experience:

- **10-megapixel resolution:** Captures high-quality images suitable for printing and digital display.
- **3x optical zoom:** Allows you to get closer to your subjects without sacrificing image quality.
- **SR Auto Mode:** Automatically recognizes 6 different scene types (Portrait, Landscape, Night, Macro, Night Portrait, Backlit Portrait) and optimizes camera settings for the best shot.
- **Panorama mode:** Enables easy creation of panoramic photos by stitching consecutive shots.
- **Picture Stabilization/Anti-blur Mode:** Automatically corrects for camera shake and subject blur, ensuring sharper images.
- **2.7-inch, 230k-pixel resolution LCD:** Provides a clear view for framing shots and reviewing images.
- **Micro Thumbnail View:** Allows viewing up to 100 pictures at once for quick navigation.
- **AA Battery Powered:** Offers convenience with readily available AA alkaline batteries.



The Fujifilm Finepix A170, showcasing its compact and user-friendly design.

3. WHAT'S IN THE BOX

Upon opening your Fujifilm Finepix A170 package, you should find the following items:

- Fujifilm Finepix A170 Digital Camera
- AA type alkaline batteries (x2)
- Hand Strap
- USB cable
- FinePix software (CD-ROM)
- Owner's manual (CD-ROM)
- User's Guide

4. INITIAL SETUP

4.1. Battery Installation

The Finepix A170 uses two AA alkaline batteries. To install them:

1. Locate the battery compartment cover on the side or bottom of the camera.
2. Slide the latch to open the cover.

3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals are aligned correctly according to the diagram inside the compartment.
4. Close the battery compartment cover firmly until it clicks into place.



Side profile of the camera, indicating the location for battery and memory card access.

4.2. Memory Card Insertion

The camera supports SD/SDHC memory cards (not included). To insert a memory card:

1. Open the battery/memory card compartment cover.
2. Gently slide the memory card into the slot with the label facing the correct direction (usually towards the front of the camera) until it clicks.
3. Close the compartment cover.

5. OPERATING THE CAMERA

5.1. Powering On/Off

Press the **ON/OFF** button located on the top of the camera to turn it on or off. The lens will extend when powered on.



Top view of the camera, highlighting the power button and shutter release.

5.2. Taking Photos

To take a picture, frame your subject using the LCD screen, then gently press the shutter button halfway down to focus. Once focus is achieved (indicated by a green frame), press the shutter button all the way down to capture the image.

5.3. SR Auto Mode (Automatic Scene Recognition)

In SR Auto mode, the camera automatically detects the scene type and adjusts settings for optimal results. Simply point and shoot, and the camera will do the rest.

5.4. Panorama Mode

Select Panorama mode from the shooting menu. Follow the on-screen prompts to take consecutive shots (left-to-right or right-to-left). The camera will automatically stitch these images together to create a single panoramic photo. *For best results, use a tripod or monopod.*

5.5. Picture Stabilization/Anti-blur Mode

This mode automatically activates to minimize blur caused by camera shake or subject movement, especially in low light conditions or when using zoom.

5.6. Using the LCD Screen and Controls

The 2.7-inch LCD screen serves as your viewfinder and playback display. Use the directional pad and menu buttons on the back of the camera to navigate menus, change settings, and review your photos.



Rear view of the camera, displaying the LCD screen and control layout for easy navigation.

5.7. Playback and Micro Thumbnail View

Press the playback button to view your captured images. Use the zoom lever to zoom in on photos or zoom out to the Micro Thumbnail View, which displays up to 100 images in a 10x10 grid for quick browsing.

6. MAINTENANCE

6.1. Cleaning the Camera

- **Camera Body:** Wipe with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water and then dry thoroughly.
- **Lens:** Use a lens brush or a blower to remove dust. For smudges, use a lens cleaning cloth specifically designed for optical surfaces. *Do not use abrasive cleaners or solvents.*
- **LCD Screen:** Gently wipe with a soft, dry cloth. Avoid pressing too hard.

6.2. Battery Care

- Remove batteries if the camera will not be used for an extended period to prevent leakage.
- Store batteries in a cool, dry place.
- Dispose of depleted batteries according to local regulations.

7. TROUBLESHOOTING

If you encounter issues with your Finepix A170, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Camera does not turn on.	Batteries are depleted or incorrectly inserted.	Replace with fresh AA batteries, ensuring correct polarity.
Images are blurry.	Camera shake, subject movement, or out of focus.	Hold the camera steady, use Picture Stabilization mode, or ensure the camera focuses before pressing the shutter fully.
No images can be saved.	Memory card is full, locked, or not inserted correctly.	Delete unwanted images, unlock the memory card (check the small switch on the side), or reinsert the card.
Flash does not fire.	Flash is set to OFF or batteries are low.	Check flash settings in the menu; replace batteries if low.

If the problem persists, please refer to the full owner's manual on the included CD-ROM or contact Fujifilm customer support.

8. TECHNICAL SPECIFICATIONS

Below are the detailed specifications for the Fujifilm Finepix A170 Digital Camera:

Specification	Value
Product Dimensions	3.7 x 0.9 x 2.4 inches
Item Weight	5 ounces
ASIN	B002HEWA1E
Item model number	FinePix A170
Date First Available	July 21, 2009
Manufacturer	Fujifilm
Language	English
Compatible Mountings	Fujifilm X
Aspect Ratio	1.33:1
Photo Sensor Technology	CCD
Supported File Format	JPEG
Image Stabilization	Optical
Maximum Focal Length	96 Millimeters
Optical Zoom	3 x
Expanded ISO Minimum	100
Metering Description	Multi, Center-weighted, Spot
Brand	Fujifilm

9. WARRANTY AND SUPPORT

9.1. Warranty Information

Specific warranty details for the Fujifilm Finepix A170 are not provided within this document. Please refer to the warranty card included with your product or visit the official Fujifilm website for the most current and detailed warranty information applicable to your region.

9.2. Customer Support

For further assistance, technical support, or service inquiries, please visit the official Fujifilm support website or contact their customer service department. Contact information can typically be found on the Fujifilm website or in the full owner's manual.

10. OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available in the provided information for the Fujifilm Finepix A170 Digital Camera.

© 2023 Fujifilm. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

