

Hormann EL101

Hormann EL101 436294 Light Barrier Instruction Manual

Model: EL101 | Part Number: 436294

1. INTRODUCTION

This manual provides essential information for the safe and correct installation, operation, and maintenance of the Hormann EL101 436294 Light Barrier. This device is designed as a safety component for automatic gate and garage door systems, detecting obstructions in the path of the door or gate to prevent accidents. Please read this manual thoroughly before installation and keep it for future reference.

2. SAFETY INSTRUCTIONS

- Installation must be performed by qualified personnel in accordance with local electrical codes and regulations.
- Disconnect power to the gate or garage door opener before beginning any installation or maintenance work.
- Ensure all wiring connections are secure and properly insulated to prevent short circuits or electrical hazards.
- Do not modify the light barrier components. Use only original Hormann replacement parts.
- Regularly test the functionality of the light barrier after installation and during routine maintenance.

3. PACKAGE CONTENTS

Verify that all components listed below are present in your package:

- 2 x Light Barrier Units (Transmitter and Receiver)
- 2 x Connecting Cables (10m each, 2-wired)
- 2 x Mounting Brackets
- Assorted Screws and Fasteners



Image 1: Overview of the Hormann EL101 Light Barrier kit, showing two light barrier units, two rolls of connecting cable, two mounting brackets, and various screws and fasteners for installation.

4. SPECIFICATIONS

Feature	Specification
Model	EL101
Part Number	436294
Dimensions (W x H x D)	30 x 90 x 25 mm (approx. 1.18 x 3.54 x 0.98 inches)
Connecting Cable	2 x 10 m Round Cable, 2-wired
Type of Protection	IP21
Material	Kunststoff (Plastic)
Item Weight	Approx. 1.1 pounds (0.5 kg)

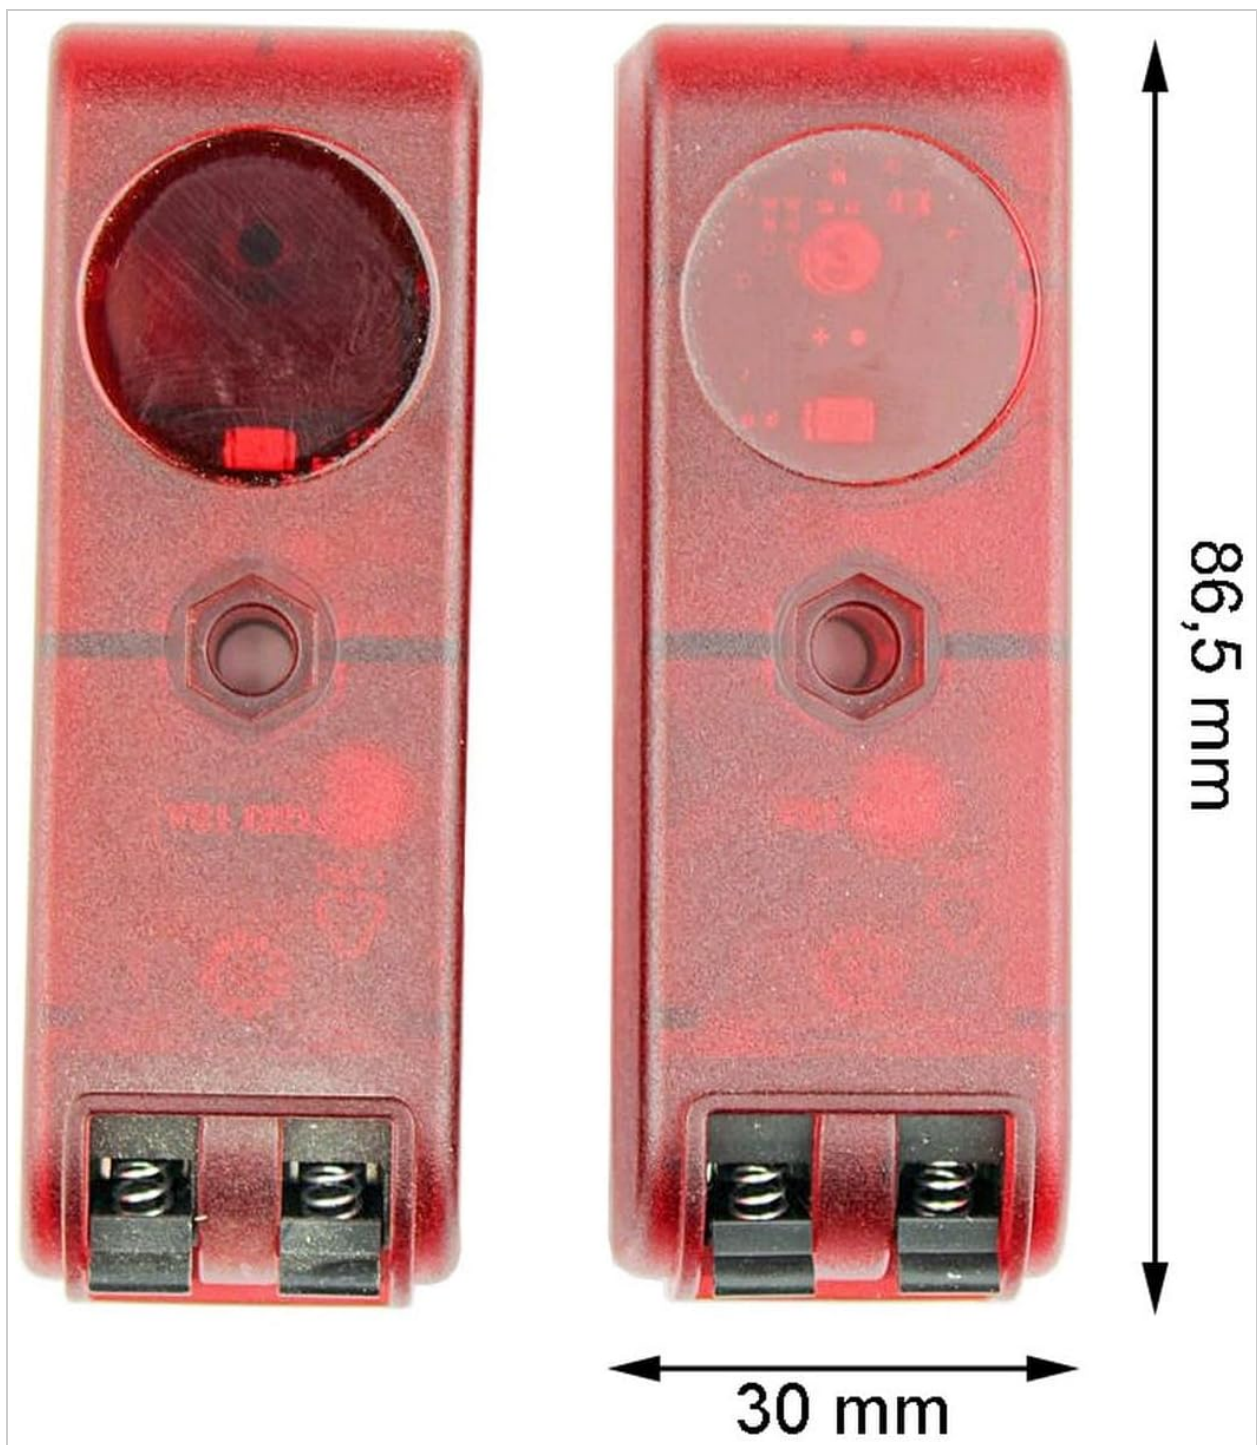 


Image 2: Detailed view of the Hormann EL101 Light Barrier unit, illustrating its dimensions: 86.5 mm in length and 30 mm in width.

5. SETUP AND INSTALLATION

Follow these steps for proper installation of the light barrier:

1. **Mounting:** Install the transmitter and receiver units on opposite sides of the garage door or gate opening. Ensure they are securely fastened using the provided mounting brackets and hardware. The units should be mounted at a height that allows for detection of obstructions, typically 6-8 inches (15-20 cm) from the ground.
2. **Wiring:** Connect the 2-wired cables from each light barrier unit to the corresponding terminals on your garage door or gate opener control board. Refer to your opener's manual for specific wiring diagrams. Ensure correct polarity if specified.
3. **Alignment:** Align the transmitter and receiver units so that the infrared beam is unobstructed and directly

hits the receiver. Many units have an indicator light that illuminates when proper alignment is achieved. Adjust the position of the units until the indicator light is steady.

4. **Testing:** After installation and alignment, test the light barrier by activating the garage door or gate. While the door/gate is closing, interrupt the beam with an object (e.g., a box). The door/gate should immediately stop and reverse direction.
5. **Important Note for Existing Openers:** If you are retrofitting this light barrier to an existing garage door opener, it may be necessary to retrain the opener's safety system. For many Hormann openers, this involves accessing a specific menu (e.g., menu 10) and allowing the door to complete several open/close cycles (typically 3). This process ensures the opener recognizes and integrates the new safety sensor. Failure to retrain may result in the opener ignoring the sensor, even if it is electrically functional.

6. OPERATION

Once properly installed and aligned, the Hormann EL101 Light Barrier operates automatically. When the garage door or gate is closing, the transmitter emits an infrared beam towards the receiver. If an object or person breaks this beam, the receiver signals the opener to immediately stop and reverse the door/gate movement, preventing potential injury or damage.

7. MAINTENANCE

To ensure continued reliable operation of your light barrier, perform the following maintenance tasks:

- **Cleaning:** Periodically clean the lenses of both the transmitter and receiver units with a soft, damp cloth. Dust, dirt, or spiderwebs can obstruct the beam and cause false detections.
- **Inspection:** Regularly check the mounting brackets and wiring for any signs of damage, corrosion, or loose connections. Ensure the units remain securely mounted and properly aligned.
- **Function Test:** Perform a function test at least once a month by interrupting the beam while the door/gate is closing. The door/gate must stop and reverse. If it does not, refer to the troubleshooting section.

8. TROUBLESHOOTING

If your light barrier is not functioning correctly, consider the following common issues and solutions:

- **Door/Gate does not close or reverses immediately:**
 - Check for obstructions in the beam path.
 - Ensure the transmitter and receiver are properly aligned. Clean the lenses if dirty.
 - Verify wiring connections are secure and correct.
 - Check if the opener needs retraining (refer to Section 5, point 5).
- **Indicator light is off or flashing:**
 - No power to the unit: Check power supply and wiring.
 - Misalignment: Re-align the units until the light is steady.
 - Damaged cable: Inspect cables for cuts or breaks.

If problems persist after troubleshooting, contact Hormann customer support or a qualified technician.

9. WARRANTY AND SUPPORT

 
 
The Hormann EL101 436294 Light Barrier is covered by the manufacturer's standard warranty. Please refer to


the warranty documentation provided with your product or visit the official Hormann website for detailed warranty terms and conditions.

For technical assistance, spare parts, or further inquiries, please contact Hormann customer support:


- **Manufacturer:** Hormann
- **Website:** www.hoermann.com (Please check for regional websites for specific contact information)

Related Documents - EL101

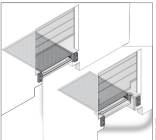 Sektionálne garážové brány HÖRMANN LPU 67 Thermo - kompletná riešená brána 	Sektionálne garážové brány Hörmann: Kvalita, dizajn a energetická účinnosť Preskúmajte prémiové sektionálne garážové brány od spoločnosti Hörmann, vrátane energeticky úspornej novinky LPU 67 Thermo. Objavte širokú škálu dizajnov, povrchových úprav a technických riešení pre váš domov.
 Reklamering för lastbrygga, HTL2 och underhåll 	HÖRMANN HTL2 ISO Lastbrygga: Bruksanvisning för Montering, Drift och Underhåll En komplett guide för HÖRMANN HTL2 ISO lastbrygga, som täcker installation, säker användning och underhållsprocedurer för optimal prestanda och säkerhet.
 Anleitung für Montage und Betrieb Instructions for fitting and operating Bruksanvisning för montering och drift Instructions de montage et d'exploitation Anleitung für Montage und Betrieb Hormann EL 71-B Einweg-Lichtschränke 	Hormann EL 71-B Einweg-Lichtschränke Montage- und Betriebsanleitung Diese Anleitung bietet detaillierte Informationen zur Montage, Installation und zum Betrieb der Hormann EL 71-B Einweg-Lichtschränke. Sie richtet sich an Benutzer, die eine sichere und zuverlässige Lösung für die Torautomatisierung suchen.
 Anleitung für Montage LED-Lichtstreifen Instructions for fitting LED lighting strips Bruksanvisning för montering av LED-ljusbänder Instructions de montage des bandes lumineuses à LED Anleitung für Montage LED-Lichtstreifen Hormann SH 50/SH 100 	HÖRMANN Barrier SH 50/SH 100 LED Lighting Strip Installation Guide Comprehensive guide for installing HÖRMANN LED lighting strips on SH 50 and SH 100 barriers. Includes safety instructions, technical specifications, and step-by-step fitting procedures to enhance barrier visibility.
 Anleitung für Montage Instructions for fitting Bruksanvisning för montering Instructions de montage Anleitung für Montage Hormann WLAN-Gateway 	HORMANN WLAN-Gateway: Smart Home Control & Automation Guide Get started with the HORMANN WLAN-Gateway. This brief guide provides essential information on setup, safety, and technical specifications for seamless smart home integration and control of your doors and barriers.

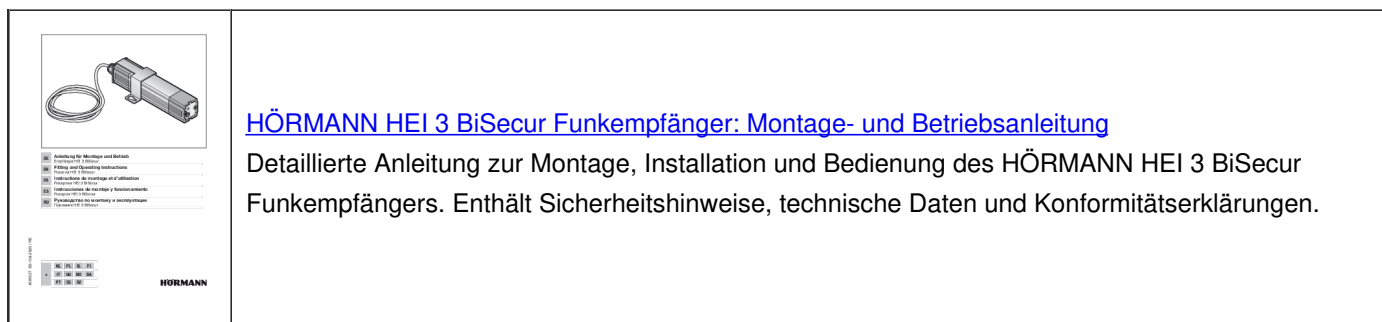 


Documents - Hormann – EL101

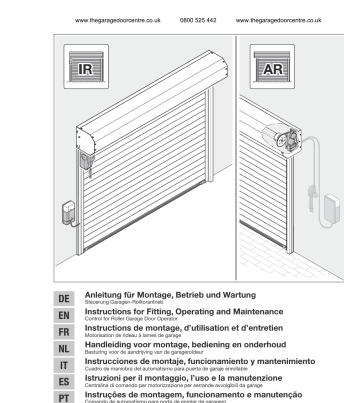 

[pdf] Instructions

Template BA B168xH238 KE COMMUNICATION Hormann Rollmatic Operator Fitting Instructions These instructions are original operating as outlined in the EC Directive 2006 42 Read through all of carefully Hormann Instruction thegaragedoorcentre co uk userfiles Instructions ||| www.thegaragedoorcentre.co.uk 0800 525 442 www.thegaragedoorcentre.co.uk TR10A073-B RE / 02.2012 ... liday function, see Figure 7.2 . 3.3.4 Connection for 2-wire photocell * 2-wire photocells e.g. **EL101**, EL301 which are used as safety photocells and to monitor the automatic timer must be connect... lang:it score:28 filesize: 5.02 M page_count: 25 document date: 2012-09-06

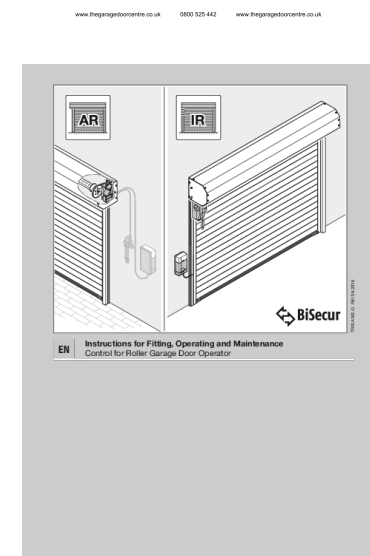 

[pdf] User Manual Instructions

Template BA B168xH238 KE COMMUNICATION Hörmann UK 24 apr 2023 — Fitting instructions for roller garage door The enclosed test manual 1 2 Warnings used general warning symbol indicates a danger that TR10A162 D Rolltorantrieb BiSecur hormann co uk media centre 188765lv ||| EN Instructions for Fitting, Operating and Maintenance Control for Roller Garage Door Operator TR1 ... liday function, see Figure 7.2 . 3.3.4 Connection for 2-wire photocell * 2-wire photocells e.g. **EL101**, EL301 which are used as safety photocells and to monitor the automatic timer must be connect... lang:en score:26 filesize: 4.75 M page_count: 28 document date: 2016-07-13




[pdf] Instructions

Template BA B168xH238 KE COMMUNICATION Hormann Rollmatic Operator Fitting Instructions
thegaragedoorcentre co uk |||

www.thegaragedoorcentre.co.uk 0800 525 442 www.thegaragedoorcentre.co.uk
TR10A073-B RE / 02.2012 ... liday function, see Figure 7.2 . 3.3.4 Connection for 2-
wire photocell * 2-wire photocells e.g. **EL101**, EL301 which are used as safety
photocells and to monitor the automatic timer must be connect...

 lang:it **score:26** filesize: 5.02 M page_count: 25 document date: 2012-09-06

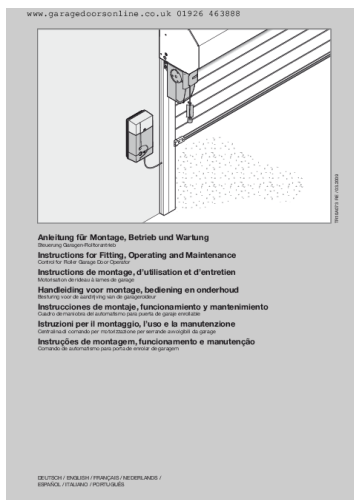


[pdf] User Manual Instructions

Template BA B168xH238 KE COMMUNICATION Hormann Rollmatic Operator Installation Manual
garagedoorsonline co uk |||

TR10A073 RE / 03.2009 www.garagedoorsonline.co.uk 01926 463888 Anleitung fr
Montage, Betrieb und Wa ... uf den voreingestellten Wert 30 Sekunden gesetzt. 4 .3
.3 DIL-Schalter 4 Lichtschranke z .B . **EL101**, EL301 4 ON aktiviert, nach Auslsen der
lichtschranke reversiert das Tor bis in die Endlage...

 lang:it **score:22** filesize: 3.42 M page_count: 83 document date: 2009-03-24

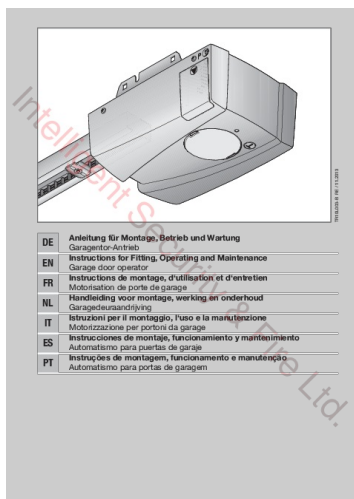

[pdf] User Manual Instructions

Template BA B168xH238 KE COMMUNICATION Hormann Ecostar LIFTRONIC 500 Manual HORMANN
Automatic Gates User Manuals ISF Watermark intelligentsecurity org resources gates |||

TR10L003-B RE / 11.2013 Intelligent Sec DE Anleitung fr Montage, Betrieb und
Wartung Garagentor-An ... 433 MHz codice rolling 24 V AC/DC o 230/240 V AC
Uscita rel: On/Off Fotocellula unidirezionale **EL101** Per l'impiego all'interno come
dispositivo di sicurezza supplementare. Incluso cavo di collega...

lang:de **score:19** filesize: 14.9 M page_count: 132 document date: 2013-11-07



[pdf] Instructions

Template BA B168xH238 KE COMMUNICATION DE Anleitung für Montage Betrieb und Wartung EN FR
NL IT TR10A073 B RE 02 2012 Steuerung Garagen Rolllortantrieb Instructions for Fitting Operating and
Maintenance Control Roller Garage Door Operator de montage d utilisation et entretien Motorisation
rideau à lames garage Hormann Rollmatic Operators garagedoorsonline co uk |||

www.garagedoorsonline.co.uk 01926 463888 TR10A073-B RE / 02.2012 DE

Anleitung fr Montage, Betrie ... liday function, see Figure 7.2 . 3.3.4 Connection for 2-
wire photocell * 2-wire photocells e.g. **EL101**, EL301 which are used as safety
photocells and to monitor the automatic timer must be connect...

lang:it **score:18** filesize: 5.24 M page_count: 26 document date: 2018-02-12