

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Oral-B](#) /

› [Oral-B Pro 100 Precision Clean Battery Powered Electric Toothbrush User Manual](#)

## Oral-B Pro 100

# Oral-B Pro 100 Precision Clean Battery Powered Electric Toothbrush User Manual

[Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

[Introduction](#) [Safety Information](#) [Package](#)

## 1. INTRODUCTION

This manual provides instructions for the safe and effective use of your Oral-B Pro 100 Precision Clean Battery Powered Electric Toothbrush. This toothbrush is designed to provide a thorough cleaning experience, removing more plaque than a manual toothbrush.



Figure 1: Oral-B Pro 100 Precision Clean Electric Toothbrush and Packaging

This image displays the Oral-B Pro 100 Precision Clean electric toothbrush alongside its retail packaging. The toothbrush features a white handle with a blue power button and a round brush head. The packaging highlights key features such as "Precision Clean" and "battery powered".

## 2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this product. Keep this manual for future reference.

- **DO NOT USE ON CHILDREN UNDER AGE 3.**
- REPLACE BRUSH HEAD EVERY 3 MONTHS OR SOONER IF BRUSH HEAD BECOMES WORN.
- Ensure batteries are inserted correctly according to polarity markings.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product is not used for an extended period to prevent leakage.
- Do not immerse the handle in water.

### 3. PACKAGE CONTENTS

---

Your Oral-B Pro 100 Precision Clean Electric Toothbrush package should contain the following items:

- 1 Oral-B Pro 100 Toothbrush Handle
- 1 Oral-B Precision Clean Brush Head
- 2 AA Batteries



Figure 2: Toothbrush Handle and Included Batteries

This image shows the Oral-B Pro 100 electric toothbrush handle next to two AA batteries, indicating they are included for immediate use.

### 4. SETUP

---

#### 4.1. Battery Installation

1. Twist the bottom cap of the toothbrush handle counter-clockwise and pull it off.

2. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the battery compartment.
3. Replace the bottom cap by aligning it and twisting clockwise until secure.

## 4.2. Attaching the Brush Head

1. Align the brush head with the shaft on the toothbrush handle.
2. Push the brush head down firmly until it clicks into place.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. First Use

Before first use, ensure the brush head is securely attached and batteries are installed. It is recommended to rinse the brush head under water.

### 5.2. Brushing Your Teeth

1. Wet the brush head and apply a small amount of toothpaste.
2. Place the brush head against your teeth at a slight angle towards the gumline.
3. Press the power button to turn on the toothbrush.
4. Guide the brush head slowly from tooth to tooth, allowing it to clean each tooth surface. Do not scrub vigorously.
5. Brush each quadrant of your mouth (upper right, upper left, lower right, lower left) for 30 seconds.
6. The toothbrush features a 2-minute timer to assist with recommended brushing time.
7. After brushing, press the power button again to turn off the toothbrush.

# SUPERIOR PLAQUE REMOVAL\*



Figure 3: Superior Plaque Removal Action

This image illustrates the rotating and oscillating action of the Precision Clean brush head, demonstrating its effectiveness in removing plaque from tooth surfaces and along the gumline.



Figure 4: Integrated 2-Minute Timer

This image highlights the 2-minute timer feature on the Oral-B Pro 100 toothbrush handle, designed to help users brush for the dentist-recommended duration.

## 6. MAINTENANCE

---

### 6.1. Cleaning After Use

1. After each use, rinse the brush head thoroughly under running water with the toothbrush turned on.
2. Turn off the toothbrush and remove the brush head.
3. Rinse both the brush head and the handle separately under running water.
4. Wipe the handle dry with a cloth.
5. Store the toothbrush in an upright position to allow it to air dry.

### 6.2. Brush Head Replacement

For optimal performance and hygiene, replace your Oral-B brush head every 3 months, or sooner if the bristles become

worn or frayed. Worn bristles are less effective at cleaning teeth.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toothbrush does not turn on or has weak power.	Dead or low batteries. Incorrect battery installation.	Replace with fresh AA batteries. Ensure batteries are inserted with correct polarity.
Brush head does not rotate or vibrates weakly.	Brush head not properly attached. Worn brush head.	Remove and re-attach the brush head firmly. Replace the brush head if it is old or damaged.
Timer function is inconsistent or stops prematurely.	Low battery power.	Replace with fresh AA batteries. The timer relies on consistent power.

## 8. SPECIFICATIONS

- **Model:** Oral-B Pro 100 Precision Clean
- **Power Source:** 2 x AA Batteries (1.5V each)
- **Dimensions:** 1.5 x 1.5 x 9.45 inches
- **Weight:** 5.3 ounces (without batteries)
- **Special Feature:** Brushing Timer (2 minutes)
- **Brush Head Type:** Rotating
- **Item Model Number:** 10069055854904
- **UPC:** 069055854907

## 9. SUPPORT AND CONTACT INFORMATION

For further assistance, questions, or to inquire about replacement parts, please contact the manufacturer:

**Manufacturer:** Procter & Gamble - HABA Hub

**Address:** P&G Plaza, Cincinnati, OH 45202

You may also visit the official Oral-B website for more information: [www.oralb.com](http://www.oralb.com)

