

[manuals.plus](#) /› [Braun](#) /› **Braun Hand Blender + Chopper MR 370 User Manual****Braun MR370**

# Braun Hand Blender + Chopper MR 370 User Manual

Model: MR370

## INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Braun Hand Blender + Chopper MR 370. Please read all instructions carefully before operating the appliance and retain this manual for future reference. The Braun MR 370 is designed for blending, chopping, mixing, and pureeing various food items in your kitchen.

# BRAUN

# Handblender

+ Chopper/Hachoir/Picadora



Blends  
Mélange  
Mezcla



Whips  
Fouette  
Bate



Chops  
Hache  
Pica



*Image: Braun Hand Blender + Chopper MR 370 product packaging, illustrating its versatility for blending, whipping, and chopping tasks.*

## SETUP AND ASSEMBLY

Before first use, ensure all packaging materials are removed. Clean all parts that will come into contact with food according to the 'Maintenance and Cleaning' section.

## Components:

- Hand Blender Motor Unit
- Blender Shaft
- Chopper Attachment (bowl, blade, lid)

## Assembly:

1. **Attaching the Blender Shaft:** Align the blender shaft with the motor unit and twist until it locks securely into place.
2. **Attaching the Chopper:** Place the chopper blade onto the central pin inside the chopper bowl. Add ingredients to the bowl. Place the chopper lid onto the bowl, ensuring it is properly seated. Then, attach the motor unit to the chopper lid, twisting until it locks.



Includes special attachment for whipping

Comprend un accessoire spécial pour la préparation de la crème fouettée et de lait écrémé fouettée  
Incluye disco batidor

new  
nouveau  
nuevo

*Image: The Braun Hand Blender + Chopper MR 370 disassembled, showing the main blending unit and the chopper attachment with its bowl and blade.*

## OPERATING INSTRUCTIONS

Always ensure the appliance is unplugged before assembling or disassembling parts. Do not immerse the motor unit in water.

### Using the Hand Blender:

1. Attach the blender shaft to the motor unit.
2. Immerse the blender shaft into the ingredients in a pot or suitable container. Ensure the liquid level is below the connection point of the shaft and motor unit.
3. Plug the appliance into a power outlet.
4. Press and hold the power button to operate. Release the button to stop.
5. Move the blender gently up and down and in circles to ensure even blending.
6. Once blending is complete, release the button and unplug the appliance before removing it from the food.



*Image: The Braun Hand Blender MR 370 being used to blend ingredients directly within a cooking pot, demonstrating its immersion capability.*

## Using the Chopper Attachment:

1. Place the chopper blade in the chopper bowl.
2. Add ingredients to the chopper bowl. Do not overfill.
3. Secure the chopper lid and attach the motor unit.
4. Plug the appliance into a power outlet.
5. Press and hold the power button in short pulses for chopping. For finer results, continue pulsing.
6. Release the button and unplug the appliance before disassembling and removing chopped ingredients.

---

## MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your appliance.

### Cleaning:

- **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water or other liquids.
- **Blender Shaft and Chopper Parts:** These parts can be rinsed under running water immediately after use. For thorough cleaning, they are generally dishwasher-safe (refer to specific product instructions if available, otherwise hand wash is recommended).
- **Blades:** Handle blades with extreme care as they are very sharp.



*Image: The blender shaft of the Braun Hand Blender MR 370 being cleaned under running water, illustrating the ease of post-use maintenance.*

#### **Storage:**

Store the appliance and its attachments in a dry, safe place, out of reach of children.

---

#### **TROUBLESHOOTING**

If you encounter issues with your Braun Hand Blender + Chopper MR 370, refer to the following common problems

and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; motor unit not properly attached.	Ensure the appliance is securely plugged into a working outlet. Check if the motor unit is correctly locked onto the attachment.
Poor blending/chopping performance.	Too much food; ingredients too large; dull blade.	Reduce the quantity of ingredients. Cut larger ingredients into smaller pieces. Ensure the blade is clean and free of debris.
Appliance stops during operation.	Overheating; motor overload.	Unplug the appliance and allow it to cool down for at least 30 minutes. Reduce the load or processing time.

## SPECIFICATIONS

Key technical specifications for the Braun Hand Blender + Chopper MR 370:

- **Brand:** Braun
- **Model:** MR370
- **Power Source:** Corded Electric
- **Voltage:** 240 Volts
- **Material:** Stainless Steel (blades), Plastic (housing)
- **Controls Type:** Push Button
- **Included Components:** Chopper
- **Item Weight:** 3.1 pounds
- **Package Dimensions:** 13.3 x 8.6 x 4 inches

## WARRANTY INFORMATION

This Braun Hand Blender + Chopper MR 370 is covered by a warranty. The specific terms may be a limited or full warranty. Please refer to the warranty card included with your product or contact Braun customer service for detailed information regarding coverage, duration, and claims procedures.

## CUSTOMER SUPPORT

For further assistance, spare parts, or service, please contact Braun customer support. Contact information can typically be found on the Braun official website or on the product packaging.

You may also visit the official Braun store on Amazon for product information and support resources:[Braun Store](#)

## Related Documents - MR370

	<p><b><a href="#">Braun MultiQuick 5 Vario Hand Blender User Manual</a></b></p> <p>User manual for the Braun MultiQuick 5 Vario hand blender (Type 4191). This guide covers setup, operation, care, and troubleshooting for the hand blender, spiralizer, chopper, and Smoothie2Go accessories. Features include variable speed and turbo functions.</p>
	<p><b><a href="#">Braun MultiQuick 5 Vario Hand Blender User Manual and Instructions</a></b></p> <p>This user manual provides detailed instructions for operating the Braun MultiQuick 5 Vario hand blender, including information on its various accessories like choppers, puree accessory, whisk, and food processor. It covers setup, usage guidelines, troubleshooting, and care instructions.</p>
	<p><b><a href="#">Braun MultiQuick 5 Vario Hand Blender MQ 5064 User Manual</a></b></p> <p>Comprehensive user manual for the Braun MultiQuick 5 Vario Hand Blender MQ 5064, covering safety precautions, parts and accessories, operating instructions, and troubleshooting.</p>
	<p><b><a href="#">Braun Multiquick 7 MQ 775 Hand Blender User Manual</a></b></p> <p>Detailed user manual for the Braun Multiquick 7 MQ 775 hand blender (Type 4199). Learn about its features like Smartspeed technology, how to use the hand blender, whisk, chopper, and dough kneading attachments. Includes safety instructions, cleaning tips, and accessory information.</p>
	<p><b><a href="#">Braun Multiquick/Minipimer MR 4000 Hand Blender User Manual</a></b></p> <p>User manual for the Braun Multiquick/Minipimer MR 4000 hand blender (Type 4162). Includes safety instructions, operating guide, cleaning tips, accessory details (CA-4000, HC-4000, WH-4000), and warranty information for this 450W kitchen appliance.</p>
	<p><b><a href="#">Braun MultiQuick 3 Vario Hand Blender User Manual</a></b></p> <p>Comprehensive user manual for the Braun MultiQuick 3 Vario hand blender (Type 4193), detailing parts, accessories, usage instructions, safety precautions, and troubleshooting.</p>

