

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [SEIKO](#) /

> [Seiko Wall Pendulum Clock QXH041BLH Instruction Manual](#)

SEIKO QXH041BLH

Seiko Wall Pendulum Clock QXH041BLH Instruction Manual

Model: QXH041BLH

INTRODUCTION

Thank you for purchasing the Seiko Wall Pendulum Clock, Model QXH041BLH. This clock features a classic design with Westminster and Whittington chimes, a pendulum, and a dark brown case. This manual provides detailed instructions for the proper setup, operation, and maintenance of your clock to ensure long-lasting enjoyment and accurate timekeeping.

IMPORTANT SAFETY INFORMATION

- Always handle the clock with care to prevent damage to the glass crystal and internal mechanisms.
- Keep the clock away from direct sunlight, extreme temperatures, and high humidity to avoid discoloration or malfunction.
- Do not attempt to disassemble or repair the clock yourself. Refer to the troubleshooting section or contact customer support for assistance.
- Dispose of used batteries responsibly according to local regulations.

PACKAGE CONTENTS

Please check that all items are present in the package:

- Seiko Wall Pendulum Clock (Model QXH041BLH)
- Pendulum
- One 'C' Battery
- Instruction Manual (this document)

SETUP INSTRUCTIONS

1. Battery Installation

1. Carefully open the battery compartment cover located on the back of the clock.
2. Insert the included 'C' battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.

2. Setting the Time

1. Locate the time setting knob on the back of the clock mechanism.
2. Gently turn the knob clockwise to advance the minute hand to the correct time. Do not turn counter-clockwise.
3. Allow the clock to run for a few minutes to ensure proper operation.

3. Installing the Pendulum

1. Unpack the pendulum carefully.
2. Locate the pendulum hook inside the clock case, usually at the bottom of the movement.
3. Gently hang the pendulum onto the hook. Ensure it swings freely.

4. Mounting the Clock

The clock is designed for wall mounting. Use appropriate hardware (not included) for your wall type to ensure secure installation.

- Choose a sturdy location on a wall, away from vibrations or drafts.
- Install a screw or hook into the wall, ensuring it can support the clock's weight (approximately 5.75 pounds).
- Hang the clock securely using the mounting slot on the back.





Image: Front view of the Seiko Wall Pendulum Clock, showcasing its dark brown case, glass crystal, and pendulum.

OPERATING YOUR CLOCK

1. Chime Selection

Your Seiko Wall Pendulum Clock offers two classic chime melodies: Westminster and Whittington. A selector switch is located on the back or side of the clock mechanism.

- **Westminster Chime:** Plays a melody every quarter hour and strikes the hour.
- **Whittington Chime:** Plays a different melody every quarter hour and strikes the hour.

Move the switch to your desired chime setting.

2. Volume Control

The clock features a volume control knob, typically located near the chime selector switch. Turn the knob to adjust the chime volume to your preference.

3. Nighttime Chime Silencer

For uninterrupted sleep, the clock includes a nighttime chime silencer feature. This function automatically silences the chimes during specific hours (e.g., 11:00 PM to 5:45 AM). Refer to the markings near the chime controls for the exact silencing period. Ensure the chime function is enabled for this feature to operate.

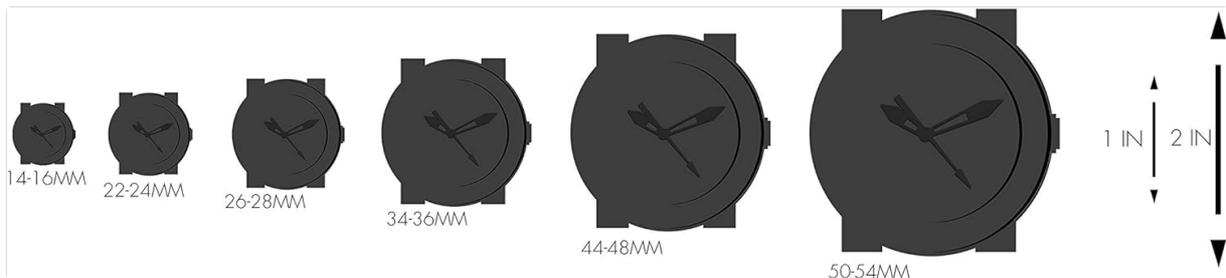


Image: Side view of the Seiko Wall Pendulum Clock, showing the depth and dark brown finish.

MAINTENANCE

1. Battery Replacement

When the clock's timekeeping becomes erratic, the chimes weaken, or the clock stops, it is time to replace the battery. Follow the battery installation steps in the Setup section. Always use a fresh 'C' battery.

2. Cleaning

- Wipe the clock case with a soft, dry cloth. Do not use abrasive cleaners or chemical sprays, as these can damage the finish.
- For the glass crystal, use a soft, lint-free cloth and a mild glass cleaner if necessary, applied to the cloth first, not directly to the clock.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clock stops or runs slowly.	Weak battery.	Replace with a fresh 'C' battery.
Chimes are not sounding.	Chime function turned off; volume too low; nighttime silencer active; weak battery.	Check chime selector switch; increase volume; verify time for nighttime silencer; replace battery.
Pendulum is not swinging.	Pendulum not properly installed or obstructed.	Ensure pendulum is correctly hooked and swings freely without touching the case.

SPECIFICATIONS

- **Model:** QXH041BLH
- **Brand:** SEIKO
- **Case Color:** Dark Brown
- **Display Type:** Analog
- **Power Source:** 1 x 'C' Battery (included)
- **Chimes:** Westminster / Whittington (Quarter-hour chime, hourly strikes)
- **Features:** Volume control, Nighttime chime silencer, Pendulum
- **Case Material:** Wood
- **Frame Material:** Glass
- **Dial Color:** Beige
- **Mounting Type:** Wall Mount
- **Approximate Dimensions:** 24" (Height) x 10" (Width) x 3" (Depth)
- **Item Weight:** 5.75 pounds

WARRANTY INFORMATION

This product is covered by a manufacturer's warranty. For specific details regarding warranty coverage, duration, and claims, please refer to the warranty documentation included with your purchase or contact the seller of record. Please retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with setup, or encounter issues not covered in this manual, please contact the retailer where you purchased the clock or visit the official Seiko website for support resources.

