

[Manuals.plus](#) /

› [HP](#) /

› HP LaserJet P3015dn Printer User Manual

HP P3015dn

HP LaserJet P3015dn Printer User Manual

MODEL: P3015DN (CE528A)

Introduction

The HP LaserJet P3015dn Printer is designed for fast, high-performance printing with advanced security features. This printer is suitable for office environments and can be expanded to meet evolving business needs through its open EIO slot, open memory slot, two internal accessory ports for HP and partner solutions, and optional paper trays.

Key Features:

- 250-sheet top output bin
- Intuitive control panel with four-line LCD display, 10-number key pad, and Show-Me-How menu
- 100-sheet multipurpose tray for various special papers
- Includes one 500-sheet input tray and one 100-sheet input tray
- 128 MB memory, expandable to 640 MB, with a 540 MHz processor



Front view of the HP LaserJet P3015dn Printer, showcasing its compact design and control panel.

Setup

Before operating the printer, ensure it is properly set up. This involves connecting the power cable, installing the toner cartridge, and loading paper into the trays. Initial configuration may be required via the control panel or a connected computer.

Initial Connections:

1. **Power Connection:** Connect the power cord to the printer and a grounded electrical outlet.
2. **Data Connection:** Connect the printer to your computer or network using a USB cable or an Ethernet cable for network printing. The printer supports both wired (USB 2.0) and wireless connectivity options.
3. **Toner Cartridge Installation:** Open the front access door and insert the toner cartridge according to the instructions provided with the cartridge.
4. **Paper Loading:** Load paper into the main input tray (Tray 2) or the multipurpose tray (Tray 1). Adjust the paper guides to fit the paper size.

User Perspective on Setup:

The following video provides a user's perspective on the HP LaserJet P3015 printer, including insights into its setup process. While not an official HP guide, it offers practical advice from an experienced user.



User review video titled "Good printer for the office but difficult to initially setup" for the HP LaserJet P3015. This video discusses the printer's performance and potential setup challenges from a user's viewpoint.

Operating Instructions

The HP LaserJet P3015dn is designed for straightforward operation. Use the control panel for direct printer management or send print jobs from a connected computer.

Control Panel Overview:

The printer features an intuitive control panel with a four-line LCD display and a 10-number keypad. This panel allows you to navigate menus, check printer status, and access the 'Show-Me-How' menu for on-screen assistance.



Close-up of the HP LaserJet P3015dn control panel, showing the LCD display and keypad for printer operation.

Loading Paper:

The printer supports various media types and sizes through its multiple trays.

- **Tray 1 (Multipurpose Tray):** Located on the front, this 100-sheet tray handles envelopes, labels, plain paper, and transparencies. Open the tray, load the media, and adjust guides.
- **Tray 2 (Main Input Tray):** This 500-sheet tray is for standard paper. Pull out the tray, load the paper stack, and push the tray back in.
- **Optional Trays:** Additional 500-sheet trays can be added for increased capacity.

Duplex Printing:

The P3015dn supports automatic duplex (two-sided) printing. This feature can be enabled through your printer driver settings on your computer, allowing for efficient paper usage.

Product Overview Video:

For a general overview of the HP LaserJet P3015 printer's features and functionality, consider watching this user-generated video. It provides a visual tour of the printer's components and capabilities.



User review video titled "Watch This Before Buying The HP P3015". This video offers a comprehensive look at the printer's physical aspects and general operation.

Maintenance

Regular maintenance ensures optimal performance and longevity of your HP LaserJet P3015dn printer.

Toner Cartridge Replacement:

When the toner level is low, the printer's control panel will display a message. To replace the toner cartridge:

1. Open the front access door of the printer.
2. Remove the old toner cartridge by pulling it straight out.
3. Unpack the new HP Original toner cartridge and gently shake it to distribute the toner.
4. Insert the new cartridge into the printer until it clicks into place.
5. Close the front access door.

Note: Use only Original HP printer ink and toner cartridges for dependable performance and consistent page yields.

Cleaning:

Periodically clean the printer to prevent dust and toner buildup. Use a lint-free cloth to wipe the exterior. For internal cleaning, refer to the 'Show-Me-How' menu on the control panel or the full service manual for specific instructions on cleaning the paper path.

Troubleshooting

This section addresses common issues you might encounter with your HP LaserJet P3015dn printer.

Paper Jams:

If a paper jam occurs, the control panel will display an error message indicating the location of the jam. Follow the on-screen instructions or these general steps:

1. Turn off the printer and unplug it from the power source.
2. Open all accessible covers and trays.
3. Gently pull out any jammed paper, ensuring no torn pieces remain inside.
4. Close all covers and trays, then plug in and power on the printer.

Driver Issues:

Outdated or incorrect printer drivers can cause printing problems. Ensure you have the latest drivers installed from the official HP support website. If issues persist, try reinstalling the printer drivers.

Print Quality Problems:

If print quality is poor (e.g., streaks, faded text), check the toner cartridge level. You may also need to perform a cleaning cycle through the printer's control panel or replace the toner cartridge.

Specifications

Feature	Detail
Brand	HP
Model Name	CE528A
Printing Technology	Laser
Connectivity Technology	Wireless; USB
Printer Output	Monochrome
Max Print Speed Monochrome	42 ppm
Maximum Print Resolution B&W	600 dpi
Duplex Printing	Automatic
Memory	128 MB (expandable to 640 MB)
Processor Speed	540 MHz
Input Trays	100-sheet multipurpose tray, 500-sheet input tray (Total 3 trays, max 1600 sheets with optional trays)
Output Capacity	250 sheets
Supported Media Sizes	3 x 5 inch (minimum), various standard sizes
Supported Media Types	Envelopes, Labels, Paper (plain), Transparencies
Display Type	LCD
Item Weight	35 Pounds
Power Consumption	780 Watts

Warranty and Support

The HP LaserJet P3015dn Printer comes with a limited warranty. For detailed information regarding warranty terms, conditions, and duration, please refer to the documentation included with your product or visit the official HP support website.

For technical assistance, driver downloads, or further troubleshooting, please contact HP Customer Support or visit their online support portal. Ensure you have your printer's model number (CE528A) and serial number ready when seeking support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B002JE7FBW>

More documents and user manuals: **<https://manuals.plus/>**