

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kohler](#) /

› [KOHLER K-1035350-BN Premier Drain Installation and Care Manual](#)

### Kohler K-1035350-BN

## KOHLER K-1035350-BN Premier Drain INSTALLATION AND CARE MANUAL

Model: K-1035350-BN | Brand: Kohler

### Introduction

This manual provides instructions for the installation, operation, and maintenance of your KOHLER K-1035350-BN Premier drain. This genuine Kohler part features a Vibrant Brushed Nickel finish and is designed for bathroom sinks with an overflow. Adhering to these instructions will ensure proper function and longevity of your product.





Image 1: Complete KOHLER K-1035350-BN Premier Drain Assembly.

## Product Components

The KOHLER K-1035350-BN Premier drain assembly includes the following main components:

- Drain body with overflow opening
- Upper flange and stopper assembly
- Tailpiece
- Pop-up rod and linkage
- Gaskets and nuts for sealing





Image 2: Disassembled view of the drain body, stopper, and pop-up rod.



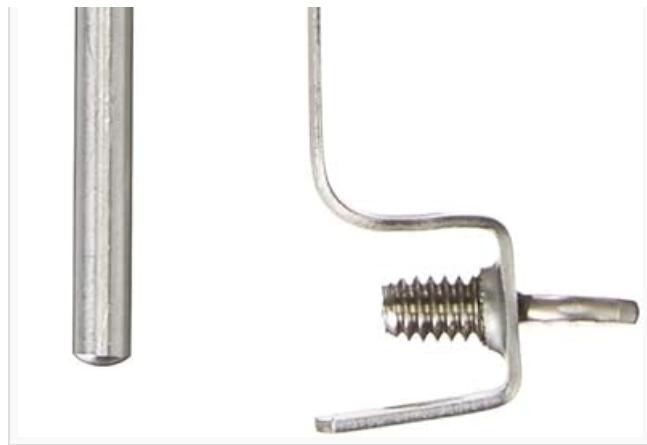


Image 3: Detailed view of the pop-up rod and its connecting linkage.

## Installation Instructions

Installation of plumbing fixtures requires basic plumbing knowledge. If you are unsure about any steps, it is recommended to consult a qualified plumber. Ensure all necessary tools and materials are available before beginning.

- 1. Preparation:** Turn off the water supply to the sink. Remove the old drain assembly if present. Clean the sink drain opening thoroughly to ensure a proper seal.
- 2. Apply Sealant:** Apply a bead of plumber's putty or silicone sealant around the underside of the drain flange.
- 3. Position Drain:** Insert the drain flange into the sink drain opening from above. Ensure the overflow opening on the drain body aligns with the sink's overflow channel.
- 4. Secure Drain Body:** From underneath the sink, place the rubber gasket, friction washer, and mounting nut onto the drain body. Hand-tighten the nut, then use a wrench to secure it firmly, but do not overtighten. Wipe away any excess sealant from the sink basin.
- 5. Connect Tailpiece:** Attach the tailpiece to the bottom of the drain body. Ensure a watertight seal using appropriate washers and nuts.
- 6. Install Pop-up Linkage:** Insert the pop-up rod into the drain body's side opening. Connect the horizontal rod to the stopper mechanism inside the drain. Adjust the linkage to ensure the stopper opens and closes properly.
- 7. Test for Leaks:** Turn on the water supply and fill the sink. Check for any leaks around the drain assembly and connections. Tighten connections as necessary.

## Operating Instructions

The KOHLER K-1035350-BN Premier drain features a pop-up stopper mechanism. To operate:

- To Close the Drain:** Push down on the pop-up rod, typically located behind the faucet. This action will lower the stopper, sealing the drain opening and allowing the sink to hold water.
- To Open the Drain:** Pull up on the pop-up rod. This action will raise the stopper, allowing water to drain freely from the sink.



Image 4: Close-up view of the drain stopper in the Vibrant Brushed Nickel finish.

## Maintenance and Care

Proper care will help maintain the Vibrant Brushed Nickel finish and ensure the longevity of your drain.

- **Regular Cleaning:** Clean the drain and stopper regularly with a soft, damp cloth and mild soap. Rinse thoroughly with clean water and dry immediately with a soft, non-abrasive cloth to prevent water spots.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, scouring pads, steel wool, or chemical-based

cleaning agents (including those containing ammonia, bleach, or acids), as these can permanently damage the finish.

- **Clear Blockages:** If the drain flow becomes slow, remove the stopper and clear any accumulated hair or debris. Avoid using harsh chemical drain cleaners, which can harm plumbing components and finishes.

## Troubleshooting

Issue	Possible Cause	Solution
Slow Draining	Debris (hair, soap scum) accumulated around the stopper or inside the drain body.	Remove the stopper and clean any obstructions. Ensure the pop-up linkage is not impeding flow.
Stopper Not Sealing	Pop-up linkage is misaligned or damaged; stopper is not seating correctly.	Adjust the pop-up rod and linkage to ensure the stopper fully lowers and creates a seal. Check the stopper for any damage or debris preventing a proper seal.
Leaks Around Drain	Improperly tightened nuts, damaged gaskets, or insufficient sealant during installation.	Tighten all nuts securely. If leaks persist, disassemble, inspect gaskets for damage, reapply plumber's putty or silicone sealant, and reassemble.

## Specifications

Key specifications for the KOHLER K-1035350-BN Premier drain:

**Model Number:** K-1035350-BN

**Part Number:** 1035350-BN

**Material:** Metal

**Finish:** Vibrant Brushed Nickel

**Drain Type:** Bathroom sink drain with overflow

**Included Components:** Premier Drain with Overflow

## Genuine KOHLER Parts & Support

This product is a genuine KOHLER part, designed and engineered to meet Kohler's stringent quality standards. Using genuine parts ensures optimal performance, durability, and compatibility with your Kohler fixtures.



Image 5: Banner highlighting KOHLER Genuine Parts.

Genuine KOHLER parts are certified to meet all codes and standards, made with quality materials, assure optimal performance, and protect the warranty of the product.

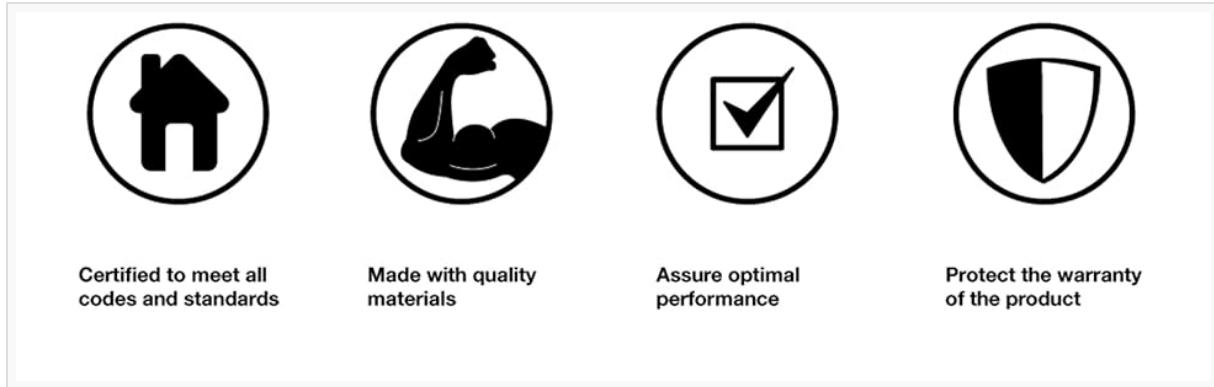


Image 6: Icons illustrating the benefits of using KOHLER Genuine Parts.

For further assistance, replacement parts, or warranty information, please visit [the official Kohler Store](#) or contact Kohler customer support directly.

© 2026 Kohler Co. All rights reserved.