

Visual Land VL-G4

Visual Land VL-G4 Portable Media Player User Manual

Model: VL-G4

1. INTRODUCTION

Product Overview

The Visual Land VL-G4 is a compact and versatile portable media player designed for on-the-go entertainment. It features a 1.8-inch screen, 4GB of internal storage, and supports various media formats. This device allows you to enjoy your favorite music, videos, and images, along with additional functionalities such as an FM radio and a voice recorder.

Key features include:

- 4 GB storage capacity, sufficient for approximately 4,000 songs.
- Up to 6 hours of audio playback on a single charge.
- 1.8-inch color LCD display for media viewing.
- Supports MP3, WMA, and WAV audio formats; AMV video format; JPG image format.
- Integrated FM radio tuner.
- Built-in voice recorder.
- Functions as a USB flash memory drive for data storage.
- Built-in speaker for shared listening.



MENU



VOL

This manual provides detailed instructions for setting up, operating, and maintaining your VL-G4 device to ensure optimal performance and user experience.

2. SETUP

2.1 Package Contents

Before you begin, please verify that all items are present in the package:

- Visual Land VL-G4 Media Player
- Earphones
- AC Adapter
- USB Cable
- User's Manual (this document)

2.2 Charging the Device

The VL-G4 is equipped with an internal lithium-ion battery. Before initial use, fully charge the device.

1. Connect the small end of the USB cable to the USB port on the bottom of the VL-G4.
2. Connect the large end of the USB cable to the AC adapter.
3. Plug the AC adapter into a standard wall outlet.
4. The device will indicate charging status on its screen. A full charge typically takes approximately 2-3 hours.
5. Alternatively, you can connect the USB cable directly to a powered USB port on your computer for charging.



Figure 2: Bottom of VL-G4 with USB Port

2.3 Loading Media Files

To transfer music, videos, or images to your VL-G4:

1. Ensure the device is powered on.
2. Connect the VL-G4 to your computer using the provided USB cable.
3. Your computer should recognize the VL-G4 as a removable disk drive.
4. Open the VL-G4 drive on your computer. You can create folders (e.g., 'Music', 'Videos', 'Photos') to organize your files.
5. Drag and drop your desired MP3, WMA, WAV, AMV, or JPG files into the appropriate folders on the VL-G4 drive.
6. Once file transfer is complete, safely eject the VL-G4 drive from your computer before disconnecting the USB cable.

Note: For video playback, AMV format is supported. You may need to convert other video formats using the included software (if applicable) or third-party conversion tools.

3. OPERATING INSTRUCTIONS

3.1 Device Layout and Controls

Familiarize yourself with the buttons and ports on your VL-G4:



Figure 3: VL-G4 Device Diagram with Labeled Components

- **Power Switch:** Located on the top edge, slides to turn the device On or Off.
- **1.8-inch Screen:** Displays menus, media content, and device status.
- **5-Way Navigational Pad:** Central control for menu navigation and media playback.
 - **MENU button (Top):** Accesses the main menu or returns to the previous screen.
 - **Left/Right buttons:** Navigate through menus, skip tracks, fast forward/rewind.
 - **Play/Pause/Confirm button (Center):** Starts/pauses playback, confirms selections.
 - **VOL button (Bottom):** Enters volume adjustment mode. Use Left/Right to change volume.
- **Speaker:** Built-in speaker for audio output without earphones.
- **USB Port:** For charging and connecting to a computer.
- **Headphone Jack:** 3.5mm port for connecting earphones.
- **MIC:** Built-in microphone for voice recording.

3.2 Power On/Off

To power on the device, slide the Power Switch to the 'On' position. To power off, slide it to the 'Off' position.

3.3 Basic Navigation

From the main menu, use the Left/Right buttons on the navigational pad to scroll through options. Press the central Play/Pause/Confirm button to select an option. Press the MENU button to go back to the previous screen or the main menu.

3.4 Audio Playback (MP3/WMA/WAV)

1. From the main menu, select 'Music' or 'Audio'.
2. Navigate through your folders and files using the Left/Right buttons.
3. Press the central Play/Pause/Confirm button to start playback of a selected track.
4. During playback:
 - Press Play/Pause/Confirm to pause/resume.
 - Press Left/Right briefly to skip to the previous/next track.
 - Press and hold Left/Right to fast forward/rewind within a track.
 - Press the VOL button, then use Left/Right to adjust the volume. Press VOL again to exit volume mode.
5. The device offers EQ presets (Natural, Rock, Pop, Classical, Soft, Jazz, DBB) which can typically be accessed through the music playback options menu.

3.5 Video Playback (AMV)

1. From the main menu, select 'Video'.
2. Navigate to your desired AMV video file.
3. Press the central Play/Pause/Confirm button to begin playback.
4. Playback controls are similar to audio playback.



Figure 4: VL-G4 Displaying a Video

3.6 Image Viewing (JPG)

1. From the main menu, select 'Photos' or 'Images'.
2. Navigate to your JPG image files.
3. Press the central Play/Pause/Confirm button to view an image.
4. Use Left/Right buttons to cycle through images.
5. Some models may offer a slideshow function, typically accessible via the options menu during image viewing.

3.7 FM Radio

1. Connect earphones to the headphone jack; they act as the antenna for the FM radio.

2. From the main menu, select 'FM Radio'.
3. Use the Left/Right buttons to manually tune frequencies.
4. Look for an 'Autoscan' or 'Search' option within the FM radio menu to automatically find and save available stations.

3.8 Voice Recorder

1. From the main menu, select 'Recorder' or 'Voice'.
2. Select 'Start Recording' or a similar option. The built-in microphone (MIC) will capture audio.
3. Press Play/Pause/Confirm to stop recording.
4. Recordings are typically saved in a dedicated folder and can be played back from the 'Audio' or 'Recorder' menu.

3.9 Using as a USB Drive

When connected to a computer, the VL-G4 functions as a standard USB mass storage device. You can drag and drop any file type onto it, making it useful for carrying documents or other data in addition to media files.

4. MAINTENANCE

4.1 Cleaning

To clean your VL-G4, use a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or solvents, as these can damage the device's finish or internal components.

4.2 Battery Care

- Avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in use, to maintain battery health.
- Do not expose the device to extreme temperatures, as this can degrade battery performance and lifespan.

4.3 Storage

When storing the device for extended periods, ensure it is partially charged (around 50%) and kept in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you encounter issues with your VL-G4, refer to the following common problems and solutions:

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect to the AC adapter and try again. Check the power switch position.
No sound from earphones/speaker.	Check volume level. Ensure earphones are properly plugged in. Test with different earphones. Verify media file is not corrupted.
Computer does not recognize the device.	Ensure the device is powered on. Try a different USB port or cable. Restart your computer.

Problem	Possible Solution
Files are not playing.	Verify the file format is supported (MP3/WMA/WAV for audio, AMV for video, JPG for images). Ensure files are not corrupted.
Short battery life.	Ensure the device is fully charged. Reduce screen brightness. Close unused applications. Battery performance may degrade over time with usage.

6. SPECIFICATIONS

Feature	Detail
Model Number	VL-G4
Memory Storage Capacity	4 GB
Screen Size	1.8 Inches (Note: Product description states 1.8-inch, specifications list 2.4 inches. Using 1.8-inch as per detailed description.)
Supported Audio Formats	MP3, WMA, WAV
Supported Video Formats	AMV
Supported Image Formats	JPG
Special Features	FM Radio, Video Playback, Voice Recorder, Built-in Speaker
Connectivity Technology	USB
Battery Life (Audio)	Up to 6 Hours
Product Dimensions	1.6 x 0.34 x 3.6 inches
Item Weight	1.28 ounces

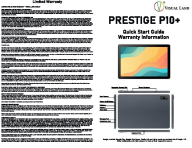


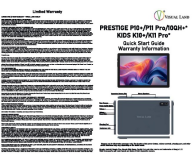

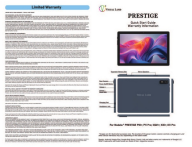
7. WARRANTY INFORMATION

The Visual Land VL-G4 Portable Media Player comes with a one-year limited warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

8. CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please refer to the contact information provided on the Visual Land official website or the original product packaging. When contacting support, please have your product model number (VL-G4) and proof of purchase readily available.

Related Documents - VL-G4

	<p>Visual Land Prestige P10+ Limited Warranty and FCC Information</p> <p>Detailed limited warranty information for the Visual Land Prestige P10+ tablet, including coverage, limitations, user responsibilities, service options, and FCC compliance details.</p>
	<p>Visual Land SOUNDWAVE A1 ANC Earbuds: Quick Start Guide and Warranty Information</p> <p>Get started with your Visual Land SOUNDWAVE A1 ANC Earbuds. This guide provides essential safety information, product operation instructions, smart touch controls, and details on the limited one-year warranty.</p>
	<p>Visual Land Prestige Pro 7D Reset Button Replacement Guide</p> <p>Step-by-step instructions for replacing the reset button on a Visual Land Prestige Pro 7D tablet, including necessary tools and procedures for repair.</p>
	<p>Visual Land Prestige P10+/P11 Pro/10QH+ Kids K10+/K11 Pro Quick Start Guide and Warranty Information</p> <p>This document provides a quick start guide and warranty information for Visual Land Prestige P10+/P11 Pro/10QH+ and Kids K10+/K11 Pro tablets. It covers charging instructions, Google Kids Space setup, general setup procedures, troubleshooting, and FCC compliance.</p>
	<p>Visual Land SOUNDWAVE A1 Essential Earbuds: Quick Start Guide, Warranty, and Safety Information</p> <p>Comprehensive guide for Visual Land SOUNDWAVE A1 Essential ANC earbuds, covering setup, operation, music/call controls, voice assistant, safety precautions, and the limited one-year warranty.</p>
	<p>Visual Land Prestige Tablet Limited Warranty and Quick Start Information</p> <p>Detailed warranty information and quick start guide for Visual Land Prestige tablets, covering terms, conditions, user responsibilities, and regulatory compliance.</p>