

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Whitmor](#) /

› [Whitmor 3-Section Laundry Sorter Instruction Manual \(Model 6705-569\)](#)

## Whitmor 6705-569

# Whitmor 3-Section Laundry Sorter

Model: 6705-569

Instruction Manual

## INTRODUCTION

Thank you for choosing the Whitmor 3-Section Laundry Sorter. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new laundry sorter. Please read these instructions carefully before use and retain them for future reference.

## SAFETY INFORMATION

- Ensure all parts are securely assembled before use to prevent instability.
- Do not overload the sorter beyond its intended capacity. Overloading may cause damage to the frame or bags.
- Keep hands and fingers clear of moving parts, especially during folding and unfolding.
- This product is designed for household laundry sorting and transportation. Do not use it for purposes other than its intended use.
- Keep away from open flames or excessive heat sources.

## PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Epoxy-coated steel frame (collapsible)
- 3-Section natural canvas sorter bag
- Four heavy-duty wheels (two with locking mechanisms)
- Assembly hardware (if applicable, typically no tools required)

## SETUP AND ASSEMBLY

The Whitmor 3-Section Laundry Sorter is designed for easy, tool-free assembly. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Unfold the Frame:** Gently unfold the epoxy-coated steel frame until it forms a stable rectangular

structure. Ensure all locking mechanisms (if present) click into place.

3. **Attach Wheels:** Insert the four heavy-duty wheels into the designated slots at the bottom of the frame legs. Push firmly until they are securely seated. Two of the wheels include locking mechanisms for stability.
4. **Install Sorter Bag:** Drape the 3-section natural canvas sorter bag over the top bars of the frame. Ensure the bag is evenly distributed and securely attached to the frame, typically by loops or sleeves integrated into the bag. The bottom of the bag should rest on the lower support bars of the frame to prevent tearing from laundry weight.



*Figure 1: Front view of the assembled laundry sorter.*





*Figure 2: Back view of the laundry sorter, illustrating the frame structure.*



*Figure 3: Detail of the frame and how the canvas bag attaches.*

## OPERATING INSTRUCTIONS

Using your Whitmor 3-Section Laundry Sorter is straightforward:

- **Sorting Laundry:** Utilize the three distinct sections of the canvas bag to pre-sort your laundry. Common sorting categories include lights, darks, delicates, or items requiring dry cleaning.
- **Mobility:** The four heavy-duty wheels allow for easy movement across various floor surfaces, including carpeted, tile, and hardwood.
- **Locking Wheels:** To keep the sorter stationary, engage the locking mechanisms on the two designated wheels. Push down on the lever to lock and lift to unlock.
- **Collapsible Design:** When not in use or for storage, the sorter can be folded flat. To do this, remove the canvas bag, then carefully collapse the steel frame.



Figure 4: Laundry sorter in use within a laundry room.

## MAINTENANCE

Regular maintenance ensures the longevity of your laundry sorter:

- **Cleaning the Canvas Bag:** The natural canvas sorter bag is washable. It can be removed from the frame and machine washed with similar colors on a gentle cycle. Air dry or tumble dry on low heat. Ensure the bag is completely dry before reattaching to the frame.
- **Cleaning the Frame:** Wipe the epoxy-coated steel frame with a damp cloth and mild detergent as needed. Avoid abrasive cleaners that could damage the finish.
- **Wheel Maintenance:** Periodically check the wheels for lint, hair, or debris that may hinder smooth movement. Clean as necessary.
- **Inspection:** Regularly inspect all connections and parts for any signs of wear or damage. Tighten any loose connections.

## TROUBLESHOOTING

If you encounter issues with your laundry sorter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Sorter is unstable or wobbly.	Frame not fully extended or connections loose.	Ensure the frame is fully unfolded and all assembly points are secure. Check that wheels are firmly inserted.
Wheels do not roll smoothly.	Debris caught in wheels or wheels are locked.	Clear any lint or debris from the wheel casters. Ensure locking mechanisms are disengaged.
Canvas bag appears to be tearing.	Overloading or improper installation.	Avoid overloading the bag. Ensure the bag's bottom rests on the frame's lower support bars to distribute weight.

## SPECIFICATIONS

- **Product Dimensions (Assembled):** 34" L x 19" W x 30" H
- **Material:** Canvas, Iron, Plastic
- **Color:** White
- **Number of Compartments:** 3
- **Item Weight:** Approximately 6.2 pounds
- **Special Features:** Collapsible design, Portable, Washable bag, Heavy-duty wheels (two with locks)
- **Model Number:** 6705-569

## WARRANTY INFORMATION

This Whitmor product comes with a limited warranty on parts. For specific details regarding warranty coverage and claims, please contact Whitmor Customer Service.

## CUSTOMER SUPPORT

For assistance, questions, or to report any issues with your Whitmor 3-Section Laundry Sorter, please contact Whitmor Customer Service:

- **Phone:** 1-888-944-8667
- **Hours:** Monday through Friday, 8:00 AM - 4:30 PM CST
- Assistance is available in English and Spanish.